

LENNOX HEAT PUMPS

CAT#	DESCRIPTION	Unit
10HP12		
58326	CAPACITOR-START(3 1)	10HP12
26H98	COIL-SOLENOID(3 1)	10HP12
47J27	CONTROL-TIMED OFF(3 1)	10HP12
51H69	VALVE-REVERSING(3 1)	10HP12
52J67	MOTOR-FAN(3)	10HP12
53H22	CAPACITOR-FAN&RUN(3 1)	10HP12
58H66	RELAY-POTENTIAL(3 1)	10HP12
65C69	CONTACTOR-COMPR(3 1)	10HP12
69H62	COMPRESSOR(3 1)	10HP12
69H63	VALVE-SERVICE(3 1)	10HP12
72H73	MOTOR-FAN(1)	10HP12
72H89	VALVE-SERVICE(3 1)	10HP12
74H70	SWITCH-HI PRESS(3 1)	10HP12
78H09	VALVE-EXPANSION(3 1)	10HP12
78H11	THERMOSTAT(3 1)	10HP12
78H68	TIMER-DEFROST(3 1)	10HP12
10HP18		
HEATINGANDAIRPARTS.COM		
58326	CAPACITOR-START(3 1)	10HP18
58327	RELAY-POTENTIAL(3 1)	10HP18
26H98	COIL-SOLENOID(3 1)	10HP18
47J27	CONTROL-TIMED OFF(3 1)	10HP18
51H69	VALVE-REVERSING(3 1)	10HP18
52J67	MOTOR-FAN(3)	10HP18
53H27	CAPACITOR-RUN(3 1)	10HP18
65C69	CONTACTOR-COMPR(3 1)	10HP18
65G81	VALVE-EXPANSION(3 1)	10HP18
69H63	VALVE-SERVICE(3 1)	10HP18
72H73	MOTOR-FAN(1)	10HP18
72H90	VALVE-SERVICE(3 1)	10HP18
74H70	SWITCH-HI PRESS(3 1)	10HP18
78H11	THERMOSTAT(3 1)	10HP18
78H24	COMPRESSOR(3 1)	10HP18
78H68	TIMER-DEFROST(3 1)	10HP18
10HP24		
58326	CAPACITOR-START(3 1)	10HP24
58327	RELAY-POTENTIAL(3 1)	10HP24
26H98	COIL-SOLENOID(3 1)	10HP24
47J27	CONTROL-TIMED OFF(3 1)	10HP24

CAT#	DESCRIPTION	Unit
51H69	VALVE-REVERSING(3 1)	10HP24
52J67	MOTOR-FAN(3)	10HP24
53H27	CAPACITOR-RUN(3 1)	10HP24
65C69	CONTACTOR-COMPR(3 1)	10HP24
65G58	VALVE-EXPANSION(3 1)	10HP24
69H63	VALVE-SERVICE(3 1)	10HP24
72H73	MOTOR-FAN(1)	10HP24
72H90	VALVE-SERVICE(3 1)	10HP24
74H70	SWITCH-HI PRESS(3 1)	10HP24
78H11	THERMOSTAT(3 1)	10HP24
78H25	COMPRESSOR(3 1)	10HP24
78H68	TIMER-DEFROST(3 1)	10HP24
	10HP30	
58327	RELAY-POTENTIAL(1)	10HP30
67101	RELAY-POTENTIAL(3 2)	10HP30
22J00	COMPRESSOR(3 2)	10HP30
26H95	VALVE-REVERSING(3 2 1)	10HP30
26H98	COIL-SOLENOID(3 2 1)	10HP30
44A93	CAPACITOR-START(3 2)	10HP30
47A60	CAPACITOR-START(1)	10HP30
47J27	CONTROL-TIMED OFF(3 2 1)	10HP30
52J67	MOTOR-FAN(3)	10HP30
53H27	CAPACITOR-RUN(3 2)	10HP30
53H29	CAPACITOR-FAN&RUN(1)	10HP30
65C69	CONTACTOR-COMPR(3 2 1)	10HP30
65G58	VALVE-EXPANSION(3 2 1)	10HP30
69H63	VALVE-SERVICE(3 2 1)	10HP30
72H73	MOTOR-FAN(2 1)	10HP30
72H91	VALVE-SERVICE(3 2 1)	10HP30
74H70	SWITCH-HI PRESS(3 2 1)	10HP30
78H11	THERMOSTAT(3 2 1)	10HP30
78H26	COMPRESSOR(1)	10HP30
78H68	TIMER-DEFROST(3 2 1)	10HP30
	10HP36	
58326	CAPACITOR-START(3 1)	10HP36
58327	RELAY-POTENTIAL(1)	10HP36
67101	RELAY-POTENTIAL(3)	10HP36
13B01	RELAY-POTENTIAL(3 1)	10HP36
21J55	COMPRESSOR(3 1)	10HP36
26H95	VALVE-REVERSING(4 3 1)	10HP36
26H98	COIL-SOLENOID(4 3 1)	10HP36
44A93	CAPACITOR-START(3)	10HP36
47A60	CAPACITOR-START(1)	10HP36

CAT#	DESCRIPTION	Unit
47J27	CONTROL-TIMED OFF(4 3 1)	10HP36
52J67	MOTOR-FAN(4 3)	10HP36
53H25	CAPACITOR-FAN&RUN(4)	10HP36
53H27	CAPACITOR-RUN(3)	10HP36
53H29	CAPACITOR-FAN&RUN(1)	10HP36
53J78	COMPRESSOR(4)	10HP36
65C69	CONTACTOR-COMPR(4 3 1)	10HP36
65G57	VALVE-EXPANSION(4 3 1)	10HP36
69H63	VALVE-SERVICE(4 3 1)	10HP36
72H72	CAPACITOR-START(4)	10HP36
72H73	MOTOR-FAN(1)	10HP36
72H91	VALVE-SERVICE(4 3 1)	10HP36
74H70	SWITCH-HI PRESS(4 3 1)	10HP36
78H11	THERMOSTAT(4 3 1)	10HP36
78H28	COMPRESSOR(3 1)	10HP36
78H68	TIMER-DEFROST(4 3 1)	10HP36
	10HP42	
66463	RELAY-POTENTIAL(1)	10HP42
26H95	VALVE-REVERSING(1)	10HP42
26H98	COIL-SOLENOID(1)	10HP42
47J27	CONTROL-TIMED OFF(1)	10HP42
65C69	CONTACTOR-COMPR(1)	10HP42
65G57	VALVE-EXPANSION(1)	10HP42
69H63	VALVE-SERVICE(1)	10HP42
72H36	MOTOR-FAN(1)	10HP42
72H72	CAPACITOR-START(1)	10HP42
72H92	VALVE-SERVICE(1)	10HP42
74H70	SWITCH-HI PRESS(1)	10HP42
78H11	THERMOSTAT(1)	10HP42
78H18	COMPRESSOR(1)	10HP42
78H20	CAPACITOR-RUN(1)	10HP42
78H68	TIMER-DEFROST(1)	10HP42
	10HP48	
25J53	COMPRESSOR(1)	10HP48
26H96	VALVE-REVERSING(1)	10HP48
26H98	COIL-SOLENOID(1)	10HP48
47J27	CONTROL-TIMED OFF(1)	10HP48
65C70	CONTACTOR(1)	10HP48
65G84	VALVE-EXPANSION(1)	10HP48
69H63	VALVE-SERVICE(1)	10HP48
72H36	MOTOR-FAN(1)	10HP48
72H72	CAPACITOR-START(1)	10HP48
72H92	VALVE-SERVICE(1)	10HP48

CAT#	DESCRIPTION	Unit
74H01	RELAY-POTENTIAL(1)	10HP48
74H10	CAPACITOR-RUN(1)	10HP48
74H70	SWITCH-HI PRESS(1)	10HP48
78H11	THERMOSTAT(1)	10HP48
78H68	TIMER-DEFROST(1)	10HP48
	10HP60	
21J28	RELAY-POTENTIAL(1)	10HP60
21J29	CAPACITOR-START(1)	10HP60
25J57	COMPRESSOR(1)	10HP60
26H96	VALVE-REVERSING(1)	10HP60
26H98	COIL-SOLENOID(1)	10HP60
32F21	CONTROL-TIMED OFF(1)	10HP60
65G92	VALVE-EXPANSION(1)	10HP60
69H63	VALVE-SERVICE(1)	10HP60
72H36	MOTOR-FAN(1)	10HP60
74H10	CAPACITOR-RUN(1)	10HP60
74H30	VALVE-SERVICE(1)	10HP60
74H70	SWITCH-HI PRESS(1)	10HP60
78H11	THERMOSTAT(1)	10HP60
78H68	TIMER-DEFROST(1)	10HP60
	10HPB18	
58327	RELAY-POTENTIAL(4P 3P)	10HPB18
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
12L67	VALVE-REVERSING(8P 10P)	10HPB18
14K90	COMPRESSOR(9P 8P 7P 6P 5P 4P 3P 11P 10P)	10HPB18
15M35	HARNES-COMP(14P 13P 12P)	10HPB18
18M89	VALVE-EXPANSION(14P 13P 12P 11P)	10HPB18
26H98	COIL-SOLENOID(9P 7P 6P 5P 4P 3P 2P 1P 12P 11P)	10HPB18
29M02	TIMER-DEFROST(14P 13P 12P 11P)	10HPB18
31L19	MOTOR-FAN(9P 8P 7P 14P 13P 12P 11P 10P)	10HPB18
44A93	CAPACITOR-START(9P 8P 7P 6P 5P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
47A60	CAPACITOR-START(4P 3P)	10HPB18
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
51H69	VALVE-REVERSING(9P 7P 6P 5P 4P 3P 2P 1P 12P 11P)	10HPB18
53H27	CAPACITOR-RUN(4P 3P 2P 1P)	10HPB18
58H66	RELAY-POTENTIAL(9P 8P 7P 6P 5P 11P 10P)	10HPB18
60M51	COMPRESSOR(14P 13P 12P)	10HPB18
63K86	CAPACITOR-FAN&RUN(9P 8P 7P 6P 5P 11P 10P)	10HPB18
65C69	CONTACTOR-COMPR(9P 14P 13P 12P 11P 10P)	10HPB18
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
68J11	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
68J15	VALVE-EXPANSION(6P 5P 4P 3P 2P 1P)	10HPB18

CAT#	DESCRIPTION	Unit
68J29	TIMER-DEFROST(9P 8P 7P 6P 5P 4P 3P 2P 1P 10P)	10HPB18
68J36	CONTACTOR-COMPR(8P 7P 6P 5P 4P 3P 2P 1P)	10HPB18
68J50	COMPRESSOR(2P 1P)	10HPB18
68J97	MOTOR-FAN(6P 5P 4P 3P 2P 1P)	10HPB18
69M30	CAPACITOR-FAN&RUN(14P 13P 12P)	10HPB18
73K16	VALVE-EXPANSION(9P 8P 7P 10P)	10HPB18
75M49	COIL-SOLENOID(14P 13P)	10HPB18
75M50	VALVE-REVERSING(14P 13P)	10HPB18
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB18
88K30	THERMOSTAT(9P 8P 7P 14P 13P 12P 11P 10P)	10HPB18
	10HPB24	
58327	RELAY-POTENTIAL(14P 13P 12P)	10HPB24
67101	RELAY-POTENTIAL(4P 3P 2P 1P)	10HPB24
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB24
12L67	VALVE-REVERSING(8P 10P)	10HPB24
15M35	HARNESS-COMP(14P 13P 12P)	10HPB24
15M62	COMPRESSOR(14P 13P 12P)	10HPB24
18M89	VALVE-EXPANSION(14P 13P 12P 11P)	10HPB24
26H98	COIL-SOLENOID(9P 7P 6P 5P 4P 3P 2P 1P 12P 11P)	10HPB24
29M02	TIMER-DEFROST(14P 13P 12P 11P)	10HPB24
31L19	MOTOR-FAN(9P 8P 7P 14P 13P 12P 11P 10P)	10HPB24
44A93	CAPACITOR-START(9P 8P 7P 6P 5P 4P 3P 2P 1P 12P 11P 10P)	10HPB24
47A60	CAPACITOR-START(14P 13P 12P)	10HPB24
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB24
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB24
51H69	VALVE-REVERSING(9P 7P 6P 5P 4P 3P 2P 1P 12P 11P)	10HPB24
53H23	CAPACITOR-RUN(4P 3P 2P 1P)	10HPB24
58H66	RELAY-POTENTIAL(9P 8P 7P 6P 5P 12P 11P 10P)	10HPB24
63K70	COMPRESSOR(9P 8P 7P 6P 5P 11P 10P)	10HPB24
63K86	CAPACITOR-FAN&RUN(9P 8P 7P 6P 5P 11P 10P)	10HPB24
65C69	CONTACTOR-COMPR(9P 14P 13P 12P 11P 10P)	10HPB24
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB24
68J11	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 12P 11P 10P)	10HPB24
68J12	VALVE-SERVICE(14P 13P)	10HPB24
68J15	VALVE-EXPANSION(6P 5P 4P 3P 2P 1P)	10HPB24
68J29	TIMER-DEFROST(6P 5P 4P 3P 2P 1P)	10HPB24
68J36	CONTACTOR-COMPR(8P 7P 6P 5P 4P 3P 2P 1P)	10HPB24
68J52	COMPRESSOR(4P 3P 2P 1P)	10HPB24
68J84	TIMER-DEFROST(9P 8P 7P 10P)	10HPB24
68J97	MOTOR-FAN(6P 5P 4P 3P 2P 1P)	10HPB24
73K16	VALVE-EXPANSION(9P 8P 7P 10P)	10HPB24
75M49	COIL-SOLENOID(14P 13P)	10HPB24
75M50	VALVE-REVERSING(14P 13P)	10HPB24
80K48	CAPACITOR(14P 13P 12P)	10HPB24
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 13P 12P 11P 10P)	10HPB24

CAT#	DESCRIPTION	Unit
88K30	THERMOSTAT(9P 8P 7P 14P 13P 12P 11P 10P)	10HPB24
	10HPB30	
58327	RELAY-POTENTIAL(9P 8P 7P 6P 5P 14P 12P 11P 10P)	10HPB30
67101	RELAY-POTENTIAL(4P 3P 2P 1P)	10HPB30
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
15M35	HARNESS-COMP(9P 14P 12P 11P 10P)	10HPB30
15M65	COMPRESSOR(9P 14P 12P 11P 10P)	10HPB30
18M89	VALVE-EXPANSION(14P 12P 11P)	10HPB30
22J00	COMPRESSOR(4P 3P 2P 1P)	10HPB30
26H95	VALVE-REVERSING(9P 7P 6P 5P 4P 3P 2P 1P 11P)	10HPB30
26H98	COIL-SOLENOID(9P 7P 6P 5P 4P 3P 2P 1P 11P)	10HPB30
29M02	TIMER-DEFROST(14P 12P 11P)	10HPB30
31L19	MOTOR-FAN(9P 8P 7P 14P 12P 11P 10P)	10HPB30
31L81	VALVE-REVERSING(8P 10P)	10HPB30
44A93	CAPACITOR-START(6P 5P 4P 3P 2P 1P)	10HPB30
47A60	CAPACITOR-START(9P 8P 7P 14P 12P 11P 10P)	10HPB30
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
49M68	CAPACITOR-FAN&RUN(9P 8P 7P 4P 3P 14P 12P 11P 10P)	10HPB30
53H27	CAPACITOR-RUN(2P 1P)	10HPB30
63K71	COMPRESSOR(6P 5P)	10HPB30
63K87	CAPACITOR-FAN&RUN(6P 5P)	10HPB30
65C69	CONTACTOR-COMPR(9P 14P 12P 11P 10P)	10HPB30
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
68J12	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
68J15	VALVE-EXPANSION(6P 5P 4P 3P 2P 1P)	10HPB30
68J29	TIMER-DEFROST(9P 8P 7P 6P 5P 4P 3P 2P 1P 10P)	10HPB30
68J36	CONTACTOR-COMPR(8P 7P 6P 5P 4P 3P 2P 1P)	10HPB30
68J97	MOTOR-FAN(6P 5P 4P 3P 2P 1P)	10HPB30
73K16	VALVE-EXPANSION(9P 8P 7P 10P)	10HPB30
75M47	VALVE-REVERSING(14P 12P)	10HPB30
75M49	COIL-SOLENOID(14P 12P)	10HPB30
80K19	COMPRESSOR(9P 8P 7P 10P)	10HPB30
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB30
88K30	THERMOSTAT(9P 8P 7P 14P 12P 11P 10P)	10HPB30
	10HPB36	
58327	RELAY-POTENTIAL(9P 8P 7P 14P 10P)	10HPB36
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
15M35	HARNESS-COMP(9P 8P 7P 14P 10P)	10HPB36
15M71	COMPRESSOR(9P 8P 7P 14P 10P)	10HPB36
18M89	VALVE-EXPANSION(9P 14P 10P)	10HPB36
26H95	VALVE-REVERSING(9P 7P 5P 4P 3P 2P 1P)	10HPB36
26H98	COIL-SOLENOID(9P 7P 5P 4P 3P 2P 1P)	10HPB36

CAT#	DESCRIPTION	Unit
29M02	TIMER-DEFROST(9P 14P 10P)	10HPB36
31L19	MOTOR-FAN(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
31L81	VALVE-REVERSING(8P 6P)	10HPB36
41K43	COMPRESSOR(4P 3P)	10HPB36
45A01	RELAY-POTENTIAL(6P 5P 4P 3P)	10HPB36
47A60	CAPACITOR-START(9P 8P 7P 14P 10P)	10HPB36
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
53H29	CAPACITOR-FAN&RUN(4P 3P 2P 1P)	10HPB36
63A06	CAPACITOR-START(6P 5P 4P 3P)	10HPB36
65C69	CONTACTOR-COMPR(9P 8P 7P 14P 10P)	10HPB36
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
68J12	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
68J15	VALVE-EXPANSION(4P 3P 2P 1P)	10HPB36
68J29	TIMER-DEFROST(8P 7P 6P 5P 4P 3P 2P 1P)	10HPB36
68J36	CONTACTOR-COMPR(6P 5P 4P 3P 2P 1P)	10HPB36
68J56	COMPRESSOR(2P 1P)	10HPB36
72H72	CAPACITOR-START(2P 1P)	10HPB36
73K16	VALVE-EXPANSION(8P 7P 6P 5P)	10HPB36
75M47	VALVE-REVERSING(14P 10P)	10HPB36
75M49	COIL-SOLENOID(14P 10P)	10HPB36
80K20	COMPRESSOR(8P 7P 6P 5P)	10HPB36
80K48	CAPACITOR(9P 8P 7P 6P 5P 14P 10P)	10HPB36
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 10P)	10HPB36
88K30	THERMOSTAT(9P 8P 7P 6P 5P 14P 10P)	10HPB36
	10HPB42	
58327	RELAY-POTENTIAL(9P 8P 7P 14P 12P 11P 10P)	10HPB42
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42
15M35	HARNESS-COMP(9P 14P 12P 11P 10P)	10HPB42
15M76	COMPRESSOR(9P 14P 12P 11P 10P)	10HPB42
18M91	VALVE-EXPANSION(14P 12P 11P)	10HPB42
26H96	VALVE-REVERSING(9P 7P 4P 3P 2P 1P 11P)	10HPB42
26H98	COIL-SOLENOID(9P 7P 4P 3P 2P 1P 11P)	10HPB42
29M02	TIMER-DEFROST(14P 12P 11P)	10HPB42
31L19	MOTOR-FAN(9P 8P 7P 14P 12P 11P 10P)	10HPB42
45A01	RELAY-POTENTIAL(6P 5P 4P 3P 2P 1P)	10HPB42
47A60	CAPACITOR-START(9P 8P 7P 14P 12P 11P 10P)	10HPB42
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42
53H29	CAPACITOR-FAN&RUN(2P 1P)	10HPB42
63A06	CAPACITOR-START(6P 5P 4P 3P 2P 1P)	10HPB42
63K15	VALVE-REVERSING(8P 6P 5P 10P)	10HPB42
63K87	CAPACITOR-FAN&RUN(6P 5P 4P 3P)	10HPB42
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42
68J13	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42

CAT#	DESCRIPTION	Unit
68J16	VALVE-EXPANSION(6P 5P 4P 3P 2P 1P)	10HPB42
68J29	TIMER-DEFROST(9P 8P 7P 6P 5P 4P 3P 2P 1P 10P)	10HPB42
68J36	CONTACTOR-COMPR(6P 5P 4P 3P 2P 1P)	10HPB42
68J37	CONTACTOR(8P 7P)	10HPB42
68J61	COMPRESSOR(6P 5P 4P 3P 2P 1P)	10HPB42
68J97	MOTOR-FAN(6P 5P 4P 3P 2P 1P)	10HPB42
73K15	VALVE-EXPANSION(9P 8P 7P 10P)	10HPB42
75M48	VALVE-REVERSING(14P 12P)	10HPB42
75M49	COIL-SOLENOID(14P 12P)	10HPB42
80K21	COMPRESSOR(9P 8P 7P 10P)	10HPB42
80K48	CAPACITOR(9P 8P 7P 14P 12P 11P 10P)	10HPB42
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 12P 11P 10P)	10HPB42
88K30	THERMOSTAT(9P 8P 7P 14P 12P 11P 10P)	10HPB42
	10HPB48	
58327	RELAY-POTENTIAL(9P 8P 6P 14P 11P 10P)	10HPB48
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
15M35	HARNESS-COMP(9P 8P 14P 11P 10P)	10HPB48
15M82	COMPRESSOR(9P 8P 14P 11P 10P)	10HPB48
18M91	VALVE-EXPANSION(14P 11P 10P)	10HPB48
26H96	VALVE-REVERSING(8P 6P 5P 4P 3P 2P 1P 10P)	10HPB48
26H98	COIL-SOLENOID(8P 6P 4P 3P 2P 1P 10P)	10HPB48
29M02	TIMER-DEFROST(14P 11P 10P)	10HPB48
45A01	RELAY-POTENTIAL(5P 4P 3P 2P 1P)	10HPB48
47A60	CAPACITOR-START(9P 8P 6P 14P 11P 10P)	10HPB48
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
49K49	CAPACITOR-FAN&RUN(7P 6P 5P 4P 3P 2P 1P)	10HPB48
49M72	CAPACITOR-FAN&RUN(9P 8P)	10HPB48
63A06	CAPACITOR-START(5P 4P 3P 2P 1P)	10HPB48
63K15	VALVE-REVERSING(9P 7P 5P)	10HPB48
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
68J13	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
68J16	VALVE-EXPANSION(5P 4P 3P 2P 1P)	10HPB48
68J24	MOTOR-FAN(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48
68J25	MOTOR-FAN(6P)	10HPB48
68J29	TIMER-DEFROST(9P 8P 7P 6P 5P 4P 3P 2P 1P)	10HPB48
68J37	CONTACTOR(7P 6P 5P 4P 3P 2P 1P)	10HPB48
68J65	COMPRESSOR(5P 4P 3P 2P 1P)	10HPB48
68J91	CAPACITOR-FAN&RUN(4P 3P 2P 1P)	10HPB48
69M67	CAPACITOR-FAN&RUN(14P 11P 10P)	10HPB48
73K15	VALVE-EXPANSION(9P 8P 7P 6P)	10HPB48
75M48	VALVE-REVERSING(14P 11P)	10HPB48
75M49	COIL-SOLENOID(14P 11P)	10HPB48
80K22	COMPRESSOR(9P 8P 7P 6P)	10HPB48
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB48

CAT#	DESCRIPTION	Unit
88K30	THERMOSTAT(9P 8P 7P 6P 14P 11P 10P)	10HPB48
	10HPB60	
38644	RELAY-POTENTIAL(2P 1P)	10HPB60
58327	RELAY-POTENTIAL(9P 8P 7P 6P 14P 11P 10P)	10HPB60
87265	SWITCH-LO PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
15M35	HARNESS-COMP(9P 8P 14P 11P 10P)	10HPB60
15M88	COMPRESSOR(9P 8P 14P 11P 10P)	10HPB60
18M92	VALVE-EXPANSION(14P 11P 10P)	10HPB60
21J29	CAPACITOR-START(9P 8P 7P 6P 14P 11P 10P)	10HPB60
26H96	VALVE-REVERSING(8P 6P 4P 3P 2P 1P 10P)	10HPB60
26H98	COIL-SOLENOID(8P 6P 4P 3P 2P 1P 10P)	10HPB60
29M02	TIMER-DEFROST(14P 11P 10P)	10HPB60
31J50	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 10P)	10HPB60
39L20	VALVE-SERVICE(14P 11P)	10HPB60
47J27	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
47J35	CONTROL-TIMED OFF(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
48J21	COMPRESSOR(8P 7P 6P 5P 4P 3P)	10HPB60
49K50	CAPACITOR-FAN&RUN(9P 8P 7P 6P 5P 4P 3P)	10HPB60
63A06	CAPACITOR-START(2P 1P)	10HPB60
63K15	VALVE-REVERSING(9P 7P 5P)	10HPB60
68J09	CAPACITOR-FAN&RUN(4P 3P)	10HPB60
68J10	VALVE-SERVICE(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
68J16	VALVE-EXPANSION(5P 4P 3P 2P 1P)	10HPB60
68J24	MOTOR-FAN(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
68J29	TIMER-DEFROST(9P 8P 7P 6P 2P 1P)	10HPB60
68J35	CAPACITOR-FAN&RUN(2P 1P)	10HPB60
68J37	CONTACTOR(7P 6P 5P 4P 3P 2P 1P)	10HPB60
68J69	COMPRESSOR(2P 1P)	10HPB60
68J84	TIMER-DEFROST(5P 4P 3P)	10HPB60
69M70	CAPACITOR-FAN&RUN(14P 11P 10P)	10HPB60
73K14	VALVE-EXPANSION(9P 8P 7P 6P)	10HPB60
75M48	VALVE-REVERSING(14P 11P)	10HPB60
75M49	COIL-SOLENOID(14P 11P)	10HPB60
86H31	SWITCH-HI PRESS(9P 8P 7P 6P 5P 4P 3P 2P 1P 14P 11P 10P)	10HPB60
88K30	THERMOSTAT(9P 8P 7P 6P 14P 11P 10P)	10HPB60
	12HPB24	
58327	RELAY-POTENTIAL(16 10 09 08 07 06 04 03 02 01)	12HPB24
87265	SWITCH-LO PRESS(16 10 09 08 07 06 04 03 02 01)	12HPB24
15M35	HARNESS-COMP(16 10 09 08 07)	12HPB24
15M61	COMPRESSOR(16 10 09 08 07)	12HPB24
18M89	VALVE-EXPANSION(16 10 09)	12HPB24
26H95	VALVE-REVERSING(09 07 04 03 02 01)	12HPB24

CAT#	DESCRIPTION	Unit
26H98	COIL-SOLENOID(09 07 04 03 02 01)	12HPB24
29M02	TIMER-DEFROST(16 10 09)	12HPB24
31L81	VALVE-REVERSING(08 06)	12HPB24
47A60	CAPACITOR-START(16 10 09 08 07 06 04 03 02 01)	12HPB24
53H25	CAPACITOR-FAN&RUN(08 07 06 04 03 02 01)	12HPB24
65C69	CONTACTOR-COMPR(16 10 09 08 07)	12HPB24
68J10	VALVE-SERVICE(16 10 09 08 07 06 04 03 02 01)	12HPB24
68J15	VALVE-EXPANSION(04 03 02 01)	12HPB24
68J36	CONTACTOR-COMPR(06 04 03 02 01)	12HPB24
68J72	COMPRESSOR(08 07 06 04 03 02 01)	12HPB24
68J84	TIMER-DEFROST(08 07 06 04 03 02 01)	12HPB24
68J95	VALVE-SERVICE(16 10 09 08 07 06 04 03 02 01)	12HPB24
68J97	MOTOR-FAN(16 10 09 08 07 06 04 03 02 01)	12HPB24
73K16	VALVE-EXPANSION(08 07 06)	12HPB24
75M47	VALVE-REVERSING(16 10)	12HPB24
75M49	COIL-SOLENOID(16 10)	12HPB24
80K48	CAPACITOR(16 10 09)	12HPB24
86H31	SWITCH-HI PRESS(16 10 09 08 07 06 04 03 02 01)	12HPB24
88K30	THERMOSTAT(16 10 09 08 07 06)	12HPB24
	12HPB30	
58327	RELAY-POTENTIAL(16 12 10 09 08 07 06 05 04 03)	12HPB30
87265	SWITCH-LO PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB30
15M35	HARNESS-COMP(16 12 10 09 08 07 06)	12HPB30
15M63	COMPRESSOR(16 12 10 09 08 07 06)	12HPB30
18M89	VALVE-EXPANSION(16 12 10)	12HPB30
26H95	VALVE-REVERSING(10 08 06 02 01)	12HPB30
26H98	COIL-SOLENOID(10 08 06 02 01)	12HPB30
29M02	TIMER-DEFROST(16 12 10)	12HPB30
31L81	VALVE-REVERSING(09 07 05 04 03)	12HPB30
47A60	CAPACITOR-START(16 12 10 09 08 07 06 05 04 03)	12HPB30
53H29	CAPACITOR-FAN&RUN(09 08 07 06 05 04 03 02 01)	12HPB30
56L37	VALVE-REVERSING(03)	12HPB30
63K87	CAPACITOR-FAN&RUN(09 08 07 06)	12HPB30
65C69	CONTACTOR-COMPR(16 12 10 09 08 07 06)	12HPB30
68J10	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB30
68J15	VALVE-EXPANSION(02 01)	12HPB30
68J36	CONTACTOR-COMPR(05 04 03 02 01)	12HPB30
68J73	COMPRESSOR(09 08 07 06 05 04 03 02 01)	12HPB30
68J84	TIMER-DEFROST(09 08 07 06 05 04 03 02 01)	12HPB30
68J95	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB30
68J97	MOTOR-FAN(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB30
69M64	CAPACITOR-FAN&RUN(16 12 10)	12HPB30
73K16	VALVE-EXPANSION(09 08 07 06 05 04)	12HPB30
75M47	VALVE-REVERSING(16 12)	12HPB30
75M49	COIL-SOLENOID(16 12)	12HPB30

CAT#	DESCRIPTION	Unit
86H31	SWITCH-HI PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB30
88K30	THERMOSTAT(16 12 10 09 08 07 06 05 04 03)	12HPB30
	12HPB36	
58327	RELAY-POTENTIAL(16 12 10 09 08 07 06 05 04 03)	12HPB36
87265	SWITCH-LO PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
15M35	HARNESS-COMP(16 12 10 09 08 07 06)	12HPB36
18M89	VALVE-EXPANSION(16 12 10)	12HPB36
26H96	VALVE-REVERSING(10 08 06 02 01)	12HPB36
26H98	COIL-SOLENOID(10 08 06 03 02 01)	12HPB36
29M02	TIMER-DEFROST(16 12 10)	12HPB36
47A60	CAPACITOR-START(16 12 10 09 08 07 06 05 04 03)	12HPB36
56L37	VALVE-REVERSING(03)	12HPB36
63K15	VALVE-REVERSING(09 07 05 04)	12HPB36
65C69	CONTACTOR-COMPR(16 12 10 09 08 07 06)	12HPB36
68J10	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
68J15	VALVE-EXPANSION(02 01)	12HPB36
68J36	CONTACTOR-COMPR(05 04 03 02 01)	12HPB36
68J84	TIMER-DEFROST(09 08 07 06 05 04 03 02 01)	12HPB36
68J97	MOTOR-FAN(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
68J98	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
69M65	CAPACITOR-FAN&RUN(16 12 10)	12HPB36
73K16	VALVE-EXPANSION(09 08 07 06 05 04)	12HPB36
75M48	VALVE-REVERSING(16 12)	12HPB36
75M49	COIL-SOLENOID(16 12)	12HPB36
86H31	SWITCH-HI PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
88K30	THERMOSTAT(16 12 10 09 08 07 06 05 04 03)	12HPB36
97M94	COMPRESSOR(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB36
	12HPB42	
58327	RELAY-POTENTIAL(16 12 10 09 08 07 06 05 04 03)	12HPB42
87265	SWITCH-LO PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB42
15M35	HARNESS-COMP(16 12 10 09 08 07 06)	12HPB42
15M72	COMPRESSOR(16 12 10 09 08 07 06)	12HPB42
18M91	VALVE-EXPANSION(16 12 10)	12HPB42
26H96	VALVE-REVERSING(10 08 06 03 02 01)	12HPB42
26H98	COIL-SOLENOID(10 08 06 03 02 01)	12HPB42
29M02	TIMER-DEFROST(16 12 10)	12HPB42
47A60	CAPACITOR-START(16 12 10 09 08 07 06 05 04 03)	12HPB42
49K51	CAPACITOR-FAN&RUN(09 08 07 06 05 04 03 02 01)	12HPB42
63K15	VALVE-REVERSING(09 07 05 04)	12HPB42
65C69	CONTACTOR-COMPR(16 12 10 09 08 07 06)	12HPB42
68J08	CAPACITOR-RUN(02 01)	12HPB42
68J10	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB42
68J16	VALVE-EXPANSION(09 08 07 06 05 04 02 01)	12HPB42

CAT#	DESCRIPTION	Unit
68J24	MOTOR-FAN(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB42
68J36	CONTACTOR-COMPR(05 04 03 02 01)	12HPB42
68J75	COMPRESSOR(09 08 07 06 05 04 03 02 01)	12HPB42
68J84	TIMER-DEFROST(09 08 07 06 05 04 03 02 01)	12HPB42
68J98	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB42
73K15	VALVE-EXPANSION(03)	12HPB42
75M48	VALVE-REVERSING(16 12)	12HPB42
75M49	COIL-SOLENOID(16 12)	12HPB42
86H31	SWITCH-HI PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB42
88K30	THERMOSTAT(16 12 10 09 08 07 06 05 04 03)	12HPB42
97H16	CAPACITOR-RUN(16 12 10)	12HPB42
	12HPB48	
58327	RELAY-POTENTIAL(16 14 12 10 09 08 07 06 05 04 03)	12HPB48
87265	SWITCH-LO PRESS(16 14 12 10 09 08 07 06 05 04 03 02 01)	12HPB48
15M35	HARNESS-COMP(16 14 12 10 09 08)	12HPB48
15M78	COMPRESSOR(16 14 12 10 09 08)	12HPB48
18M92	VALVE-EXPANSION(16 14 12)	12HPB48
21J29	CAPACITOR-START(16 14 12 10 09 08 07 06 05 04 03)	12HPB48
26H96	VALVE-REVERSING(12 10 08 05 04 03 02 01)	12HPB48
26H98	COIL-SOLENOID(12 10 08 05 04 03 02 01)	12HPB48
29M02	TIMER-DEFROST(16 14 12)	12HPB48
49K51	CAPACITOR-FAN&RUN(02 01)	12HPB48
53J05	COMPRESSOR(02 01)	12HPB48
63K15	VALVE-REVERSING(09 07 06)	12HPB48
68J08	CAPACITOR-RUN(02 01)	12HPB48
68J10	VALVE-SERVICE(16 14 12 10 09 08 07 06 05 04 03 02 01)	12HPB48
68J24	MOTOR-FAN(16 14 12 10 09 08 07 06 05 04 03 02 01)	12HPB48
68J37	CONTACTOR(09 08 07 06 05 04 03 02 01)	12HPB48
68J84	TIMER-DEFROST(10 09 08 07 06 05 04 03 02 01)	12HPB48
68J98	VALVE-SERVICE(16 14 12 10 09 08 07 06 05 04 03 02 01)	12HPB48
73K14	VALVE-EXPANSION(10 09 08 07 06 05 04 03 02 01)	12HPB48
75M48	VALVE-REVERSING(16 14)	12HPB48
75M49	COIL-SOLENOID(16 14)	12HPB48
86H31	SWITCH-HI PRESS(16 14 12 10 09 08 07 06 05 04 03 02 01)	12HPB48
88K20	COMPRESSOR(10 09 08 07 06 05 04 03)	12HPB48
88K30	THERMOSTAT(16 14 12 10 09 08 07 06 05 04 03)	12HPB48
97H16	CAPACITOR-RUN(16 14 12 10 09 08 07 06 05 04 03)	12HPB48
	12HPB60	
58327	RELAY-POTENTIAL(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
87265	SWITCH-LO PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
15M35	HARNESS-COMP(16 12 10 09 08 07 06)	12HPB60
15M84	COMPRESSOR(16 12 10 09 08 07 06)	12HPB60
18M92	VALVE-EXPANSION(16 12 10)	12HPB60

CAT#	DESCRIPTION	Unit
21J29	CAPACITOR-START(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
25J51	VALVE-SERVICE(01)	12HPB60
26H96	VALVE-REVERSING(10 07 06)	12HPB60
26H98	COIL-SOLENOID(10 07 06 05 04 03 02 01)	12HPB60
29M02	TIMER-DEFROST(16 12 10)	12HPB60
31J50	VALVE-SERVICE(09 08 07 06 05 04 03 02)	12HPB60
34K75	VALVE-REVERSING(02 01)	12HPB60
39L20	VALVE-SERVICE(16 12 10)	12HPB60
49K50	CAPACITOR-FAN&RUN(09 08 07 06 05 04 03 02 01)	12HPB60
51H70	VALVE-REVERSING(01)	12HPB60
53J06	COMPRESSOR(09 08 07 06 05 04 03 02 01)	12HPB60
63K15	VALVE-REVERSING(09 08)	12HPB60
68J09	CAPACITOR-FAN&RUN(02 01)	12HPB60
68J10	VALVE-SERVICE(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
68J16	VALVE-EXPANSION(09 08 07 06 05 04 03 02 01)	12HPB60
68J24	MOTOR-FAN(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
68J37	CONTACTOR(03 02 01)	12HPB60
68J84	TIMER-DEFROST(09 08 07 06 05 04 03 02 01)	12HPB60
69M70	CAPACITOR-FAN&RUN(16 12 10)	12HPB60
75M48	VALVE-REVERSING(16 12)	12HPB60
75M49	COIL-SOLENOID(16 12)	12HPB60
80K54	VALVE-REVERSING(05 04 03 02)	12HPB60
86H31	SWITCH-HI PRESS(16 12 10 09 08 07 06 05 04 03 02 01)	12HPB60
88K30	THERMOSTAT(16 12 10)	12HPB60
13HPD		
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	13HPD
87265	SWITCH-LO PRESS(060 048 042 036 030 024 018)	13HPD
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	13HPD
10W77	VALVE-EXPANSION(042 036 030 024 018)	13HPD
13W52	VALVE-EXPANSION(060 048)	13HPD
13W86	CAPACITOR-FAN&RUN(018)	13HPD
13W87	CAPACITOR(042)	13HPD
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	13HPD
21J29	CAPACITOR-START(060)	13HPD
21W81	CAPACITOR-FAN&RUN(060)	13HPD
29W60	MOTOR-FAN(060)	13HPD
30W87	CONTROL-DEFROST(060 048 042 036 030 024 018)	13HPD
31W72	VALVE-SERVICE(030 024 018)	13HPD
31W73	VALVE-SERVICE(048 042 036)	13HPD
31W74	VALVE-SERVICE(060)	13HPD
42W18	COIL-SOLENOID(060 048 042 036 030 024 018)	13HPD
42W58	VALVE-REVERSING(030 024 018)	13HPD
42W59	VALVE-REVERSING(060 048 042 036)	13HPD
43W49	MOTOR-FAN(036 030 024 018)	13HPD
47A60	CAPACITOR-START(048 042 036 030 024 018)	13HPD

CAT#	DESCRIPTION	Unit
49W62	VALVE-REVERSING(060 048 042 036)	13HPD
49W64	VALVE-REVERSING(030 024 018)	13HPD
49W65	COIL-SOLENOID(060 048 042 036 030 024 018)	13HPD
66W09	VALVE-SERVICE(036 030 024)	13HPD
66W10	VALVE-SERVICE(048 042)	13HPD
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	13HPD
86H31	SWITCH-HI PRESS(060 048 042 036 030 024)	13HPD
88M10	VALVE-SERVICE(030 024 018)	13HPD
88M11	VALVE-SERVICE(048 042 036)	13HPD
88M12	VALVE-SERVICE(060)	13HPD
89M80	CAPACITOR-FAN&RUN(036 030)	13HPD
89M85	CAPACITOR(048)	13HPD
95M55	CONTACTOR(036 030 024 018)	13HPD
95M56	CONTACTOR(060 048 042)	13HPD
97M49	MOTOR-FAN(036 030 024 018)	13HPD
97M60	THERMOSTAT(060 048 042 036 030 024 018)	13HPD
97M62	MOTOR-FAN(048 042)	13HPD
97M82	VALVE-REVERSING(030 024 018)	13HPD
97M83	VALVE-REVERSING(060 048 042 036)	13HPD
97M93	COMPRESSOR(048)	13HPD
98M63	COMPRESSOR(024)	13HPD
98M64	COMPRESSOR(030)	13HPD
98M65	COMPRESSOR(036)	13HPD
98M66	COMPRESSOR(042)	13HPD
98M67	COMPRESSOR(060)	13HPD
98M68	COMPRESSOR(018)	13HPD
98M69	SWITCH-HI PRESS(024 018)	13HPD
98M71	MOTOR-FAN(060)	13HPD
	13HPX	
58327	RELAY-POTENTIAL(061 060 048 042 036 030 024 018)	13HPX
10W32	VALVE-SERVICE(061 060 048 042 036 030 024 018)	13HPX
15M35	HARNESS-COMP(061 060 048 042 036 030 024 018)	13HPX
19W97	VALVE-EXPANSION(018)	13HPX
21W81	CAPACITOR-FAN&RUN(060)	13HPX
21W82	CAPACITOR-FAN&RUN(060 048)	13HPX
21W83	CAPACITOR-FAN&RUN(061)	13HPX
23W26	SWITCH-LO PRESS(060 048 042 036 030 024 018)	13HPX
30W87	CONTROL-DEFROST(060 048 042 036 030 024 018)	13HPX
31W72	VALVE-SERVICE(036 030 024 018)	13HPX
31W73	VALVE-SERVICE(048 042 036)	13HPX
31W74	VALVE-SERVICE(060)	13HPX
33W84	VALVE-EXPANSION(048 042 036 030 024 018)	13HPX
33W85	VALVE-EXPANSION(060 048 042 036)	13HPX
42W18	COIL-SOLENOID(060 048 042 036 030 024 018)	13HPX
42W58	VALVE-REVERSING(030 024 018)	13HPX

CAT#	DESCRIPTION	Unit
42W59	VALVE-REVERSING(060 048 042 036)	13HPX
43W22	VALVE-EXPANSION(060)	13HPX
43W49	MOTOR-FAN(036 030 024 018)	13HPX
43W86	COMPRESSOR(036)	13HPX
43W87	COMPRESSOR(060)	13HPX
44W62	HARNESS-COMP(060 048 042 036 030 024 018)	13HPX
47A60	CAPACITOR-START(018)	13HPX
49W62	VALVE-REVERSING(060 048 042 036)	13HPX
49W64	VALVE-REVERSING(030 024 018)	13HPX
49W65	COIL-SOLENOID(060 048 042 036 030 024 018)	13HPX
49W86	MOTOR-FAN(060)	13HPX
52W10	COMPRESSOR(024)	13HPX
52W11	COMPRESSOR(048)	13HPX
52W33	COMPRESSOR(030)	13HPX
52W44	COMPRESSOR(042)	13HPX
53W14	COMPRESSOR(018)	13HPX
63A06	CAPACITOR-START(061 060 048 042 036 030 024)	13HPX
66W09	VALVE-SERVICE(030 024 018)	13HPX
66W10	VALVE-SERVICE(060 048 042 036)	13HPX
75M49	COIL-SOLENOID(061 060 048 042 036 030 024 018)	13HPX
86M36	SWITCH-HI PRESS(061 060 048 042 036 030 024 018)	13HPX
88M10	VALVE-SERVICE(030 024 018)	13HPX
88M11	VALVE-SERVICE(048 042 036)	13HPX
88M12	VALVE-SERVICE(061 060)	13HPX
88M97	SWITCH-LO PRESS(061 060 048 042 036 030 024 018)	13HPX
89M71	CAPACITOR-DUAL(018)	13HPX
89M74	CAPACITOR-FAN&RUN(024 018)	13HPX
89M80	CAPACITOR-FAN&RUN(036)	13HPX
89M82	CAPACITOR-FAN&RUN(042)	13HPX
95M02	CAPACITOR-FAN&RUN(060)	13HPX
95M03	CAPACITOR-FAN&RUN(048)	13HPX
95M54	THERMOSTAT(061 060)	13HPX
95M55	CONTACTOR(036 030 024 018)	13HPX
95M56	CONTACTOR(061 060 048 042)	13HPX
97M49	MOTOR-FAN(036 030 024 018)	13HPX
97M51	MOTOR-FAN(060)	13HPX
97M52	COMPRESSOR(018)	13HPX
97M53	COMPRESSOR(024)	13HPX
97M54	COMPRESSOR(030)	13HPX
97M55	COMPRESSOR(036)	13HPX
97M56	COMPRESSOR(042)	13HPX
97M57	COMPRESSOR(048)	13HPX
97M58	COMPRESSOR(060)	13HPX
97M60	THERMOSTAT(061 060 048 042 036 030 024 018)	13HPX
97M62	MOTOR-FAN(060 048 042)	13HPX
97M82	VALVE-REVERSING(030 024 018)	13HPX
97M83	VALVE-REVERSING(061 060 048 042 036)	13HPX

CAT#	DESCRIPTION	Unit
97M84	VALVE-EXPANSION(030 024)	13HPX
97M85	VALVE-EXPANSION(061 060 048 042 036)	13HPX
98M71	MOTOR-FAN(061)	13HPX
99M90	COMPRESSOR(061)	13HPX
	14HPX	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	14HPX
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	14HPX
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	14HPX
21J29	CAPACITOR-START(060)	14HPX
22W77	VALVE-EXPANSION(036)	14HPX
23W14	VALVE-EXPANSION(030 024 018)	14HPX
27W16	COMPRESSOR(030)	14HPX
29W09	CAPACITOR-FAN&RUN(060 048)	14HPX
29W60	MOTOR-FAN(060 048 042 036)	14HPX
31W72	VALVE-SERVICE(030 024 018)	14HPX
31W73	VALVE-SERVICE(048 042 036)	14HPX
31W74	VALVE-SERVICE(060)	14HPX
33W84	VALVE-EXPANSION(030 024 018)	14HPX
33W85	VALVE-EXPANSION(060 048 042 036)	14HPX
40W00	CONTROL-DEFROST(060 048 042 036 030 024 018)	14HPX
42W04	CONTROL-DEFROST(060 048 042 036 030 024 018)	14HPX
42W18	COIL-SOLENOID(060 048 042 036 030 024 018)	14HPX
42W58	VALVE-REVERSING(030 024 018)	14HPX
42W59	VALVE-REVERSING(060 048 042 036)	14HPX
44W62	HARNESS-COMP(030 024 018)	14HPX
47A60	CAPACITOR-START(048 042 036 030 024 018)	14HPX
47W86	MOTOR-FAN(030 024 018)	14HPX
49W62	VALVE-REVERSING(060 048 042 036)	14HPX
49W64	VALVE-REVERSING(030 024 018)	14HPX
49W65	COIL-SOLENOID(060 048 042 036 030 024 018)	14HPX
52W10	COMPRESSOR(024)	14HPX
52W33	COMPRESSOR(030)	14HPX
53W14	COMPRESSOR(018)	14HPX
63A06	CAPACITOR-START(060 048 042 036 030 024)	14HPX
66W09	VALVE-SERVICE(030 024 018)	14HPX
66W10	VALVE-SERVICE(048 042 036)	14HPX
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	14HPX
86M36	SWITCH-HI PRESS(060 048 042 036 030 024 018)	14HPX
88M10	VALVE-SERVICE(030 024 018)	14HPX
88M11	VALVE-SERVICE(048 042 036)	14HPX
88M12	VALVE-SERVICE(060)	14HPX
89M71	CAPACITOR-DUAL(018)	14HPX
89M74	CAPACITOR-FAN&RUN(024 018)	14HPX
89M83	CAPACITOR-FAN&RUN(042 036)	14HPX
95M54	THERMOSTAT(060 048 042 036)	14HPX

CAT#	DESCRIPTION	Unit
95M55	CONTACTOR(042 036 030 024 018)	14HPX
95M56	CONTACTOR(060 048 042)	14HPX
97M50	MOTOR-FAN(030 024 018)	14HPX
97M52	COMPRESSOR(018)	14HPX
97M53	COMPRESSOR(024)	14HPX
97M56	COMPRESSOR(042)	14HPX
97M57	COMPRESSOR(048)	14HPX
97M82	VALVE-REVERSING(030 024 018)	14HPX
97M83	VALVE-REVERSING(060 048 042 036)	14HPX
97M85	VALVE-EXPANSION(060 048 042)	14HPX
99M89	COMPRESSOR(036)	14HPX
99M90	COMPRESSOR(060)	14HPX
	2HP13B18P	
11W95	VALVE-SERVICE(1B 1A)	2HP13B18P
11W97	VALVE-SERVICE(1B 1A)	2HP13B18P
15M35	HARNESS-COMP(1B 1A)	2HP13B18P
17W11	THERMOSTAT(1B 1A)	2HP13B18P
17W13	VALVE-EXPANSION(1B 1A)	2HP13B18P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13B18P
75M49	COIL-SOLENOID(1B 1A)	2HP13B18P
89M70	CAPACITOR-DUAL(1B 1A)	2HP13B18P
95M55	CONTACTOR(1B 1A)	2HP13B18P
97M50	MOTOR-FAN(1B 1A)	2HP13B18P
98M42	VALVE-REVERSING(1B 1A)	2HP13B18P
98M68	COMPRESSOR(1B 1A)	2HP13B18P
	2HP13B24P	
11W95	VALVE-SERVICE(1B 1A)	2HP13B24P
11W97	VALVE-SERVICE(1B 1A)	2HP13B24P
15M35	HARNESS-COMP(1B 1A)	2HP13B24P
17W11	THERMOSTAT(1B 1A)	2HP13B24P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13B24P
75M49	COIL-SOLENOID(1B 1A)	2HP13B24P
89M79	CAPACITOR(1B 1A)	2HP13B24P
95M55	CONTACTOR(1B 1A)	2HP13B24P
97M50	MOTOR-FAN(1B 1A)	2HP13B24P
98M42	VALVE-REVERSING(1B 1A)	2HP13B24P
98M63	COMPRESSOR(1B 1A)	2HP13B24P
	2HP13B30P	
11W95	VALVE-SERVICE(1B 1A)	2HP13B30P
11W97	VALVE-SERVICE(1B 1A)	2HP13B30P
15M35	HARNESS-COMP(1B 1A)	2HP13B30P

CAT#	DESCRIPTION	Unit
17W09	COMPRESSOR(1B 1A)	2HP13B30P
17W11	THERMOSTAT(1B 1A)	2HP13B30P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13B30P
75M49	COIL-SOLENOID(1B 1A)	2HP13B30P
89M76	CAPACITOR(1B 1A)	2HP13B30P
95M55	CONTACTOR(1B 1A)	2HP13B30P
95M91	VALVE-REVERSING(1B 1A)	2HP13B30P
97M49	MOTOR-FAN(1B 1A)	2HP13B30P
	2HP13B36P	
11W95	VALVE-SERVICE(1C 1B 1A)	2HP13B36P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13B36P
15M35	HARNESS-COMP(1C 1B 1A)	2HP13B36P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13B36P
17W11	THERMOSTAT(1C 1B 1A)	2HP13B36P
30W87	CONTROL-DEFROST(1C)	2HP13B36P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13B36P
42W18	COIL-SOLENOID(1C)	2HP13B36P
42W59	VALVE-REVERSING(1C)	2HP13B36P
75M49	COIL-SOLENOID(1B 1A)	2HP13B36P
89M81	CAPACITOR(1C 1B 1A)	2HP13B36P
95M55	CONTACTOR(1C 1B 1A)	2HP13B36P
97M83	VALVE-REVERSING(1B 1A)	2HP13B36P
98M65	COMPRESSOR(1C 1B 1A)	2HP13B36P
	2HP13B36T	
11W95	VALVE-SERVICE(1C 1B 1A)	2HP13B36T
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13B36T
15M35	HARNESS-COMP(1C 1B 1A)	2HP13B36T
17W10	MOTOR-FAN(1C 1B 1A)	2HP13B36T
17W11	THERMOSTAT(1C 1B 1A)	2HP13B36T
30W87	CONTROL-DEFROST(1C)	2HP13B36T
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13B36T
42W18	COIL-SOLENOID(1C)	2HP13B36T
42W59	VALVE-REVERSING(1C)	2HP13B36T
75M49	COIL-SOLENOID(1B 1A)	2HP13B36T
89M81	CAPACITOR(1C 1B 1A)	2HP13B36T
95M55	CONTACTOR(1C 1B 1A)	2HP13B36T
97M83	VALVE-REVERSING(1B 1A)	2HP13B36T
98M65	COMPRESSOR(1C 1B 1A)	2HP13B36T
	2HP13B42P	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13B42P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13B42P

CAT#	DESCRIPTION	Unit
15M35	HARNESS-COMP(1C 1B 1A)	2HP13B42P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13B42P
17W11	THERMOSTAT(1C 1B 1A)	2HP13B42P
30W87	CONTROL-DEFROST(1C)	2HP13B42P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13B42P
41W12	CAPACITOR(1C 1B 1A)	2HP13B42P
42W18	COIL-SOLENOID(1C)	2HP13B42P
42W59	VALVE-REVERSING(1C)	2HP13B42P
75M49	COIL-SOLENOID(1B 1A)	2HP13B42P
95M55	CONTACTOR(1C 1B 1A)	2HP13B42P
97M83	VALVE-REVERSING(1B 1A)	2HP13B42P
97M94	COMPRESSOR(1C 1B 1A)	2HP13B42P
	2HP13B48P	
10W36	CAPACITOR-DUAL(1B 1A)	2HP13B48P
11W96	VALVE-SERVICE(1B 1A)	2HP13B48P
11W97	VALVE-SERVICE(1B 1A)	2HP13B48P
15M35	HARNESS-COMP(1B 1A)	2HP13B48P
17W10	MOTOR-FAN(1B 1A)	2HP13B48P
17W11	THERMOSTAT(1B 1A)	2HP13B48P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13B48P
75M49	COIL-SOLENOID(1B 1A)	2HP13B48P
95M55	CONTACTOR(1B 1A)	2HP13B48P
97M83	VALVE-REVERSING(1B 1A)	2HP13B48P
97M95	COMPRESSOR(1B 1A)	2HP13B48P
	2HP13B48T	
10W36	CAPACITOR-DUAL(1B 1A)	2HP13B48T
11W96	VALVE-SERVICE(1B 1A)	2HP13B48T
11W97	VALVE-SERVICE(1B 1A)	2HP13B48T
15M35	HARNESS-COMP(1B 1A)	2HP13B48T
17W10	MOTOR-FAN(1B 1A)	2HP13B48T
17W11	THERMOSTAT(1B 1A)	2HP13B48T
32W87	SWITCH-LO PRESS(1B 1A)	2HP13B48T
75M49	COIL-SOLENOID(1B 1A)	2HP13B48T
95M55	CONTACTOR(1B 1A)	2HP13B48T
97M83	VALVE-REVERSING(1B 1A)	2HP13B48T
97M95	COMPRESSOR(1B 1A)	2HP13B48T
	2HP13B60P	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13B60P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13B60P
15M35	HARNESS-COMP(1C 1B 1A)	2HP13B60P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13B60P

CAT#	DESCRIPTION	Unit
17W11	THERMOSTAT(1C 1B 1A)	2HP13B60P
30W87	CONTROL-DEFROST(1C)	2HP13B60P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13B60P
42W18	COIL-SOLENOID(1C)	2HP13B60P
42W59	VALVE-REVERSING(1C)	2HP13B60P
75M49	COIL-SOLENOID(1B 1A)	2HP13B60P
89M85	CAPACITOR(1C 1B 1A)	2HP13B60P
95M56	CONTACTOR(1C 1B 1A)	2HP13B60P
97M83	VALVE-REVERSING(1B 1A)	2HP13B60P
97M92	COMPRESSOR(1C 1B 1A)	2HP13B60P
	2HP13B60T	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13B60T
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13B60T
15M35	HARNESS-COMP(1C 1B 1A)	2HP13B60T
17W10	MOTOR-FAN(1C 1B 1A)	2HP13B60T
17W11	THERMOSTAT(1C 1B 1A)	2HP13B60T
30W87	CONTROL-DEFROST(1C)	2HP13B60T
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13B60T
42W18	COIL-SOLENOID(1C)	2HP13B60T
42W59	VALVE-REVERSING(1C)	2HP13B60T
75M49	COIL-SOLENOID(1B 1A)	2HP13B60T
89M85	CAPACITOR(1C 1B 1A)	2HP13B60T
95M56	CONTACTOR(1C 1B 1A)	2HP13B60T
97M83	VALVE-REVERSING(1B 1A)	2HP13B60T
97M92	COMPRESSOR(1C 1B 1A)	2HP13B60T
	2HP13L18P	
11W95	VALVE-SERVICE(1B 1A)	2HP13L18P
11W97	VALVE-SERVICE(1B 1A)	2HP13L18P
15M35	HARNESS-COMP(1B 1A)	2HP13L18P
17W11	THERMOSTAT(1B 1A)	2HP13L18P
17W13	VALVE-EXPANSION(1B 1A)	2HP13L18P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13L18P
75M49	COIL-SOLENOID(1B 1A)	2HP13L18P
89M70	CAPACITOR-DUAL(1B 1A)	2HP13L18P
95M55	CONTACTOR(1B 1A)	2HP13L18P
97M50	MOTOR-FAN(1B 1A)	2HP13L18P
98M42	VALVE-REVERSING(1B 1A)	2HP13L18P
98M68	COMPRESSOR(1B 1A)	2HP13L18P
	2HP13L24P	
11W95	VALVE-SERVICE(1B 1A)	2HP13L24P
11W97	VALVE-SERVICE(1B 1A)	2HP13L24P

CAT#	DESCRIPTION	Unit
15M35	HARNESS-COMP(1B 1A)	2HP13L24P
17W11	THERMOSTAT(1B 1A)	2HP13L24P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13L24P
75M49	COIL-SOLENOID(1B 1A)	2HP13L24P
89M79	CAPACITOR(1B 1A)	2HP13L24P
95M55	CONTACTOR(1B 1A)	2HP13L24P
97M50	MOTOR-FAN(1B 1A)	2HP13L24P
98M42	VALVE-REVERSING(1B 1A)	2HP13L24P
98M63	COMPRESSOR(1B 1A)	2HP13L24P
	2HP13L30P	
11W95	VALVE-SERVICE(1B 1A)	2HP13L30P
11W97	VALVE-SERVICE(1B 1A)	2HP13L30P
15M35	HARNESS-COMP(1B 1A)	2HP13L30P
17W09	COMPRESSOR(1B 1A)	2HP13L30P
17W11	THERMOSTAT(1B 1A)	2HP13L30P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13L30P
75M49	COIL-SOLENOID(1B 1A)	2HP13L30P
89M76	CAPACITOR(1B 1A)	2HP13L30P
95M55	CONTACTOR(1B 1A)	2HP13L30P
95M91	VALVE-REVERSING(1B 1A)	2HP13L30P
97M49	MOTOR-FAN(1B 1A)	2HP13L30P
	HEATINGANDAIRPARTS.COM	
	2HP13L36P	
11W95	VALVE-SERVICE(1C 1B 1A)	2HP13L36P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13L36P
15M35	HARNESS-COMP(1C 1B 1A)	2HP13L36P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13L36P
17W11	THERMOSTAT(1C 1B 1A)	2HP13L36P
30W87	CONTROL-DEFROST(1C)	2HP13L36P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13L36P
42W18	COIL-SOLENOID(1C)	2HP13L36P
42W59	VALVE-REVERSING(1C)	2HP13L36P
75M49	COIL-SOLENOID(1B 1A)	2HP13L36P
89M81	CAPACITOR(1C 1B 1A)	2HP13L36P
95M55	CONTACTOR(1C 1B 1A)	2HP13L36P
97M83	VALVE-REVERSING(1B 1A)	2HP13L36P
98M65	COMPRESSOR(1C 1B 1A)	2HP13L36P
	2HP13L36T	
11W95	VALVE-SERVICE(1C 1B 1A)	2HP13L36T
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13L36T
15M35	HARNESS-COMP(1C 1B 1A)	2HP13L36T
17W10	MOTOR-FAN(1C 1B 1A)	2HP13L36T

CAT#	DESCRIPTION	Unit
17W11	THERMOSTAT(1C 1B 1A)	2HP13L36T
30W87	CONTROL-DEFROST(1C)	2HP13L36T
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13L36T
42W18	COIL-SOLENOID(1C)	2HP13L36T
42W59	VALVE-REVERSING(1C)	2HP13L36T
75M49	COIL-SOLENOID(1B 1A)	2HP13L36T
89M81	CAPACITOR(1C 1B 1A)	2HP13L36T
95M55	CONTACTOR(1C 1B 1A)	2HP13L36T
97M83	VALVE-REVERSING(1B 1A)	2HP13L36T
98M65	COMPRESSOR(1C 1B 1A)	2HP13L36T
	2HP13L42P	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13L42P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13L42P
15M35	HARNESS-COMP(1C 1B 1A)	2HP13L42P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13L42P
17W11	THERMOSTAT(1C 1B 1A)	2HP13L42P
30W87	CONTROL-DEFROST(1C)	2HP13L42P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13L42P
41W12	CAPACITOR(1C 1B 1A)	2HP13L42P
42W18	COIL-SOLENOID(1C)	2HP13L42P
42W59	VALVE-REVERSING(1C)	2HP13L42P
75M49	COIL-SOLENOID(1B 1A)	2HP13L42P
95M55	CONTACTOR(1C 1B 1A)	2HP13L42P
97M83	VALVE-REVERSING(1B 1A)	2HP13L42P
97M94	COMPRESSOR(1C 1B 1A)	2HP13L42P
	2HP13L48P	
10W36	CAPACITOR-DUAL(1B 1A)	2HP13L48P
11W96	VALVE-SERVICE(1B 1A)	2HP13L48P
11W97	VALVE-SERVICE(1B 1A)	2HP13L48P
15M35	HARNESS-COMP(1B 1A)	2HP13L48P
17W10	MOTOR-FAN(1B 1A)	2HP13L48P
17W11	THERMOSTAT(1B 1A)	2HP13L48P
32W87	SWITCH-LO PRESS(1B 1A)	2HP13L48P
75M49	COIL-SOLENOID(1B 1A)	2HP13L48P
95M55	CONTACTOR(1B 1A)	2HP13L48P
97M83	VALVE-REVERSING(1B 1A)	2HP13L48P
97M95	COMPRESSOR(1B 1A)	2HP13L48P
	2HP13L48T	
10W36	CAPACITOR-DUAL(1B 1A)	2HP13L48T
11W96	VALVE-SERVICE(1B 1A)	2HP13L48T
11W97	VALVE-SERVICE(1B 1A)	2HP13L48T

CAT#	DESCRIPTION	Unit
15M35	HARNESS-COMP(1B 1A)	2HP13L48T
17W10	MOTOR-FAN(1B 1A)	2HP13L48T
17W11	THERMOSTAT(1B 1A)	2HP13L48T
32W87	SWITCH-LO PRESS(1B 1A)	2HP13L48T
75M49	COIL-SOLENOID(1B 1A)	2HP13L48T
95M55	CONTACTOR(1B 1A)	2HP13L48T
97M83	VALVE-REVERSING(1B 1A)	2HP13L48T
97M95	COMPRESSOR(1B 1A)	2HP13L48T
	2HP13L60P	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13L60P
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13L60P
15M35	HARNESS-COMP(1C 1B 1A)	2HP13L60P
17W10	MOTOR-FAN(1C 1B 1A)	2HP13L60P
17W11	THERMOSTAT(1C 1B 1A)	2HP13L60P
30W87	CONTROL-DEFROST(1C)	2HP13L60P
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13L60P
42W18	COIL-SOLENOID(1C)	2HP13L60P
42W59	VALVE-REVERSING(1C)	2HP13L60P
75M49	COIL-SOLENOID(1B 1A)	2HP13L60P
89M85	CAPACITOR(1C 1B 1A)	2HP13L60P
95M56	CONTACTOR(1C 1B 1A)	2HP13L60P
97M83	VALVE-REVERSING(1B 1A)	2HP13L60P
97M92	COMPRESSOR(1C 1B 1A)	2HP13L60P
	2HP13L60T	
11W96	VALVE-SERVICE(1C 1B 1A)	2HP13L60T
11W97	VALVE-SERVICE(1C 1B 1A)	2HP13L60T
15M35	HARNESS-COMP(1C 1B 1A)	2HP13L60T
17W10	MOTOR-FAN(1C 1B 1A)	2HP13L60T
17W11	THERMOSTAT(1C 1B 1A)	2HP13L60T
30W87	CONTROL-DEFROST(1C)	2HP13L60T
32W87	SWITCH-LO PRESS(1C 1B 1A)	2HP13L60T
42W18	COIL-SOLENOID(1C)	2HP13L60T
42W59	VALVE-REVERSING(1C)	2HP13L60T
75M49	COIL-SOLENOID(1B 1A)	2HP13L60T
89M85	CAPACITOR(1C 1B 1A)	2HP13L60T
95M56	CONTACTOR(1C 1B 1A)	2HP13L60T
97M83	VALVE-REVERSING(1B 1A)	2HP13L60T
97M92	COMPRESSOR(1C 1B 1A)	2HP13L60T
	4HP13B18P	
10W32	VALVE-SERVICE(6A 5A 4A 3A 2A)	4HP13B18P
11W95	VALVE-SERVICE(1A)	4HP13B18P

CAT#	DESCRIPTION	Unit
11W97	VALVE-SERVICE(1A)	4HP13B18P
15M35	HARNESS-COMP(2A 1A)	4HP13B18P
23W26	SWITCH-LO PRESS(6A 5A 4A 3A 2A)	4HP13B18P
30W87	CONTROL-DEFROST(6A 5A 4A 3A 2A 1A)	4HP13B18P
31W72	VALVE-SERVICE(4A 3A)	4HP13B18P
33W84	VALVE-EXPANSION(6A 5A 4A 3A 2A)	4HP13B18P
42W18	COIL-SOLENOID(6A 5A 4A 3A 2A 1A)	4HP13B18P
42W58	VALVE-REVERSING(5A 4A 3A 2A 1A)	4HP13B18P
43W49	MOTOR-FAN(6A 5A 3A 2A)	4HP13B18P
44W62	HARNESS-COMP(6A 5A 4A 3A)	4HP13B18P
50W82	VALVE-EXPANSION(1A)	4HP13B18P
53W14	COMPRESSOR(6A 5A 4A 3A)	4HP13B18P
66W09	VALVE-SERVICE(2A)	4HP13B18P
86M36	SWITCH-HI PRESS(4A 3A 2A 1A)	4HP13B18P
88M97	SWITCH-LO PRESS(1A)	4HP13B18P
89M70	CAPACITOR-DUAL(1A)	4HP13B18P
89M71	CAPACITOR-DUAL(2A)	4HP13B18P
89M74	CAPACITOR-FAN&RUN(6A 5A 4A 3A)	4HP13B18P
95M55	CONTACTOR(6A 5A 4A 3A 2A 1A)	4HP13B18P
97M50	MOTOR-FAN(1A)	4HP13B18P
97M52	COMPRESSOR(2A 1A)	4HP13B18P
97M60	THERMOSTAT(6A 5A 4A 3A 2A 1A)	4HP13B18P
97M62	MOTOR-FAN(4A)	4HP13B18P
HEATINGANDAIRPARTS.COM		
4HP13B24P		
10W32	VALVE-SERVICE(5A 4A 3A 2A)	4HP13B24P
11W95	VALVE-SERVICE(1A)	4HP13B24P
11W97	VALVE-SERVICE(1A)	4HP13B24P
15M35	HARNESS-COMP(2A)	4HP13B24P
17W11	THERMOSTAT(1A)	4HP13B24P
23W26	SWITCH-LO PRESS(5A 4A 3A 2A)	4HP13B24P
30W87	CONTROL-DEFROST(5A 4A 3A 2A 1A)	4HP13B24P
33W84	VALVE-EXPANSION(5A 4A 3A 2A)	4HP13B24P
34W45	VALVE-REVERSING(1A)	4HP13B24P
42W18	COIL-SOLENOID(5A 4A 3A 2A 1A)	4HP13B24P
42W58	VALVE-REVERSING(4A 3A 2A)	4HP13B24P
43W49	MOTOR-FAN(5A 4A 3A 2A)	4HP13B24P
44W62	HARNESS-COMP(5A 4A 3A)	4HP13B24P
49W16	COMPRESSOR(1A)	4HP13B24P
49W22	HARNESS-COMP(1A)	4HP13B24P
52W10	COMPRESSOR(5A 4A 3A)	4HP13B24P
66W09	VALVE-SERVICE(3A 2A)	4HP13B24P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B24P
88M97	SWITCH-LO PRESS(1A)	4HP13B24P
89M73	CAPACITOR-DUAL(1A)	4HP13B24P
89M74	CAPACITOR-FAN&RUN(5A 4A 3A 2A)	4HP13B24P

CAT#	DESCRIPTION	Unit
95M55	CONTACTOR(5A 4A 3A 2A 1A)	4HP13B24P
97M50	MOTOR-FAN(1A)	4HP13B24P
97M53	COMPRESSOR(2A)	4HP13B24P
97M60	THERMOSTAT(5A 4A 3A 2A)	4HP13B24P
	4HP13B30P	
10W32	VALVE-SERVICE(5A 4A 3A 2A)	4HP13B30P
11W95	VALVE-SERVICE(1A)	4HP13B30P
11W97	VALVE-SERVICE(1A)	4HP13B30P
15M35	HARNESS-COMP(2A)	4HP13B30P
17W11	THERMOSTAT(2A 1A)	4HP13B30P
23W26	SWITCH-LO PRESS(5A 4A 3A)	4HP13B30P
30W87	CONTROL-DEFROST(5A 4A 3A 2A 1A)	4HP13B30P
31W72	VALVE-SERVICE(3A)	4HP13B30P
31W73	VALVE-SERVICE(2A)	4HP13B30P
33W84	VALVE-EXPANSION(5A 4A 3A 2A)	4HP13B30P
34W44	VALVE-REVERSING(2A 1A)	4HP13B30P
42W18	COIL-SOLENOID(5A 4A 3A 2A 1A)	4HP13B30P
42W58	VALVE-REVERSING(4A 3A)	4HP13B30P
43W49	MOTOR-FAN(5A 4A 3A 2A)	4HP13B30P
44W62	HARNESS-COMP(5A 4A 3A)	4HP13B30P
49W17	COMPRESSOR(1A)	4HP13B30P
49W22	HARNESS-COMP(1A)	4HP13B30P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B30P
88M97	SWITCH-LO PRESS(1A)	4HP13B30P
89M73	CAPACITOR-DUAL(1A)	4HP13B30P
95M55	CONTACTOR(5A 4A 3A 2A 1A)	4HP13B30P
97M49	MOTOR-FAN(1A)	4HP13B30P
97M54	COMPRESSOR(2A)	4HP13B30P
97M60	THERMOSTAT(5A 4A 3A)	4HP13B30P
	4HP13B36P	
10W32	VALVE-SERVICE(7A 4A 3A 2A)	4HP13B36P
11W95	VALVE-SERVICE(1A)	4HP13B36P
11W97	VALVE-SERVICE(1A)	4HP13B36P
15M35	HARNESS-COMP(2A)	4HP13B36P
17W10	MOTOR-FAN(1A)	4HP13B36P
17W11	THERMOSTAT(1A)	4HP13B36P
23W26	SWITCH-LO PRESS(7A 4A 3A 2A)	4HP13B36P
30W87	CONTROL-DEFROST(7A 4A 3A 2A 1A)	4HP13B36P
31W73	VALVE-SERVICE(3A 2A)	4HP13B36P
33W85	VALVE-EXPANSION(7A 4A 3A 2A)	4HP13B36P
41W93	HARNESS-COMP(1A)	4HP13B36P
42W18	COIL-SOLENOID(7A 4A 3A 2A 1A)	4HP13B36P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13B36P

CAT#	DESCRIPTION	Unit
43W49	MOTOR-FAN(4A 3A 2A)	4HP13B36P
43W86	COMPRESSOR(4A 3A)	4HP13B36P
44W62	HARNESS-COMP(7A 4A 3A)	4HP13B36P
46W12	CAPACITOR(1A)	4HP13B36P
49W18	COMPRESSOR(1A)	4HP13B36P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B36P
88M97	SWITCH-LO PRESS(1A)	4HP13B36P
89M80	CAPACITOR-FAN&RUN(7A 4A 3A 2A)	4HP13B36P
95M55	CONTACTOR(7A 4A 3A 2A 1A)	4HP13B36P
97M55	COMPRESSOR(2A)	4HP13B36P
97M60	THERMOSTAT(7A 4A 3A 2A)	4HP13B36P
	4HP13B42P	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13B42P
11W96	VALVE-SERVICE(1A)	4HP13B42P
11W97	VALVE-SERVICE(1A)	4HP13B42P
15M35	HARNESS-COMP(2A)	4HP13B42P
17W10	MOTOR-FAN(1A)	4HP13B42P
17W11	THERMOSTAT(1A)	4HP13B42P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13B42P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13B42P
31W73	VALVE-SERVICE(3A 2A)	4HP13B42P
33W84	VALVE-EXPANSION(3A 2A)	4HP13B42P
33W85	VALVE-EXPANSION(4A)	4HP13B42P
41W93	HARNESS-COMP(1A)	4HP13B42P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13B42P
42W58	VALVE-REVERSING(4A 3A 2A)	4HP13B42P
42W59	VALVE-REVERSING(1A)	4HP13B42P
44W62	HARNESS-COMP(4A 3A)	4HP13B42P
46W12	CAPACITOR(1A)	4HP13B42P
49W19	COMPRESSOR(1A)	4HP13B42P
52W44	COMPRESSOR(4A 3A)	4HP13B42P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B42P
88M97	SWITCH-LO PRESS(1A)	4HP13B42P
89M82	CAPACITOR-FAN&RUN(4A 3A 2A)	4HP13B42P
95M55	CONTACTOR(1A)	4HP13B42P
95M56	CONTACTOR(4A 3A 2A)	4HP13B42P
97M56	COMPRESSOR(2A)	4HP13B42P
97M60	THERMOSTAT(4A 3A 2A)	4HP13B42P
	4HP13B48P	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13B48P
11W96	VALVE-SERVICE(1A)	4HP13B48P
11W97	VALVE-SERVICE(1A)	4HP13B48P
15M35	HARNESS-COMP(2A)	4HP13B48P

CAT#	DESCRIPTION	Unit
17W10	MOTOR-FAN(1A)	4HP13B48P
17W11	THERMOSTAT(1A)	4HP13B48P
21W82	CAPACITOR-FAN&RUN(4A 3A 2A)	4HP13B48P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13B48P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13B48P
31W73	VALVE-SERVICE(3A 2A)	4HP13B48P
33W85	VALVE-EXPANSION(4A 3A 2A)	4HP13B48P
41W13	CAPACITOR(1A)	4HP13B48P
41W93	HARNESS-COMP(1A)	4HP13B48P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13B48P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13B48P
44W62	HARNESS-COMP(4A 3A)	4HP13B48P
49W20	COMPRESSOR(1A)	4HP13B48P
52W11	COMPRESSOR(4A 3A)	4HP13B48P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B48P
88M97	SWITCH-LO PRESS(1A)	4HP13B48P
95M55	CONTACTOR(1A)	4HP13B48P
95M56	CONTACTOR(4A 3A 2A)	4HP13B48P
97M57	COMPRESSOR(2A)	4HP13B48P
97M60	THERMOSTAT(4A 3A 2A)	4HP13B48P
	4HP13B60P	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13B60P
11W96	VALVE-SERVICE(1A)	4HP13B60P
11W97	VALVE-SERVICE(1A)	4HP13B60P
15M35	HARNESS-COMP(2A)	4HP13B60P
17W10	MOTOR-FAN(1A)	4HP13B60P
17W11	THERMOSTAT(1A)	4HP13B60P
21W81	CAPACITOR-FAN&RUN(4A 3A 2A)	4HP13B60P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13B60P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13B60P
31W74	VALVE-SERVICE(3A 2A)	4HP13B60P
33W85	VALVE-EXPANSION(3A 2A)	4HP13B60P
41W93	HARNESS-COMP(1A)	4HP13B60P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13B60P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13B60P
43W22	VALVE-EXPANSION(4A)	4HP13B60P
43W87	COMPRESSOR(4A 3A)	4HP13B60P
44W62	HARNESS-COMP(4A 3A)	4HP13B60P
49W21	COMPRESSOR(1A)	4HP13B60P
49W86	MOTOR-FAN(4A 3A 2A)	4HP13B60P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13B60P
88M97	SWITCH-LO PRESS(1A)	4HP13B60P
89M84	CAPACITOR(1A)	4HP13B60P
95M56	CONTACTOR(4A 3A 2A 1A)	4HP13B60P
97M58	COMPRESSOR(2A)	4HP13B60P

CAT#	DESCRIPTION	Unit
97M60	THERMOSTAT(4A 3A 2A)	4HP13B60P
	4HP13L18P	
10W32	VALVE-SERVICE(6A 5A 4A 3A 2A)	4HP13L18P
11W95	VALVE-SERVICE(1A)	4HP13L18P
11W97	VALVE-SERVICE(1A)	4HP13L18P
15M35	HARNESS-COMP(2A 1A)	4HP13L18P
23W26	SWITCH-LO PRESS(6A 5A 4A 3A 2A)	4HP13L18P
30W87	CONTROL-DEFROST(6A 5A 4A 3A 2A 1A)	4HP13L18P
31W72	VALVE-SERVICE(4A)	4HP13L18P
33W84	VALVE-EXPANSION(6A 5A 4A 3A 2A)	4HP13L18P
34W45	VALVE-REVERSING(2A)	4HP13L18P
42W18	COIL-SOLENOID(6A 5A 4A 3A 2A 1A)	4HP13L18P
42W58	VALVE-REVERSING(5A 4A 3A 1A)	4HP13L18P
43W49	MOTOR-FAN(6A 5A 4A 2A)	4HP13L18P
44W62	HARNESS-COMP(6A 5A 4A 3A)	4HP13L18P
50W82	VALVE-EXPANSION(1A)	4HP13L18P
53W14	COMPRESSOR(6A 5A 4A 3A)	4HP13L18P
66W09	VALVE-SERVICE(3A 2A)	4HP13L18P
86M36	SWITCH-HI PRESS(4A 3A 2A 1A)	4HP13L18P
88M97	SWITCH-LO PRESS(1A)	4HP13L18P
89M70	CAPACITOR-DUAL(1A)	4HP13L18P
89M71	CAPACITOR-DUAL(2A)	4HP13L18P
89M74	CAPACITOR-FAN&RUN(6A 5A 4A 3A)	4HP13L18P
95M55	CONTACTOR(6A 5A 4A 3A 2A 1A)	4HP13L18P
95M91	VALVE-REVERSING(2A)	4HP13L18P
97M50	MOTOR-FAN(1A)	4HP13L18P
97M52	COMPRESSOR(2A 1A)	4HP13L18P
97M60	THERMOSTAT(6A 5A 4A 3A 2A 1A)	4HP13L18P
97M62	MOTOR-FAN(3A)	4HP13L18P
	4HP13L24P	
10W32	VALVE-SERVICE(5A 4A 3A 2A)	4HP13L24P
11W95	VALVE-SERVICE(1A)	4HP13L24P
11W97	VALVE-SERVICE(1A)	4HP13L24P
15M35	HARNESS-COMP(2A)	4HP13L24P
17W11	THERMOSTAT(1A)	4HP13L24P
23W26	SWITCH-LO PRESS(5A 4A 3A 2A)	4HP13L24P
30W87	CONTROL-DEFROST(5A 4A 3A 2A 1A)	4HP13L24P
31W72	VALVE-SERVICE(3A 2A)	4HP13L24P
33W84	VALVE-EXPANSION(5A 4A 3A 2A)	4HP13L24P
34W45	VALVE-REVERSING(1A)	4HP13L24P
42W18	COIL-SOLENOID(5A 4A 3A 2A 1A)	4HP13L24P
42W58	VALVE-REVERSING(4A 3A 2A)	4HP13L24P
43W49	MOTOR-FAN(5A 4A 2A)	4HP13L24P

CAT#	DESCRIPTION	Unit
44W62	HARNESS-COMP(5A 4A 3A)	4HP13L24P
49W16	COMPRESSOR(1A)	4HP13L24P
49W22	HARNESS-COMP(1A)	4HP13L24P
52W10	COMPRESSOR(5A 4A 3A)	4HP13L24P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L24P
88M97	SWITCH-LO PRESS(1A)	4HP13L24P
89M73	CAPACITOR-DUAL(1A)	4HP13L24P
89M74	CAPACITOR-FAN&RUN(5A 4A 3A 2A)	4HP13L24P
95M55	CONTACTOR(5A 4A 3A 2A 1A)	4HP13L24P
97M50	MOTOR-FAN(1A)	4HP13L24P
97M53	COMPRESSOR(2A)	4HP13L24P
97M60	THERMOSTAT(5A 4A 3A 2A)	4HP13L24P
97M62	MOTOR-FAN(3A)	4HP13L24P
	4HP13L30P	
10W32	VALVE-SERVICE(5A 4A 3A 2A)	4HP13L30P
11W95	VALVE-SERVICE(1A)	4HP13L30P
11W97	VALVE-SERVICE(1A)	4HP13L30P
15M35	HARNESS-COMP(2A)	4HP13L30P
17W11	THERMOSTAT(1A)	4HP13L30P
23W26	SWITCH-LO PRESS(5A 4A 3A 2A)	4HP13L30P
30W87	CONTROL-DEFROST(5A 4A 3A 2A 1A)	4HP13L30P
31W72	VALVE-SERVICE(3A 2A)	4HP13L30P
33W84	VALVE-EXPANSION(5A 4A 3A 2A)	4HP13L30P
34W44	VALVE-REVERSING(1A)	4HP13L30P
42W18	COIL-SOLENOID(5A 4A 3A 2A 1A)	4HP13L30P
42W58	VALVE-REVERSING(4A 3A 2A)	4HP13L30P
43W49	MOTOR-FAN(5A 4A 3A 2A)	4HP13L30P
44W62	HARNESS-COMP(5A 4A 3A)	4HP13L30P
49W17	COMPRESSOR(1A)	4HP13L30P
49W22	HARNESS-COMP(1A)	4HP13L30P
52W33	COMPRESSOR(5A 4A 3A)	4HP13L30P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L30P
88M97	SWITCH-LO PRESS(1A)	4HP13L30P
89M73	CAPACITOR-DUAL(1A)	4HP13L30P
95M55	CONTACTOR(5A 4A 3A 2A 1A)	4HP13L30P
97M49	MOTOR-FAN(1A)	4HP13L30P
97M54	COMPRESSOR(2A)	4HP13L30P
97M60	THERMOSTAT(5A 4A 3A 2A)	4HP13L30P
	4HP13L36P	
10W32	VALVE-SERVICE(7A 4A 3A 2A)	4HP13L36P
11W95	VALVE-SERVICE(1A)	4HP13L36P
11W97	VALVE-SERVICE(1A)	4HP13L36P
15M35	HARNESS-COMP(2A)	4HP13L36P

CAT#	DESCRIPTION	Unit
17W10	MOTOR-FAN(1A)	4HP13L36P
17W11	THERMOSTAT(1A)	4HP13L36P
23W26	SWITCH-LO PRESS(7A 4A 3A 2A)	4HP13L36P
30W87	CONTROL-DEFROST(7A 4A 3A 2A 1A)	4HP13L36P
31W73	VALVE-SERVICE(3A 2A)	4HP13L36P
33W85	VALVE-EXPANSION(7A 4A 3A 2A)	4HP13L36P
41W93	HARNESS-COMP(1A)	4HP13L36P
42W18	COIL-SOLENOID(7A 4A 3A 2A 1A)	4HP13L36P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13L36P
43W49	MOTOR-FAN(4A)	4HP13L36P
43W86	COMPRESSOR(4A 3A)	4HP13L36P
44W62	HARNESS-COMP(7A 4A 3A)	4HP13L36P
46W12	CAPACITOR(1A)	4HP13L36P
49W18	COMPRESSOR(1A)	4HP13L36P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L36P
88M97	SWITCH-LO PRESS(1A)	4HP13L36P
89M80	CAPACITOR-FAN&RUN(7A 4A 3A 2A)	4HP13L36P
95M55	CONTACTOR(7A 4A 3A 2A 1A)	4HP13L36P
97M49	MOTOR-FAN(3A 2A)	4HP13L36P
97M55	COMPRESSOR(2A)	4HP13L36P
97M60	THERMOSTAT(7A 4A 3A 2A)	4HP13L36P
	4HP13L42P	
	HEATINGANDAIRPARTS.COM	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13L42P
11W96	VALVE-SERVICE(1A)	4HP13L42P
11W97	VALVE-SERVICE(1A)	4HP13L42P
15M35	HARNESS-COMP(2A)	4HP13L42P
17W10	MOTOR-FAN(1A)	4HP13L42P
17W11	THERMOSTAT(1A)	4HP13L42P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13L42P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13L42P
31W73	VALVE-SERVICE(3A 2A)	4HP13L42P
33W85	VALVE-EXPANSION(4A 3A 2A)	4HP13L42P
41W93	HARNESS-COMP(1A)	4HP13L42P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13L42P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13L42P
44W62	HARNESS-COMP(4A 3A)	4HP13L42P
46W12	CAPACITOR(1A)	4HP13L42P
49W19	COMPRESSOR(1A)	4HP13L42P
52W44	COMPRESSOR(4A 3A)	4HP13L42P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L42P
88M97	SWITCH-LO PRESS(1A)	4HP13L42P
89M82	CAPACITOR-FAN&RUN(4A 3A 2A)	4HP13L42P
95M55	CONTACTOR(1A)	4HP13L42P
95M56	CONTACTOR(4A 3A 2A)	4HP13L42P
97M56	COMPRESSOR(2A)	4HP13L42P
97M60	THERMOSTAT(4A 3A 2A)	4HP13L42P

CAT#	DESCRIPTION	Unit
97M62	MOTOR-FAN(3A 2A)	4HP13L42P
	4HP13L48P	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13L48P
11W96	VALVE-SERVICE(1A)	4HP13L48P
11W97	VALVE-SERVICE(1A)	4HP13L48P
15M35	HARNESS-COMP(2A)	4HP13L48P
17W10	MOTOR-FAN(1A)	4HP13L48P
17W11	THERMOSTAT(1A)	4HP13L48P
21W82	CAPACITOR-FAN&RUN(4A 3A 2A)	4HP13L48P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13L48P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13L48P
31W73	VALVE-SERVICE(3A 2A)	4HP13L48P
33W85	VALVE-EXPANSION(4A 3A 2A)	4HP13L48P
41W13	CAPACITOR(1A)	4HP13L48P
41W93	HARNESS-COMP(1A)	4HP13L48P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13L48P
42W58	VALVE-REVERSING(3A)	4HP13L48P
42W59	VALVE-REVERSING(4A 2A 1A)	4HP13L48P
44W62	HARNESS-COMP(4A 3A)	4HP13L48P
49W20	COMPRESSOR(1A)	4HP13L48P
52W11	COMPRESSOR(4A 3A)	4HP13L48P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L48P
88M97	SWITCH-LO PRESS(1A)	4HP13L48P
95M55	CONTACTOR(1A)	4HP13L48P
95M56	CONTACTOR(4A 3A 2A)	4HP13L48P
97M57	COMPRESSOR(2A)	4HP13L48P
97M60	THERMOSTAT(4A 3A 2A)	4HP13L48P
97M62	MOTOR-FAN(3A 2A)	4HP13L48P
	4HP13L60P	
10W32	VALVE-SERVICE(4A 3A 2A)	4HP13L60P
11W96	VALVE-SERVICE(1A)	4HP13L60P
11W97	VALVE-SERVICE(1A)	4HP13L60P
15M35	HARNESS-COMP(2A)	4HP13L60P
17W10	MOTOR-FAN(1A)	4HP13L60P
17W11	THERMOSTAT(1A)	4HP13L60P
21W81	CAPACITOR-FAN&RUN(4A 2A)	4HP13L60P
21W82	CAPACITOR-FAN&RUN(3A)	4HP13L60P
23W26	SWITCH-LO PRESS(4A 3A 2A)	4HP13L60P
30W87	CONTROL-DEFROST(4A 3A 2A 1A)	4HP13L60P
31W74	VALVE-SERVICE(3A 2A)	4HP13L60P
41W93	HARNESS-COMP(1A)	4HP13L60P
42W18	COIL-SOLENOID(4A 3A 2A 1A)	4HP13L60P
42W59	VALVE-REVERSING(4A 3A 2A 1A)	4HP13L60P

CAT#	DESCRIPTION	Unit
43W22	VALVE-EXPANSION(4A 3A 2A)	4HP13L60P
43W87	COMPRESSOR(4A 3A)	4HP13L60P
44W62	HARNESS-COMP(4A 3A)	4HP13L60P
49W21	COMPRESSOR(1A)	4HP13L60P
49W86	MOTOR-FAN(4A)	4HP13L60P
86M36	SWITCH-HI PRESS(3A 2A 1A)	4HP13L60P
88M97	SWITCH-LO PRESS(1A)	4HP13L60P
89M84	CAPACITOR(1A)	4HP13L60P
95M56	CONTACTOR(4A 3A 2A 1A)	4HP13L60P
97M51	MOTOR-FAN(3A 2A)	4HP13L60P
97M58	COMPRESSOR(2A)	4HP13L60P
97M60	THERMOSTAT(4A 3A 2A)	4HP13L60P
	HP13	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	HP13
87265	SWITCH-LO PRESS(060 048 042 036 030 024)	HP13
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	HP13
10W77	VALVE-EXPANSION(042 036 030 024 018)	HP13
13W51	VALVE-EXPANSION(048)	HP13
13W52	VALVE-EXPANSION(060)	HP13
13W86	CAPACITOR-FAN&RUN(018)	HP13
13W87	CAPACITOR(042)	HP13
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HP13
47A60	CAPACITOR-START(018)	HP13
56L45	SWITCH-LO PRESS(018)	HP13
63A06	CAPACITOR-START(060 048 042 036 030 024)	HP13
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	HP13
86H31	SWITCH-HI PRESS(060 048 042 036 030 024 018)	HP13
88M10	VALVE-SERVICE(030 024 018)	HP13
88M11	VALVE-SERVICE(048 042 036)	HP13
88M12	VALVE-SERVICE(060)	HP13
89M80	CAPACITOR-FAN&RUN(036 030)	HP13
89M85	CAPACITOR(048)	HP13
89M92	CAPACITOR-FAN&RUN(060)	HP13
95M55	CONTACTOR(036 030 024 018)	HP13
95M56	CONTACTOR(060 048 042)	HP13
97M49	MOTOR-FAN(036 030 024 018)	HP13
97M60	THERMOSTAT(060 048 042 036 030 024 018)	HP13
97M62	MOTOR-FAN(048 042)	HP13
97M82	VALVE-REVERSING(030 024 018)	HP13
97M83	VALVE-REVERSING(060 048 042 036)	HP13
97M93	COMPRESSOR(048)	HP13
98M63	COMPRESSOR(024)	HP13
98M64	COMPRESSOR(030)	HP13
98M65	COMPRESSOR(036)	HP13
98M66	COMPRESSOR(042)	HP13

CAT#	DESCRIPTION	Unit
98M67	COMPRESSOR(060)	HP13
98M68	COMPRESSOR(018)	HP13
98M69	SWITCH-HI PRESS(018)	HP13
98M71	MOTOR-FAN(060)	HP13
	HP14	
67386	VALVE-SERVICE(261/411V)	HP14
68644	VALVE-SERVICE(313/513V 311/511V 261/411V)	HP14
10B43	COMPRESSOR(313/513V)	HP14
10B45	COMPRESSOR(413/653V)	HP14
13B07	CONTACTOR-COMPR(411/651V 311/511V 261/411V)	HP14
14B54	THERMOSTAT(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
15C52	VALVE-SERVICE(413/653V 411/651V)	HP14
15F64	MOTOR-FAN(413/653V 411/651V 313/513V 311/511V)	HP14
16C65	VALVE-EXPANSION(413/653V 411/651V)	HP14
21F07	TIMER-DEFROST(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
22F86	COMPRESSOR(313/513V)	HP14
22F87	COMPRESSOR(413/653V)	HP14
25F77	THERMOSTAT(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
26C03	THERMOSTAT(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
26H34	THERMOSTAT(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
31F15	COMPRESSOR(311/511V)	HP14
31F16	COMPRESSOR(313/513V)	HP14
33F60	COMPRESSOR(411/651V)	HP14
33F61	COMPRESSOR(413/653V)	HP14
38F91	THERMOSTAT(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
44A93	CAPACITOR-START(311/511V 261/411V)	HP14
44A97	SWITCH-HI PRESS(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
45A01	RELAY-POTENTIAL(261/411V)	HP14
48A47	CONTACTOR-COMPR(413/653V 313/513V)	HP14
48G55	CONTACTOR(411/651V 311/511V 261/411V)	HP14
48G56	CONTACTOR-COMPR(413/653V 313/513V)	HP14
48G57	CONTACTOR(311/511V 261/411V)	HP14
48G58	CONTACTOR(413/653V 313/513V)	HP14
48G59	CONTACTOR-COMPR(411/651V)	HP14
49W64	VALVE-REVERSING(261/411V)	HP14
50F59	TIMER-DEFROST(413/653V 313/513V)	HP14
53H14	CAPACITOR-RUN(411/651V)	HP14
53H15	CAPACITOR-RUN(411/651V)	HP14
53H16	CAPACITOR-RUN(261/411V)	HP14
53H17	CAPACITOR(311/511V)	HP14
53H18	CAPACITOR-RUN(311/511V)	HP14
54J51	MODULE(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
62A37	VALVE-EXPANSION(261/411V)	HP14
62A49	VALVE-EXPANSION(313/513V 311/511V)	HP14
63A06	CAPACITOR-START(411/651V)	HP14
65F16	TRANSFORMER(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14

CAT#	DESCRIPTION	Unit
65G04	VALVE-SERVICE(413/653V 411/651V)	HP14
65G05	VALVE-SERVICE(313/513V 311/511V)	HP14
67C04	MOTOR-FAN(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
67C26	COIL-SOLENOID(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
71G42	COMPRESSOR(261/411V)	HP14
71G43	COMPRESSOR(311/511V)	HP14
71G44	COMPRESSOR(411/651V)	HP14
71G46	COMPRESSOR(313/513V)	HP14
71G47	COMPRESSOR(413/653V)	HP14
71G49	COMPRESSOR(313/513V)	HP14
71G50	COMPRESSOR(413/653V)	HP14
74C07	COMPRESSOR(261/411V)	HP14
76C35	RELAY-POTENTIAL(411/651V)	HP14
78C67	COMPRESSOR(311/511V)	HP14
78C68	COMPRESSOR(411/651V)	HP14
81A39	CAPACITOR(413/653V 411/651V 313/513V 311/511V 261/411V)	HP14
82A35	RELAY-POTENTIAL(311/511V)	HP14
90A76	VALVE-REVERSING(413/653V 411/651V 313/513V 311/511V)	HP14
91A83	MOTOR-FAN(261/411V)	HP14
99C10	TRANSFORMER(413/653V 313/513V)	HP14
P-8-809	9 MOTOR-FAN(413/653V 313/513V)	HP14
	HP16	
	HEATINGANDAIRPARTS.COM	
37656	CONTACTOR-COMPR(513V 511V)	HP16
38393	CONTACTOR(653V 651V 650 513V 511V 463V 461V 413V 411V)	HP16
66083	CAPACITOR-START(653V 651V 650 513V 511V)	HP16
66441	CONTACTOR(463V 461V 413V 411V)	HP16
66463	RELAY-POTENTIAL(653V 651V 650 513V 511V)	HP16
66992	CONTACTOR-COMPR(311V 261V 211V)	HP16
68644	VALVE-SERVICE(513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
68652	CONTACTOR(653V 651V 650)	HP16
14B54	THERMOSTAT(653V 651V 650 513V 511V 463V 461V 413V 411V)	HP16
14K61	COMPRESSOR(653V 651V 650)	HP16
15C52	VALVE-SERVICE(653V 651V 650)	HP16
15F63	MOTOR-FAN(211V)	HP16
15F64	MOTOR-FAN(653V 651V 650 513V 511V 463V 461V)	HP16
15F66	VALVE-EXPANSION(211V)	HP16
16C65	VALVE-EXPANSION(653V 651V 650)	HP16
16C70	THERMOSTAT(311V 261V 211V)	HP16
26C03	THERMOSTAT(653V 651V 650 513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
29C90	COMPRESSOR(413V 411V)	HP16
29F03	COMPRESSOR(513V 511V)	HP16
29M24	COMPRESSOR(653V 651V 650)	HP16
33C46	COMPRESSOR(463V 461V)	HP16
33F18	COMPRESSOR(513V 511V)	HP16
36G14	COMPRESSOR(653V 651V 650)	HP16

CAT#	DESCRIPTION	Unit
38F91	THERMOSTAT(653V 651V 650 513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
39F02	TIMER-DEFROST(653V 651V 650 513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
43L40	COMPRESSOR(261V 211V)	HP16
44A93	CAPACITOR-START(653V 651V 650 413V 411V 311V 261V 211V)	HP16
44A97	SWITCH-HI PRESS(653V 651V 650 513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
45A00	RELAY-POTENTIAL(463V 461V)	HP16
47F00	COMPRESSOR(513V 511V)	HP16
49W63	VALVE-REVERSING(311V 261V 211V)	HP16
49W64	VALVE-REVERSING(413V 411V)	HP16
50F59	TIMER-DEFROST(653V 651V 650 513V 511V 413V 411V)	HP16
53H08	CAPACITOR-RUN(211V)	HP16
53H14	CAPACITOR-RUN(653V 651V 650)	HP16
53H15	CAPACITOR-RUN(653V 651V 650)	HP16
53H16	CAPACITOR-RUN(311V)	HP16
53H17	CAPACITOR(513V 511V 463V 461V)	HP16
54G98	VALVE-SERVICE(261V 211V)	HP16
62A38	VALVE-EXPANSION(311V)	HP16
62A49	VALVE-EXPANSION(513V 511V)	HP16
63A06	CAPACITOR-START(463V 461V)	HP16
65C82	MOTOR-FAN(413V 411V)	HP16
65G04	VALVE-SERVICE(653V 651V 650)	HP16
65G05	VALVE-SERVICE(513V 511V 463V 461V)	HP16
65G09	VALVE-SERVICE(413V 411V 311V)	HP16
65G78	COMPRESSOR(653V 651V 650)	HP16
67C04	MOTOR-FAN(413V 411V)	HP16
67C26	COIL-SOLENOID(653V 651V 650 513V 511V 463V 461V 413V 411V 311V 261V 211V)	HP16
68J59	COMPRESSOR(413V 411V)	HP16
68J69	COMPRESSOR(653V 651V 650)	HP16
78A89	VALVE-EXPANSION(463V 461V 413V 411V)	HP16
78H16	COMPRESSOR(463V 461V)	HP16
81A39	CAPACITOR(653V 651V 650 513V 511V 463V 461V 413V 411V)	HP16
81A45	CAPACITOR-RUN(261V)	HP16
81A47	CAPACITOR-RUN(413V 411V)	HP16
90A76	VALVE-REVERSING(653V 651V 650 513V 511V 463V 461V)	HP16
91A50	VALVE-EXPANSION(261V)	HP16
91A83	MOTOR-FAN(311V 261V)	HP16
99C64	COMPRESSOR(413V 411V)	HP16
99C65	COMPRESSOR(311V)	HP16
P-8-809	9 MOTOR-FAN(653V 651V 650 513V 511V)	HP16
	HP19	
38393	CONTACTOR(653 513 463 413)	HP19
38644	RELAY-POTENTIAL(513 511 463 461)	HP19
58326	CAPACITOR-START(311 261 211)	HP19
58327	RELAY-POTENTIAL(311 211)	HP19
66083	CAPACITOR-START(513 511 461)	HP19

CAT#	DESCRIPTION	Unit
66463	RELAY-POTENTIAL(653 651 261)	HP19
14B54	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211)	HP19
15C75	MOTOR-FAN(653 651)	HP19
18H63	COMPRESSOR(411)	HP19
18H64	COMPRESSOR(413)	HP19
21J28	RELAY-POTENTIAL(653 651)	HP19
21J29	CAPACITOR-START(653 651)	HP19
21J60	COMPRESSOR(511)	HP19
21J61	COMPRESSOR(513)	HP19
21J62	COMPRESSOR(513)	HP19
25J95	COMPRESSOR(653)	HP19
25J96	COMPRESSOR(653)	HP19
25J97	COMPRESSOR(651)	HP19
26H95	VALVE-REVERSING(413 411 311)	HP19
26H96	VALVE-REVERSING(653 651 513 511 463 461)	HP19
26H98	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211)	HP19
31C77	COMPRESSOR(411)	HP19
31C78	COMPRESSOR(413)	HP19
33G08	CAPACITOR-FAN&RUN(463 461)	HP19
36G59	COMPRESSOR(461)	HP19
39H61	CAPACITOR(653 651 513 511)	HP19
39H89	CAPACITOR(653 651 513 511 413)	HP19
44A93	CAPACITOR-START(413 411)	HP19
44A97	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211)	HP19
46F43	CAPACITOR-FAN&RUN(211)	HP19
46F44	CAPACITOR-RUN(311)	HP19
46F45	CAPACITOR-FAN&RUN(413 411)	HP19
46F76	VALVE-SERVICE(513 511 463 461)	HP19
46F77	VALVE-SERVICE(653 651)	HP19
46F98	COMPRESSOR(513)	HP19
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211)	HP19
49W63	VALVE-REVERSING(261 211)	HP19
49W64	VALVE-REVERSING(413 411 311)	HP19
50F11	MOTOR-FAN(261)	HP19
51H69	VALVE-REVERSING(261 211)	HP19
53H18	CAPACITOR-RUN(653 651 513 511)	HP19
53H22	CAPACITOR-FAN&RUN(211)	HP19
53H23	CAPACITOR-RUN(261)	HP19
53H25	CAPACITOR-FAN&RUN(413 411)	HP19
53H27	CAPACITOR-RUN(311)	HP19
53H29	CAPACITOR-FAN&RUN(463 461)	HP19
54G70	COMPRESSOR(651)	HP19
63A06	CAPACITOR-START(653 651)	HP19
63K71	COMPRESSOR(311)	HP19
65C69	CONTACTOR-COMPR(411 311 261 211)	HP19
65C70	CONTACTOR(513 511 461)	HP19
65C81	MOTOR-FAN(513 511)	HP19
65G01	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211)	HP19

CAT#	DESCRIPTION	Unit
65G56	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211)	HP19
65G57	VALVE-EXPANSION(463 461 413 411)	HP19
65G58	VALVE-EXPANSION(311 261)	HP19
65G60	MOTOR-FAN(463 461 413 411 311 261 211)	HP19
65G81	VALVE-EXPANSION(211)	HP19
65G84	VALVE-EXPANSION(513 511)	HP19
65G92	VALVE-EXPANSION(653 651)	HP19
67C02	MOTOR-FAN(653 651 513 511 413 411)	HP19
67C26	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211)	HP19
68J61	COMPRESSOR(511)	HP19
72F03	COMPRESSOR(463)	HP19
72H36	MOTOR-FAN(653 651 513 511)	HP19
72H90	VALVE-SERVICE(261 211)	HP19
72H91	VALVE-SERVICE(413 411 311)	HP19
72H92	VALVE-SERVICE(513 511 463 461)	HP19
74H01	RELAY-POTENTIAL(651 513 511)	HP19
74H10	CAPACITOR-RUN(651)	HP19
74H30	VALVE-SERVICE(653 651)	HP19
78F80	COMPRESSOR(513)	HP19
78G19	CAPACITOR-FAN&RUN(261)	HP19
78G20	COMPRESSOR(653)	HP19
78G21	COMPRESSOR(653)	HP19
78G22	COMPRESSOR(211)	HP19
78G23	COMPRESSOR(261)	HP19
78H11	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211)	HP19
78H37	COMPRESSOR(513)	HP19
78H38	COMPRESSOR(513)	HP19
78H68	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211)	HP19
81A39	CAPACITOR(653 513 413)	HP19
81A40	CAPACITOR(653 651)	HP19
86G65	COMPRESSOR(261)	HP19
86G66	COMPRESSOR(413)	HP19
86H31	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211)	HP19
86H67	COMPRESSOR(511)	HP19
86H78	COMPRESSOR(651)	HP19
86H79	COMPRESSOR(653)	HP19
86H80	COMPRESSOR(653)	HP19
86H81	CAPACITOR-START(651 513 511)	HP19
90A76	VALVE-REVERSING(653 651 513 511 463 461)	HP19
96C64	VALVE-SERVICE(261 211)	HP19
96C65	VALVE-SERVICE(413 411 311)	HP19
	HP21	
13H07	CONTROL-DEFROST(511 48 411 36)	HP21
13H28	TRANSFORMER(651 60 511 48 411 36)	HP21
14B54	THERMOSTAT(651 60 511 48 411 36)	HP21
18M23	CONTROL-DEFROST(60 48 36)	HP21

CAT#	DESCRIPTION	Unit
23M22	CONTROL-DEFROST(651 60)	HP21
24L06	VALVE-SERVICE(651 60)	HP21
26H34	THERMOSTAT(651 60 511 48 411 36)	HP21
26H95	VALVE-REVERSING(411 36)	HP21
26H96	VALVE-REVERSING(651 60 511 48)	HP21
26H98	COIL-SOLENOID(651 60 511 48 411 36)	HP21
27H32	MOTOR-FAN(651 60)	HP21
27H33	MOTOR-FAN(511 48)	HP21
27H34	MOTOR-FAN(411 36)	HP21
27H41	COMPRESSOR(60)	HP21
31L81	VALVE-REVERSING(36)	HP21
39H61	CAPACITOR(60)	HP21
44A93	CAPACITOR-START(651 60 511 48 411 36)	HP21
45A01	RELAY-POTENTIAL(511 48 411 36)	HP21
48G55	CONTACTOR(651 60 511 48 411 36)	HP21
48G56	CONTACTOR-COMPR(60 48 36)	HP21
48G57	CONTACTOR(511 48 411 36)	HP21
48G58	CONTACTOR(60 48 36)	HP21
48G59	CONTACTOR-COMPR(651 60)	HP21
53H27	CAPACITOR-FAN&RUN(511 48 411 36)	HP21
56L38	VALVE-EXPANSION(36)	HP21
63K15	VALVE-REVERSING(60 48)	HP21
65G57	VALVE-EXPANSION(411)	HP21
65G84	VALVE-EXPANSION(511)	HP21
65G92	VALVE-EXPANSION(651)	HP21
68J10	VALVE-SERVICE(651 60 511 48 411 36)	HP21
68J12	VALVE-SERVICE(411 36)	HP21
68J13	VALVE-SERVICE(511 48)	HP21
72H91	VALVE-SERVICE(411)	HP21
72H92	VALVE-SERVICE(511)	HP21
73K13	VALVE-EXPANSION(411)	HP21
73K14	VALVE-EXPANSION(651 60 511 48)	HP21
74H30	VALVE-SERVICE(651)	HP21
76C35	RELAY-POTENTIAL(651 60)	HP21
77G92	COMPRESSOR(511 48 411 36)	HP21
77G93	COMPRESSOR(48 36)	HP21
78H19	CAPACITOR-FAN&RUN(651 60)	HP21
86H31	SWITCH-HI PRESS(651 60 511 48 411 36)	HP21
93G63	COMPRESSOR(651 60)	HP21
	HP22	
14B54	THERMOSTAT(511 461 411 311 261 211)	HP22
18H73	COMPRESSOR(211)	HP22
26H95	VALVE-REVERSING(411 311)	HP22
26H96	VALVE-REVERSING(511 461)	HP22
26H98	COIL-SOLENOID(511 461 411 311 261 211)	HP22

CAT#	DESCRIPTION	Unit
27H32	MOTOR-FAN(511)	HP22
46F43	CAPACITOR-FAN&RUN(211)	HP22
46F44	CAPACITOR-RUN(311)	HP22
46F76	VALVE-SERVICE(461)	HP22
49W63	VALVE-REVERSING(261 211)	HP22
49W64	VALVE-REVERSING(411 311)	HP22
51H69	VALVE-REVERSING(261 211)	HP22
53H22	CAPACITOR-FAN&RUN(211)	HP22
53H23	CAPACITOR-RUN(261)	HP22
53H27	CAPACITOR-FAN&RUN(461 411 311)	HP22
65C69	CONTACTOR-COMPR(411 311 261 211)	HP22
65C70	CONTACTOR(511 461)	HP22
65G01	VALVE-SERVICE(461 411 311 261 211)	HP22
65G56	VALVE-SERVICE(461 411 311 261 211)	HP22
65G57	VALVE-EXPANSION(461 411)	HP22
65G58	VALVE-EXPANSION(311 261)	HP22
65G60	MOTOR-FAN(461 411 311 261 211)	HP22
65G81	VALVE-EXPANSION(211)	HP22
65G84	VALVE-EXPANSION(511)	HP22
67C26	COIL-SOLENOID(461 411 311 261 211)	HP22
68F71	CAPACITOR-FAN&RUN(461 411)	HP22
72H90	VALVE-SERVICE(261 211)	HP22
72H91	VALVE-SERVICE(411 311)	HP22
72H92	VALVE-SERVICE(511 461)	HP22
78G19	CAPACITOR-FAN&RUN(261)	HP22
78H20	CAPACITOR-RUN(511)	HP22
78H68	TIMER-DEFROST(511 461 411 311 261 211)	HP22
81G66	COMPRESSOR(311)	HP22
81G67	COMPRESSOR(411)	HP22
81G68	COMPRESSOR(461)	HP22
86H31	SWITCH-HI PRESS(511 461 411 311 261 211)	HP22
90A76	VALVE-REVERSING(461)	HP22
96C64	VALVE-SERVICE(261 211)	HP22
96C65	VALVE-SERVICE(411 311)	HP22
97H50	COMPRESSOR(511)	HP22
98G20	COMPRESSOR(261)	HP22
	HP23	
38393	CONTACTOR(653 513 463 413)	HP23
58326	CAPACITOR-START(411 261 211 141)	HP23
58327	RELAY-POTENTIAL(411 311 261 211)	HP23
66441	CONTACTOR(261)	HP23
66463	RELAY-POTENTIAL(461)	HP23
67101	RELAY-POTENTIAL(311)	HP23
13B01	RELAY-POTENTIAL(411)	HP23
13H79	TRANSFORMER(653 513)	HP23

CAT#	DESCRIPTION	Unit
21J28	RELAY-POTENTIAL(651)	HP23
21J29	CAPACITOR-START(651)	HP23
21J55	COMPRESSOR(411)	HP23
21J56	COMPRESSOR(413)	HP23
21J57	COMPRESSOR(413)	HP23
21J64	COMPRESSOR(653)	HP23
21J65	COMPRESSOR(653)	HP23
22J00	COMPRESSOR(311)	HP23
25J53	COMPRESSOR(511)	HP23
25J54	COMPRESSOR(513)	HP23
25J55	COMPRESSOR(513)	HP23
25J56	COMPRESSOR(513)	HP23
25J57	COMPRESSOR(651)	HP23
26H95	VALVE-REVERSING(463 461 413 411 311)	HP23
26H96	VALVE-REVERSING(653 651 513 511)	HP23
26H98	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
31J37	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
32F21	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
39H61	CAPACITOR(653 513 463)	HP23
39H89	CAPACITOR(653 513 463 261)	HP23
44A93	CAPACITOR-START(311)	HP23
45A01	RELAY-POTENTIAL(261)	HP23
47A60	CAPACITOR-START(411 311 261)	HP23
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
47J35	CONTROL-TIMED OFF(653 651 513 511 463 461)	HP23
51H69	VALVE-REVERSING(261 211 141)	HP23
53H22	CAPACITOR-FAN&RUN(141)	HP23
53H25	CAPACITOR-FAN&RUN(411)	HP23
53H27	CAPACITOR-RUN(311 261 211)	HP23
53H29	CAPACITOR-FAN&RUN(411 311)	HP23
53J78	COMPRESSOR(411)	HP23
58H66	RELAY-POTENTIAL(141)	HP23
65C69	CONTACTOR-COMPR(461 411 311 261 211 141)	HP23
65C70	CONTACTOR(511)	HP23
65G57	VALVE-EXPANSION(463 461 413 411)	HP23
65G58	VALVE-EXPANSION(311 261)	HP23
65G80	COMPRESSOR(653)	HP23
65G81	VALVE-EXPANSION(211)	HP23
65G84	VALVE-EXPANSION(513 511)	HP23
65G92	VALVE-EXPANSION(653 651)	HP23
67C02	MOTOR-FAN(653 513 463)	HP23
69H62	COMPRESSOR(141)	HP23
69H63	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
72H36	MOTOR-FAN(653 651 513 511 463 461)	HP23
72H72	CAPACITOR-START(511 461 411)	HP23
72H73	MOTOR-FAN(413 411 311 261 211 141)	HP23
72H88	MOTOR-FAN(413)	HP23
72H89	VALVE-SERVICE(141)	HP23

CAT#	DESCRIPTION	Unit
72H90	VALVE-SERVICE(261 211)	HP23
72H91	VALVE-SERVICE(413 411 311)	HP23
72H92	VALVE-SERVICE(513 511 463 461)	HP23
74H01	RELAY-POTENTIAL(511)	HP23
74H10	CAPACITOR-RUN(651 511)	HP23
74H30	VALVE-SERVICE(653 651)	HP23
74H39	VALVE-SERVICE(653 513 413 261)	HP23
74H41	VALVE-SERVICE(261)	HP23
74H42	VALVE-SERVICE(413)	HP23
74H70	SWITCH-HI PRESS(653 651 513 511 463 461 411 311 261 211 141)	HP23
78H09	VALVE-EXPANSION(141)	HP23
78H10	MOTOR-FAN(261)	HP23
78H11	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
78H16	COMPRESSOR(463)	HP23
78H17	COMPRESSOR(463)	HP23
78H18	COMPRESSOR(461)	HP23
78H20	CAPACITOR-RUN(461)	HP23
78H24	COMPRESSOR(211)	HP23
78H25	COMPRESSOR(261)	HP23
78H26	COMPRESSOR(311)	HP23
78H27	COMPRESSOR(261)	HP23
78H28	COMPRESSOR(411)	HP23
78H29	COMPRESSOR(413)	HP23
78H30	COMPRESSOR(413)	HP23
78H68	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211 141)	HP23
	HP24	
38393	CONTACTOR(653 513 463 413)	HP24
58326	CAPACITOR-START(411 261 211 141)	HP24
58327	RELAY-POTENTIAL(411 311 261 211)	HP24
66441	CONTACTOR(261)	HP24
66463	RELAY-POTENTIAL(461)	HP24
13B01	RELAY-POTENTIAL(411)	HP24
13H79	TRANSFORMER(653 513)	HP24
21J28	RELAY-POTENTIAL(651)	HP24
21J29	CAPACITOR-START(651)	HP24
26H95	VALVE-REVERSING(463 461 413 411 311)	HP24
26H96	VALVE-REVERSING(653 651 513 511)	HP24
26H98	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
29M24	COMPRESSOR(653)	HP24
32F21	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
39H61	CAPACITOR(513 463)	HP24
39H89	CAPACITOR(653 513 463)	HP24
45A01	RELAY-POTENTIAL(261)	HP24
47A60	CAPACITOR-START(411 311 261)	HP24
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
51H69	VALVE-REVERSING(261 211 141)	HP24

CAT#	DESCRIPTION	Unit
53H22	CAPACITOR-FAN&RUN(141)	HP24
53H27	CAPACITOR-RUN(261 211)	HP24
53H29	CAPACITOR-FAN&RUN(411 311)	HP24
58H66	RELAY-POTENTIAL(141)	HP24
65C69	CONTACTOR-COMPR(461 411 311 261 211 141)	HP24
65C70	CONTACTOR(511)	HP24
65G57	VALVE-EXPANSION(463 461 413 411)	HP24
65G58	VALVE-EXPANSION(311 261)	HP24
65G81	VALVE-EXPANSION(211)	HP24
65G84	VALVE-EXPANSION(513 511)	HP24
65G92	VALVE-EXPANSION(653 651)	HP24
67C02	MOTOR-FAN(653 513 463)	HP24
69H62	COMPRESSOR(141)	HP24
69H63	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261)	HP24
72H36	MOTOR-FAN(653 651 513 511 463 461)	HP24
72H72	CAPACITOR-START(651 511 461)	HP24
72H73	MOTOR-FAN(413 411 311 261 211 141)	HP24
72H88	MOTOR-FAN(413)	HP24
72H90	VALVE-SERVICE(261)	HP24
72H91	VALVE-SERVICE(413 411 311)	HP24
72H92	VALVE-SERVICE(513 511 463 461)	HP24
74H01	RELAY-POTENTIAL(651 511)	HP24
74H10	CAPACITOR-RUN(651 511)	HP24
74H30	VALVE-SERVICE(653 651)	HP24
74H39	VALVE-SERVICE(653 513 413 261)	HP24
74H41	VALVE-SERVICE(261)	HP24
74H42	VALVE-SERVICE(413)	HP24
74H58	COMPRESSOR(651)	HP24
74H59	COMPRESSOR(653)	HP24
74H61	COMPRESSOR(653)	HP24
74H70	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
78H09	VALVE-EXPANSION(141)	HP24
78H10	MOTOR-FAN(261)	HP24
78H11	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
78H12	COMPRESSOR(511)	HP24
78H13	COMPRESSOR(513)	HP24
78H14	COMPRESSOR(513)	HP24
78H15	COMPRESSOR(513)	HP24
78H16	COMPRESSOR(463)	HP24
78H17	COMPRESSOR(463)	HP24
78H18	COMPRESSOR(461)	HP24
78H20	CAPACITOR-RUN(461)	HP24
78H24	COMPRESSOR(211)	HP24
78H25	COMPRESSOR(261)	HP24
78H26	COMPRESSOR(311)	HP24
78H27	COMPRESSOR(261)	HP24
78H28	COMPRESSOR(411)	HP24
78H29	COMPRESSOR(413)	HP24

CAT#	DESCRIPTION	Unit
78H30	COMPRESSOR(413)	HP24
78H68	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211 141)	HP24
97H78	COMPRESSOR(411)	HP24
97H79	COMPRESSOR(413)	HP24
97H80	COMPRESSOR(413)	HP24
	HP25	
38393	CONTACTOR(653 651 513 511 463 461 413 411)	HP25
38510	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211)	HP25
14B54	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211)	HP25
18H73	COMPRESSOR(211)	HP25
25J36	MOTOR-FAN(653 651)	HP25
25J37	MOTOR-FAN(653 651)	HP25
25J51	VALVE-SERVICE(653 651)	HP25
26H95	VALVE-REVERSING(413 411 311)	HP25
26H96	VALVE-REVERSING(513 511 463 461)	HP25
26H98	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211)	HP25
27H32	MOTOR-FAN(513 511)	HP25
27H34	MOTOR-FAN(261 211)	HP25
31J94	CAPACITOR-FAN&RUN(261)	HP25
37J27	COMPRESSOR(513 511)	HP25
37J28	COMPRESSOR(513 511)	HP25
37J30	COMPRESSOR(653 651)	HP25
37J31	COMPRESSOR(653 651)	HP25
39H61	CAPACITOR(653 651 513 511)	HP25
39H89	CAPACITOR(513 511)	HP25
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211)	HP25
49K52	CAPACITOR-FAN&RUN(651)	HP25
51H69	VALVE-REVERSING(261 211)	HP25
51H70	VALVE-REVERSING(653 651)	HP25
53H22	CAPACITOR-FAN&RUN(211)	HP25
53H27	CAPACITOR-FAN&RUN(463 461 413 411 311)	HP25
53J05	COMPRESSOR(511)	HP25
53J06	COMPRESSOR(651)	HP25
65C69	CONTACTOR-COMPR(413 411 311 261 211)	HP25
65C70	CONTACTOR(513 511 463 461)	HP25
65G57	VALVE-EXPANSION(463 461 413 411)	HP25
65G58	VALVE-EXPANSION(311 261)	HP25
65G60	MOTOR-FAN(463 461 413 411 311)	HP25
65G81	VALVE-EXPANSION(211)	HP25
65G84	VALVE-EXPANSION(513 511)	HP25
65G92	VALVE-EXPANSION(653 651)	HP25
66J45	COMPRESSOR(413 411)	HP25
67C02	MOTOR-FAN(513 511)	HP25
68J37	CONTACTOR(653 651)	HP25
68J84	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211)	HP25

CAT#	DESCRIPTION	Unit
72H90	VALVE-SERVICE(261 211)	HP25
72H91	VALVE-SERVICE(413 411 311)	HP25
72H92	VALVE-SERVICE(513 511 463 461)	HP25
74H10	CAPACITOR-RUN(511)	HP25
78H11	THERMOSTAT(653 651 513 511 463 461 413 411 311 261 211)	HP25
78H20	CAPACITOR-RUN(513 511)	HP25
78H68	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211)	HP25
79J91	COMPRESSOR(463 461)	HP25
81G66	COMPRESSOR(311)	HP25
81G67	COMPRESSOR(413 411)	HP25
81G68	COMPRESSOR(463 461)	HP25
86H31	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211)	HP25
97H50	COMPRESSOR(513 511)	HP25
97H51	COMPRESSOR(651)	HP25
98G20	COMPRESSOR(261)	HP25
	HP26	
38393	CONTACTOR(060 048 042 036)	HP26
38510	SWITCH-HI PRESS(461 411 311 261 060 048 042 036 030 024 018)	HP26
58327	RELAY-POTENTIAL(461 411 311 261 211 060 048 042 036 030 024 018)	HP26
14B54	THERMOSTAT(461 411 311 261 211 060 048 042 036 030 024 018)	HP26
14K29	COMPRESSOR(042)	HP26
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HP26
15M36	HARNESS-COMP(060 048 042 036)	HP26
15M60	COMPRESSOR(018)	HP26
15M61	COMPRESSOR(024)	HP26
15M63	COMPRESSOR(030)	HP26
15M67	COMPRESSOR(036)	HP26
15M68	COMPRESSOR(036)	HP26
15M72	COMPRESSOR(042)	HP26
15M73	COMPRESSOR(042)	HP26
15M74	COMPRESSOR(042)	HP26
15M78	COMPRESSOR(048)	HP26
15M79	COMPRESSOR(048)	HP26
15M80	COMPRESSOR(048)	HP26
15M84	COMPRESSOR(060)	HP26
15M85	COMPRESSOR(060)	HP26
15M86	COMPRESSOR(060)	HP26
18M90	VALVE-EXPANSION(036 030 024 018)	HP26
18M92	VALVE-EXPANSION(060 048 042)	HP26
21J29	CAPACITOR-START(060 048)	HP26
24L87	CAPACITOR-FAN&RUN(048)	HP26
25J36	MOTOR-FAN(060)	HP26
25J37	MOTOR-FAN(060)	HP26
26H95	VALVE-REVERSING(411 311 036 030)	HP26
26H96	VALVE-REVERSING(461 060 048 042)	HP26

CAT#	DESCRIPTION	Unit
26H98	COIL-SOLENOID(461 411 311 261 211 060 048 042 036 030 024 018)	HP26
27H32	MOTOR-FAN(060 048)	HP26
27H34	MOTOR-FAN(211 024 018)	HP26
29M01	TIMER-DEFROST(060 048 042 036 030 024 018)	HP26
31J50	VALVE-SERVICE(060)	HP26
31J94	CAPACITOR-FAN&RUN(018)	HP26
31L81	VALVE-REVERSING(036)	HP26
32M96	CAPACITOR-FAN&RUN(036)	HP26
37J27	COMPRESSOR(048)	HP26
37J28	COMPRESSOR(048)	HP26
37J30	COMPRESSOR(060)	HP26
37J31	COMPRESSOR(060)	HP26
39H61	CAPACITOR(060 048)	HP26
39H89	CAPACITOR(060 048 042 036)	HP26
39L20	VALVE-SERVICE(060)	HP26
42J29	COMPRESSOR(211)	HP26
47A60	CAPACITOR-START(461 411 311 261 211 042 036 030 024 018)	HP26
49K34	COMPRESSOR(018)	HP26
49K52	CAPACITOR-FAN&RUN(060)	HP26
51H69	VALVE-REVERSING(261 211 024 018)	HP26
51H75	MOTOR-FAN(060 048)	HP26
53H22	CAPACITOR-FAN&RUN(211)	HP26
53H23	CAPACITOR-RUN(261)	HP26
53H27	CAPACITOR-FAN&RUN(461 411 311)	HP26
53H29	CAPACITOR-FAN&RUN(030)	HP26
53J05	COMPRESSOR(048)	HP26
53J06	COMPRESSOR(060)	HP26
56L38	VALVE-EXPANSION(036)	HP26
59M99	MOTOR-FAN(060 048 042 036)	HP26
63K15	VALVE-REVERSING(042)	HP26
63K46	THERMOSTAT(060 048 042 036 030 024 018)	HP26
63K87	CAPACITOR-FAN&RUN(030)	HP26
65C69	CONTACTOR-COMPR(411 311 261 211 042 036 030 024 018)	HP26
65C70	CONTACTOR(461)	HP26
65G57	VALVE-EXPANSION(461 411)	HP26
65G58	VALVE-EXPANSION(311 261)	HP26
65G60	MOTOR-FAN(461 411 311 261 042 036 030)	HP26
65G81	VALVE-EXPANSION(211)	HP26
66J45	COMPRESSOR(036)	HP26
66J46	COMPRESSOR(036)	HP26
67C02	MOTOR-FAN(048 042 036)	HP26
67K12	CAPACITOR-FAN&RUN(024)	HP26
67K69	CAPACITOR-FAN&RUN(042)	HP26
67K70	CAPACITOR-FAN&RUN(048)	HP26
68J10	VALVE-SERVICE(060 048 042 036 030 024 018)	HP26
68J11	VALVE-SERVICE(018)	HP26
68J12	VALVE-SERVICE(036 030 024)	HP26
68J13	VALVE-SERVICE(042)	HP26

CAT#	DESCRIPTION	Unit
68J15	VALVE-EXPANSION(036 030 024 018)	HP26
68J16	VALVE-EXPANSION(042)	HP26
68J36	CONTACTOR-COMPR(042 036 030 024 018)	HP26
68J37	CONTACTOR(060 048)	HP26
68J72	COMPRESSOR(024)	HP26
68J73	COMPRESSOR(030)	HP26
68J75	COMPRESSOR(042)	HP26
68J84	TIMER-DEFROST(461 411 311 261 060 048 042 036 030 024 018)	HP26
68J98	VALVE-SERVICE(048)	HP26
69M64	CAPACITOR-FAN&RUN(030)	HP26
69M65	CAPACITOR-FAN&RUN(036)	HP26
69M66	CAPACITOR-FAN&RUN(042)	HP26
72H36	MOTOR-FAN(060 048)	HP26
72H90	VALVE-SERVICE(261 211)	HP26
72H91	VALVE-SERVICE(411 311)	HP26
72H92	VALVE-SERVICE(461)	HP26
73K13	VALVE-EXPANSION(036 030)	HP26
73K14	VALVE-EXPANSION(060 048 042)	HP26
75M47	VALVE-REVERSING(036 030)	HP26
75M48	VALVE-REVERSING(060 048 042)	HP26
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	HP26
75M50	VALVE-REVERSING(024 018)	HP26
78H11	THERMOSTAT(461 411 311 261 211)	HP26
78H68	TIMER-DEFROST(461 411 311 261 211)	HP26
79J91	COMPRESSOR(042)	HP26
81G66	COMPRESSOR(311)	HP26
81G67	COMPRESSOR(411)	HP26
81G68	COMPRESSOR(461)	HP26
86H31	SWITCH-HI PRESS(461 411 311 261 211)	HP26
88K20	COMPRESSOR(048)	HP26
88K21	COMPRESSOR(048)	HP26
88K22	COMPRESSOR(048)	HP26
97H16	CAPACITOR-RUN(048)	HP26
97M94	COMPRESSOR(036)	HP26
98G20	COMPRESSOR(261)	HP26
	HP27	
38510	SWITCH-HI PRESS(042 036 030 024)	HP27
58327	RELAY-POTENTIAL(042 036 030 024)	HP27
10M89	TIMER-DEFROST(042 036 030 024)	HP27
14B54	THERMOSTAT(042 036 030 024)	HP27
15M35	HARNESS-COMP(042 036 030 024)	HP27
15M61	COMPRESSOR(024)	HP27
15M62	COMPRESSOR(030)	HP27
15M64	COMPRESSOR(036)	HP27
15M72	COMPRESSOR(042)	HP27

CAT#	DESCRIPTION	Unit
18M90	VALVE-EXPANSION(036 030 024)	HP27
18M92	VALVE-EXPANSION(042)	HP27
26H95	VALVE-REVERSING(030 024)	HP27
26H96	VALVE-REVERSING(042 036)	HP27
26H98	COIL-SOLENOID(042 036 030 024)	HP27
27H34	MOTOR-FAN(042 036 030 024)	HP27
29M01	TIMER-DEFROST(042 036 030 024)	HP27
47A60	CAPACITOR-START(042 036 030 024)	HP27
56L38	VALVE-EXPANSION(036 030 024)	HP27
63K15	VALVE-REVERSING(042 036)	HP27
63K46	THERMOSTAT(042 036 030 024)	HP27
65C69	CONTACTOR-COMPR(042 036 030 024)	HP27
67K12	CAPACITOR-FAN&RUN(030 024)	HP27
67K40	COMPRESSOR(030)	HP27
67K41	COMPRESSOR(036)	HP27
68J10	VALVE-SERVICE(042 036 030 024)	HP27
68J15	VALVE-EXPANSION(036 030 024)	HP27
68J16	VALVE-EXPANSION(042)	HP27
68J36	CONTACTOR-COMPR(042 036 030 024)	HP27
68J72	COMPRESSOR(024)	HP27
68J75	COMPRESSOR(042)	HP27
68J84	TIMER-DEFROST(042 036 030 024)	HP27
68J95	VALVE-SERVICE(030 024)	HP27
68J98	VALVE SERVICE(042 036)	HP27
73K14	VALVE-EXPANSION(042)	HP27
75M47	VALVE-REVERSING(030 024)	HP27
75M48	VALVE-REVERSING(042 036)	HP27
75M49	COIL-SOLENOID(042 036 030 024)	HP27
80K54	VALVE-REVERSING(042 036)	HP27
85K43	CAPACITOR-FAN&RUN(036)	HP27
85K44	CAPACITOR-FAN&RUN(042)	HP27
	HP28	
38510	SWITCH-HI PRESS(042 036 030 024)	HP28
58327	RELAY-POTENTIAL(042 036 030 024)	HP28
10M88	VALVE-EXPANSION(036 030 024)	HP28
14B54	THERMOSTAT(042 036 030 024)	HP28
15M35	HARNESS-COMP(042 036 030 024)	HP28
15M61	COMPRESSOR(024)	HP28
15M63	COMPRESSOR(030)	HP28
15M72	COMPRESSOR(042)	HP28
18M01	CAPACITOR-FAN&RUN(036)	HP28
18M92	VALVE-EXPANSION(042)	HP28
18M93	VALVE-EXPANSION(036 030 024)	HP28
26H95	VALVE-REVERSING(030 024)	HP28
26H96	VALVE-REVERSING(042 036)	HP28

CAT#	DESCRIPTION	Unit
26H98	COIL-SOLENOID(042 036 030 024)	HP28
27H34	MOTOR-FAN(042 036 030 024)	HP28
29M01	TIMER-DEFROST(042 036 030 024)	HP28
31L81	VALVE-REVERSING(030 024)	HP28
47A60	CAPACITOR-START(042 036 030 024)	HP28
53H29	CAPACITOR-FAN&RUN(030)	HP28
56L38	VALVE-EXPANSION(036 030 024)	HP28
63K15	VALVE-REVERSING(042 036)	HP28
63K46	THERMOSTAT(042 036 030 024)	HP28
65C69	CONTACTOR-COMPR(042 036 030 024)	HP28
67K12	CAPACITOR-FAN&RUN(024)	HP28
68J10	VALVE-SERVICE(042 036 030 024)	HP28
68J36	CONTACTOR-COMPR(042 036 030 024)	HP28
68J72	COMPRESSOR(024)	HP28
68J73	COMPRESSOR(030)	HP28
68J75	COMPRESSOR(042)	HP28
68J84	TIMER-DEFROST(042 036 030 024)	HP28
68J95	VALVE-SERVICE(030 024)	HP28
68J98	VALVE-SERVICE(042 036)	HP28
73K14	VALVE-EXPANSION(042)	HP28
85K43	CAPACITOR-FAN&RUN(030)	HP28
85K44	CAPACITOR-FAN&RUN(042)	HP28
97M94	COMPRESSOR(036)	HP28
HEATINGANDAIRPARTS.COM		
HP29		
38113	CONTACTOR(120 090)	HP29
38393	CONTACTOR(653 513 463 413 120 090 060 048 042 036)	HP29
38510	SWITCH-HI PRESS(120 090 060 048 042 036 030 024 018)	HP29
38644	RELAY-POTENTIAL(651)	HP29
58326	CAPACITOR-START(411 261)	HP29
58327	RELAY-POTENTIAL(411 060 048 042 036 030 024)	HP29
66082	CAPACITOR-START(018)	HP29
66083	CAPACITOR-START(411 311 261 036 030)	HP29
66463	RELAY-POTENTIAL(036)	HP29
67101	RELAY-POTENTIAL(311 261)	HP29
87265	SWITCH-LO PRESS(653 651 513 511 463 461 413 411 311 261 211 060 048 042 036 030)	HP29
12L31	COMPRESSOR(090)	HP29
12L32	COMPRESSOR(090)	HP29
13B01	RELAY-POTENTIAL(411)	HP29
13H79	TRANSFORMER(653 651 513 060 048)	HP29
14K88	COMPRESSOR(211 018)	HP29
14K90	COMPRESSOR(211 018)	HP29
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HP29
15M36	HARNESS-COMP(060 048 042 036)	HP29
15M53	COMPRESSOR(036)	HP29
15M62	COMPRESSOR(024)	HP29

CAT#	DESCRIPTION	Unit
15M65	COMPRESSOR(030)	HP29
15M70	COMPRESSOR(036)	HP29
15M71	COMPRESSOR(036)	HP29
15M76	COMPRESSOR(042)	HP29
15M78	COMPRESSOR(048)	HP29
15M79	COMPRESSOR(048)	HP29
15M80	COMPRESSOR(048)	HP29
15M81	COMPRESSOR(048)	HP29
15M83	COMPRESSOR(048)	HP29
15M88	COMPRESSOR(060)	HP29
15M89	COMPRESSOR(060)	HP29
15M90	COMPRESSOR(060)	HP29
15M91	COMPRESSOR(060)	HP29
15M93	COMPRESSOR(060)	HP29
18M60	THERMOSTAT(120 090)	HP29
18M89	VALVE-EXPANSION(036 030 024 018)	HP29
18M91	VALVE-EXPANSION(048 042)	HP29
18M92	VALVE-EXPANSION(060)	HP29
21J29	CAPACITOR-START(060 048)	HP29
21J96	RELAY-POTENTIAL(024)	HP29
22J00	COMPRESSOR(311)	HP29
25M75	COMPRESSOR(042)	HP29
25M76	COMPRESSOR(042)	HP29
26H95	VALVE-REVERSING(413 411 311 036 030)	HP29
26H96	VALVE-REVERSING(653 651 513 511 463 461 060 048 042)	HP29
26H98	COIL-SOLENOID(653 651 513 511 463 461 413 411 311 261 211 120 090 060 048 042 03)	HP29
27J07	MOTOR-FAN(120 090)	HP29
27J09	COMPRESSOR(653 060)	HP29
27J10	COMPRESSOR(653 060)	HP29
27J11	COMPRESSOR(653 060)	HP29
27J24	COMPRESSOR(411 036)	HP29
27J30	MOTOR-FAN(120 090)	HP29
27J31	MOTOR-FAN(120 090)	HP29
29M01	TIMER-DEFROST(120 060 048 042 036 030 024 018)	HP29
29M02	TIMER-DEFROST(060 048 042 036 030 024 018)	HP29
29M10	VALVE-EXPANSION(090)	HP29
29M25	COMPRESSOR(042)	HP29
29M26	COMPRESSOR(036)	HP29
29M89	VALVE-EXPANSION(120)	HP29
31J50	VALVE-SERVICE(653 651)	HP29
31K48	COMPRESSOR(060)	HP29
31L19	MOTOR-FAN(036 030 024 018)	HP29
34M63	TIMER-DEFROST(042)	HP29
37J27	COMPRESSOR(048)	HP29
37J28	COMPRESSOR(048)	HP29
37J29	COMPRESSOR(048)	HP29
39H61	CAPACITOR(120 090)	HP29

CAT#	DESCRIPTION	Unit
39H89	CAPACITOR(653 513 060 048 042)	HP29
39L20	VALVE-SERVICE(060)	HP29
41K43	COMPRESSOR(411)	HP29
41K44	COMPRESSOR(413 036)	HP29
41K45	COMPRESSOR(413 036)	HP29
44A93	CAPACITOR-START(311 261 211 024 018)	HP29
45A01	RELAY-POTENTIAL(511 461 411)	HP29
47A60	CAPACITOR-START(211 042 036 030 024 018)	HP29
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 060 048 042 036 02)	HP29
47J35	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 060 048 042 036 03)	HP29
48J21	COMPRESSOR(651 060)	HP29
49K42	VALVE-EXPANSION(120)	HP29
49K49	CAPACITOR-FAN&RUN(511)	HP29
49K50	CAPACITOR-FAN&RUN(651 060)	HP29
49K51	CAPACITOR-FAN&RUN(048)	HP29
49L65	MOTOR-FAN(090)	HP29
49L66	MOTOR-FAN(090)	HP29
49L67	MOTOR-FAN(090)	HP29
49M68	CAPACITOR-FAN&RUN(030)	HP29
51H69	VALVE-REVERSING(261 211 024 018)	HP29
51H70	VALVE-REVERSING(120 090)	HP29
53H05	CAPACITOR(120 090)	HP29
53H06	CAPACITOR(120 090)	HP29
53H22	CAPACITOR-FAN&RUN(018)	HP29
53H23	CAPACITOR-RUN(261)	HP29
53H25	CAPACITOR-FAN&RUN(411 036)	HP29
53H27	CAPACITOR-RUN(211)	HP29
53J05	COMPRESSOR(048)	HP29
58H66	RELAY-POTENTIAL(261 211 024 018)	HP29
60L05	COMPRESSOR(120)	HP29
60L06	COMPRESSOR(120)	HP29
60L07	COMPRESSOR(120)	HP29
60L52	VALVE-SERVICE(120 090)	HP29
60M51	COMPRESSOR(018)	HP29
60M64	COMPRESSOR(024)	HP29
63A06	CAPACITOR-START(651 511 461 411)	HP29
63K15	VALVE-REVERSING(653 651 513 511 463 461)	HP29
63K46	THERMOSTAT(060 048 042 036 030 024 018)	HP29
63K70	COMPRESSOR(261 024)	HP29
63K83	COMPRESSOR(030)	HP29
63K86	CAPACITOR-FAN&RUN(311 261 211 024 018)	HP29
63K87	CAPACITOR-FAN&RUN(461 411)	HP29
65C69	CONTACTOR-COMPR(036 030 024 018)	HP29
68G84	TIMER-DEFROST(463 461)	HP29
68J09	CAPACITOR-FAN&RUN(651)	HP29
68J10	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211 060 048 042 036 030 02)	HP29
68J11	VALVE-SERVICE(261 211 120 090 024 018)	HP29
68J12	VALVE-SERVICE(413 411 311 036 030 024)	HP29

CAT#	DESCRIPTION	Unit
68J13	VALVE-SERVICE(513 511 463 461 048 042)	HP29
68J15	VALVE-EXPANSION(413 411 311 261 211 030 024 018)	HP29
68J16	VALVE-EXPANSION(653 651 513 511 463 461 060 042)	HP29
68J23	MOTOR-FAN(463 413 042 036)	HP29
68J24	MOTOR-FAN(653 651 513 511 060 048 042)	HP29
68J25	MOTOR-FAN(653 513 060 048 042)	HP29
68J29	TIMER-DEFROST(653 651 513 511 463 461 413 411 311 261 211 060 048 042 036 030 02)	HP29
68J35	CAPACITOR-FAN&RUN(651)	HP29
68J36	CONTACTOR-COMPR(461 411 311 261 211 036 030 024 018)	HP29
68J37	CONTACTOR(651 511 060 048 042)	HP29
68J42	RELAY-POTENTIAL(018)	HP29
68J50	COMPRESSOR(211)	HP29
68J51	COMPRESSOR(211 018)	HP29
68J52	COMPRESSOR(261)	HP29
68J53	COMPRESSOR(261)	HP29
68J54	COMPRESSOR(311)	HP29
68J56	COMPRESSOR(411)	HP29
68J57	COMPRESSOR(411)	HP29
68J58	COMPRESSOR(413)	HP29
68J59	COMPRESSOR(413)	HP29
68J61	COMPRESSOR(461)	HP29
68J62	COMPRESSOR(463 042)	HP29
68J63	COMPRESSOR(463 042)	HP29
68J64	COMPRESSOR(513)	HP29
68J65	COMPRESSOR(511)	HP29
68J66	COMPRESSOR(513)	HP29
68J67	COMPRESSOR(513)	HP29
68J68	COMPRESSOR(653)	HP29
68J69	COMPRESSOR(651)	HP29
68J70	COMPRESSOR(653)	HP29
68J71	COMPRESSOR(653)	HP29
68J84	TIMER-DEFROST(653 651 513 511 413 411 311 261 211 120 090 060 048 042 036 030 02)	HP29
68J91	CAPACITOR-FAN&RUN(511)	HP29
68J97	MOTOR-FAN(463 461 413 411 311 261 211 042 036 030 024 018)	HP29
69J91	THERMOSTAT(120)	HP29
69M30	CAPACITOR-FAN&RUN(018)	HP29
69M65	CAPACITOR-FAN&RUN(036)	HP29
69M70	CAPACITOR-FAN&RUN(060)	HP29
72H72	CAPACITOR-START(411)	HP29
73K14	VALVE-EXPANSION(060 048)	HP29
73K16	VALVE-EXPANSION(036)	HP29
75M47	VALVE-REVERSING(036 030)	HP29
75M48	VALVE-REVERSING(060 048 042)	HP29
75M49	COIL-SOLENOID(120 090 060 048 042 036 030 024 018)	HP29
75M50	VALVE-REVERSING(024 018)	HP29
78H27	COMPRESSOR(261 024)	HP29
78L44	THERMOSTAT(120 090)	HP29
78M24	VALVE-REVERSING(120)	HP29

CAT#	DESCRIPTION	Unit
68J10	VALVE-SERVICE(060 048 036)	HP29A
68J12	VALVE-SERVICE(036)	HP29A
68J13	VALVE-SERVICE(048)	HP29A
68J23	MOTOR-FAN(036)	HP29A
68J24	MOTOR-FAN(060 048)	HP29A
68J25	MOTOR-FAN(060 048)	HP29A
75M47	VALVE-REVERSING(036)	HP29A
75M48	VALVE-REVERSING(060 048)	HP29A
75M49	COIL-SOLENOID(060 048 036)	HP29A
86H31	SWITCH-HI PRESS(060 048 036)	HP29A
88K30	THERMOSTAT(060 048 036)	HP29A
	HP30	
87265	SWITCH-LO PRESS(651 511 461 413 411 311 261)	HP30
25J51	VALVE-SERVICE(651)	HP30
26H95	VALVE-REVERSING(311 261)	HP30
26H96	VALVE-REVERSING(511 461 413 411)	HP30
26H98	COIL-SOLENOID(651 511 461 413 411 311 261)	HP30
34K75	VALVE-REVERSING(651)	HP30
51H70	VALVE-REVERSING(651)	HP30
53H25	CAPACITOR-FAN&RUN(261)	HP30
53H29	CAPACITOR-FAN&RUN(311)	HP30
53J05	COMPRESSOR(511)	HP30
53J06	COMPRESSOR(651)	HP30
53J07	CAPACITOR-RUN(511 461)	HP30
53J08	CAPACITOR-RUN(651)	HP30
68J10	VALVE-SERVICE(651 511 461 413 411 311 261)	HP30
68J15	VALVE-EXPANSION(413 411 311 261)	HP30
68J16	VALVE-EXPANSION(651 511 461)	HP30
68J24	MOTOR-FAN(651 511 461)	HP30
68J36	CONTACTOR-COMPR(461 413 411 311 261)	HP30
68J37	CONTACTOR(651 511)	HP30
68J59	COMPRESSOR(413 411)	HP30
68J72	COMPRESSOR(261)	HP30
68J73	COMPRESSOR(311)	HP30
68J75	COMPRESSOR(461)	HP30
68J84	TIMER-DEFROST(651 511 461 413 411 311 261)	HP30
68J95	VALVE-SERVICE(311 261)	HP30
68J97	MOTOR-FAN(413 411 311 261)	HP30
68J98	VALVE-SERVICE(511 461 413 411)	HP30
86H31	SWITCH-HI PRESS(651 511 461 413 411 311 261)	HP30
97M94	COMPRESSOR(413 411)	HP30
	HP32	
58327	RELAY-POTENTIAL(60 48 42 36 30 24)	HP32

CAT#	DESCRIPTION	Unit
10M85	SWITCH-HI PRESS(60 48 42 36 30 24)	HP32
14B54	THERMOSTAT(60 48 42 36 30 24)	HP32
15M35	HARNESS-COMP(60 48 42 36 30 24)	HP32
15M95	COMPRESSOR(24)	HP32
15M96	COMPRESSOR(30)	HP32
15M97	COMPRESSOR(36)	HP32
15M98	COMPRESSOR(42)	HP32
15M99	COMPRESSOR(48)	HP32
16M00	COMPRESSOR(60)	HP32
18M97	VALVE-EXPANSION(24)	HP32
18M98	VALVE-EXPANSION(60 48 42 36 30)	HP32
21J29	CAPACITOR-START(60 48)	HP32
26H95	VALVE-REVERSING(36 30)	HP32
26H96	VALVE-REVERSING(60 48 42)	HP32
26H98	COIL-SOLENOID(60 48 42 36 30 24)	HP32
27H32	MOTOR-FAN(60 48)	HP32
27H34	MOTOR-FAN(24)	HP32
29M01	TIMER-DEFROST(60 48 42 36 30 24)	HP32
39L20	VALVE-SERVICE(60)	HP32
39L95	COMPRESSOR(24)	HP32
39L96	COMPRESSOR(30)	HP32
39L97	COMPRESSOR(36)	HP32
39L98	COMPRESSOR(42)	HP32
39L99	COMPRESSOR(48)	HP32
40L00	COMPRESSOR(60)	HP32
44L99	VALVE-EXPANSION(60 48 42 36 30)	HP32
47A60	CAPACITOR-START(42 36 30 24)	HP32
49K52	CAPACITOR-FAN&RUN(60)	HP32
49L24	VALVE-EXPANSION(36 30 24)	HP32
49L25	VALVE-EXPANSION(60 48 42)	HP32
51H69	VALVE-REVERSING(24)	HP32
53H29	CAPACITOR-FAN&RUN(30)	HP32
56L61	THERMOSTAT(60 48 42 36 30)	HP32
63K46	THERMOSTAT(60 48 42 36 30 24)	HP32
63K87	CAPACITOR-FAN&RUN(36 30)	HP32
65C69	CONTACTOR-COMPR(42 36 30 24)	HP32
65G60	MOTOR-FAN(42 36 30)	HP32
67K12	CAPACITOR-FAN&RUN(24)	HP32
67K69	CAPACITOR-FAN&RUN(42)	HP32
67K70	CAPACITOR-FAN&RUN(48)	HP32
68J10	VALVE-SERVICE(60 48 42 36 30 24)	HP32
68J12	VALVE-SERVICE(36 30 24)	HP32
68J13	VALVE-SERVICE(42)	HP32
68J36	CONTACTOR-COMPR(42 36 30 24)	HP32
68J37	CONTACTOR(60 48)	HP32
68J84	TIMER-DEFROST(60 48 42 36 30 24)	HP32
68J98	VALVE-SERVICE(48)	HP32
78L75	VALVE-EXPANSION(24)	HP32

CAT#	DESCRIPTION	Unit
	HP40	
38393	CONTACTOR(060 048 036)	HP40
38510	SWITCH-HI PRESS(060 048 036 024)	HP40
58327	RELAY-POTENTIAL(036 024)	HP40
87265	SWITCH-LO PRESS(060 048 036 024)	HP40
10W32	VALVE-SERVICE(060 048 036 024)	HP40
10W33	VALVE-SERVICE(036)	HP40
10W77	VALVE-EXPANSION(024)	HP40
13W51	VALVE-EXPANSION(048)	HP40
13W52	VALVE-EXPANSION(060)	HP40
15M35	HARNESS-COMP(036 024)	HP40
15M36	HARNESS-COMP(060 048 036)	HP40
15M55	COMPRESSOR(024)	HP40
15M56	COMPRESSOR(036)	HP40
15M57	COMPRESSOR(036)	HP40
15M58	COMPRESSOR(048)	HP40
15M59	COMPRESSOR(060)	HP40
18M24	VALVE-EXPANSION(036)	HP40
22W71	VALVE-SERVICE(048)	HP40
26H95	VALVE-REVERSING(036)	HP40
26H96	VALVE-REVERSING(060 048)	HP40
26H98	COIL-SOLENOID(060 048 036 024)	HP40
29M01	TIMER-DEFROST(060 048 036 024)	HP40
31J50	VALVE-SERVICE(060)	HP40
39H89	CAPACITOR(060 048)	HP40
47A60	CAPACITOR-START(036 024)	HP40
49K92	CAPACITOR-FAN&RUN(036)	HP40
49L27	COMPRESSOR(024)	HP40
49L28	COMPRESSOR(036)	HP40
49L29	COMPRESSOR(036)	HP40
49L30	COMPRESSOR(048)	HP40
49L31	COMPRESSOR(060)	HP40
49L33	VALVE-EXPANSION(036 024)	HP40
49L34	VALVE-EXPANSION(060 048)	HP40
49L50	VALVE-EXPANSION(060)	HP40
49L51	VALVE-EXPANSION(048)	HP40
49L52	VALVE-EXPANSION(036 024)	HP40
51H69	VALVE-REVERSING(024)	HP40
53H25	CAPACITOR-FAN&RUN(024)	HP40
56J20	VALVE-EXPANSION(060 048)	HP40
65C69	CONTACTOR-COMPR(036 024)	HP40
68J10	VALVE-SERVICE(060 048 036 024)	HP40
68J11	VALVE-SERVICE(024)	HP40
68J12	VALVE-SERVICE(036)	HP40
68J13	VALVE-SERVICE(048)	HP40

CAT#	DESCRIPTION	Unit
68J23	MOTOR-FAN(036)	HP40
68J25	MOTOR-FAN(060 048)	HP40
68J29	TIMER-DEFROST(024)	HP40
68J36	CONTACTOR-COMPR(036 024)	HP40
68J84	TIMER-DEFROST(060 048 036 024)	HP40
68J97	MOTOR-FAN(036 024)	HP40
75M47	VALVE-REVERSING(036)	HP40
75M48	VALVE-REVERSING(060 048)	HP40
75M49	COIL-SOLENOID(060 048 036 024)	HP40
75M50	VALVE-REVERSING(024)	HP40
80K48	CAPACITOR(024)	HP40
88K30	THERMOSTAT(060 048 036 024)	HP40
88M12	VALVE-SERVICE(060)	HP40
89M94	CAPACITOR(036)	HP40
95M55	CONTACTOR(036 024)	HP40
95M57	CONTACTOR(060 048 036)	HP40
98M69	SWITCH-HI PRESS(060 048 036 024)	HP40
	HPXA12	
38393	CONTACTOR(060 048 036)	HPXA12
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	HPXA12
15M06	COMPRESSOR(018)	HPXA12
15M10	COMPRESSOR(048)	HPXA12
15M17	VALVE-EXPANSION(024 018)	HPXA12
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HPXA12
15M36	HARNESS-COMP(060 048 036)	HPXA12
15M95	COMPRESSOR(024)	HPXA12
15M96	COMPRESSOR(030)	HPXA12
15M97	COMPRESSOR(036)	HPXA12
15M98	COMPRESSOR(042)	HPXA12
16M00	COMPRESSOR(060)	HPXA12
21J29	CAPACITOR-START(060)	HPXA12
26H95	VALVE-REVERSING(030 024 018)	HPXA12
26H96	VALVE-REVERSING(060 048 042 036)	HPXA12
26H98	COIL-SOLENOID(060 048 042 036 030 024 018)	HPXA12
31L19	MOTOR-FAN(036 030 024 018)	HPXA12
38H89	CAPACITOR-RUN(048)	HPXA12
39H89	CAPACITOR(060)	HPXA12
39L20	VALVE-SERVICE(060)	HPXA12
44A93	CAPACITOR-START(018)	HPXA12
47A60	CAPACITOR-START(048 042 036 030 024)	HPXA12
49L24	VALVE-EXPANSION(036 030 024 018)	HPXA12
49L25	VALVE-EXPANSION(060 048 042)	HPXA12
56M85	TIMER-DEFROST(060 048 042 036 030 024 018)	HPXA12
60L39	TIMER-DEFROST(060 048 042 036 030 024 018)	HPXA12
65C69	CONTACTOR-COMPR(042 036 030 024 018)	HPXA12

CAT#	DESCRIPTION	Unit
68J10	VALVE-SERVICE(060 048 042 036 030 024 018)	HPXA12
68J23	MOTOR-FAN(036)	HPXA12
68J24	MOTOR-FAN(060 048 042)	HPXA12
68J25	MOTOR-FAN(060 048)	HPXA12
68J95	VALVE-SERVICE(030 024 018)	HPXA12
68J98	VALVE-SERVICE(048 042 036)	HPXA12
69M03	COMPRESSOR(036)	HPXA12
69M04	COMPRESSOR(036)	HPXA12
69M06	COMPRESSOR(060)	HPXA12
69M07	COMPRESSOR(060)	HPXA12
69M35	COMPRESSOR(048)	HPXA12
69M36	COMPRESSOR(048)	HPXA12
69M64	CAPACITOR-FAN&RUN(036 030)	HPXA12
69M69	CAPACITOR-FAN&RUN(042)	HPXA12
69M70	CAPACITOR-FAN&RUN(060)	HPXA12
75M47	VALVE-REVERSING(030 024 018)	HPXA12
75M48	VALVE-REVERSING(060 048 042 036)	HPXA12
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	HPXA12
80K48	CAPACITOR(024 018)	HPXA12
97H16	CAPACITOR-RUN(048)	HPXA12
97L53	VALVE-EXPANSION(060 048 042 036 030)	HPXA12
	HPXA15	
	HEATINGANDAIRPARTS.COM	
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	HPXA15
10M85	SWITCH-HI PRESS(060 048 042 036 030 024)	HPXA15
14B54	THERMOSTAT(060 048 042 036 030 024)	HPXA15
15M35	HARNESS-COMP(060 048 042 036 030 024)	HPXA15
15M95	COMPRESSOR(024)	HPXA15
15M96	COMPRESSOR(030)	HPXA15
15M97	COMPRESSOR(036)	HPXA15
15M98	COMPRESSOR(042)	HPXA15
15M99	COMPRESSOR(048)	HPXA15
16M00	COMPRESSOR(060)	HPXA15
18M97	VALVE-EXPANSION(024)	HPXA15
18M98	VALVE-EXPANSION(060 048 042 036 030)	HPXA15
21J29	CAPACITOR-START(060 048)	HPXA15
26H95	VALVE-REVERSING(036 030)	HPXA15
26H96	VALVE-REVERSING(060 048 042)	HPXA15
26H98	COIL-SOLENOID(060 048 042 036 030 024)	HPXA15
27H32	MOTOR-FAN(060 048)	HPXA15
27H34	MOTOR-FAN(024)	HPXA15
29M01	TIMER-DEFROST(060 048 042 036 030 024)	HPXA15
39L20	VALVE-SERVICE(060)	HPXA15
47A60	CAPACITOR-START(042 036 030 024)	HPXA15
49K52	CAPACITOR-FAN&RUN(060)	HPXA15
49L24	VALVE-EXPANSION(036 030 024)	HPXA15

CAT#	DESCRIPTION	Unit
49L25	VALVE-EXPANSION(060 048 042)	HPXA15
51H69	VALVE-REVERSING(024)	HPXA15
56L61	THERMOSTAT(060 048 042 036 030)	HPXA15
63K46	THERMOSTAT(060 048 042 036 030 024)	HPXA15
63K87	CAPACITOR-FAN&RUN(036 030)	HPXA15
65C69	CONTACTOR-COMPR(042 036 030 024)	HPXA15
65G60	MOTOR-FAN(042 036 030)	HPXA15
67K12	CAPACITOR-FAN&RUN(024)	HPXA15
67K69	CAPACITOR-FAN&RUN(042)	HPXA15
67K70	CAPACITOR-FAN&RUN(048)	HPXA15
68J10	VALVE-SERVICE(060 048 042 036 030 024)	HPXA15
68J12	VALVE-SERVICE(036 030 024)	HPXA15
68J13	VALVE-SERVICE(042)	HPXA15
68J84	TIMER-DEFROST(060 048 042 036 030 024)	HPXA15
68J98	VALVE-SERVICE(048)	HPXA15
72H36	MOTOR-FAN(060 048)	HPXA15
	HPXA16	
58327	RELAY-POTENTIAL(060 048 036 024)	HPXA16
10W69	CAPACITOR-FAN&RUN(036)	HPXA16
15M35	HARNESS-COMP(060 048 036 024)	HPXA16
21J29	CAPACITOR-START(060 048)	HPXA16
27H34	MOTOR-FAN(036 024)	HPXA16
38M40	COMPRESSOR(048)	HPXA16
38M41	COMPRESSOR(060)	HPXA16
38M43	CAPACITOR-FAN&RUN(048)	HPXA16
38M45	TRANSFORMER(060 048 036 024)	HPXA16
47A60	CAPACITOR-START(036 024)	HPXA16
49M43	VALVE-SERVICE(060 048 036 024)	HPXA16
49M73	HARNESS-COMP(060 048 036 024)	HPXA16
49M98	SWITCH-LO PRESS(060 048 036 024)	HPXA16
56L61	THERMOSTAT(036 024)	HPXA16
56M62	THERMOSTAT(060 048)	HPXA16
56M65	VALVE-EXPANSION(060 048 036 024)	HPXA16
65C69	CONTACTOR-COMPR(036 024)	HPXA16
69M43	COMPRESSOR(024)	HPXA16
72H36	MOTOR-FAN(060 048)	HPXA16
75M47	VALVE-REVERSING(036 024)	HPXA16
75M48	VALVE-REVERSING(060 048)	HPXA16
75M49	COIL-SOLENOID(060 048 036 024)	HPXA16
86M36	SWITCH-HI PRESS(060 048 036 024)	HPXA16
86M38	CONTROL-DEFROST(060 048 036 024)	HPXA16
88M11	VALVE-SERVICE(048 036 024)	HPXA16
88M12	VALVE-SERVICE(060)	HPXA16
89M72	CAPACITOR-FAN&RUN(024)	HPXA16
92M47	COMPRESSOR(036)	HPXA16

CAT#	DESCRIPTION	Unit
95M02	CAPACITOR-FAN&RUN(060)	HPXA16
	HPXA19	
58327	RELAY-POTENTIAL(060 048 038 036)	HPXA19
10M85	SWITCH-HI PRESS(060 048 038 036 024)	HPXA19
13H52	THERMOSTAT(060 048 038 036 024)	HPXA19
15M35	HARNESS-COMP(060 048 038 036 024)	HPXA19
21J29	CAPACITOR-START(060 048)	HPXA19
26H95	VALVE-REVERSING(036 024)	HPXA19
26H96	VALVE-REVERSING(060 048 038)	HPXA19
26H98	COIL-SOLENOID(060 048 038 036 024)	HPXA19
27H34	MOTOR-FAN(036 024)	HPXA19
38M40	COMPRESSOR(048)	HPXA19
38M41	COMPRESSOR(060)	HPXA19
38M42	CAPACITOR-FAN&RUN(060)	HPXA19
38M43	CAPACITOR-FAN&RUN(048)	HPXA19
38M45	TRANSFORMER(060 048 038 036 024)	HPXA19
39L20	VALVE-SERVICE(060)	HPXA19
47A60	CAPACITOR-START(038 036 024)	HPXA19
49M43	VALVE-SERVICE(060 048 038 036 024)	HPXA19
49M73	HARNESS-COMP(060 048 038 036 024)	HPXA19
49M98	SWITCH-LO PRESS(060 048 038 036 024)	HPXA19
51M01	MOTOR-FAN(038)	HPXA19
51M05	VALVE-EXPANSION(038)	HPXA19
56L61	THERMOSTAT(036 024)	HPXA19
56M62	THERMOSTAT(060 048 038)	HPXA19
56M65	VALVE-EXPANSION(060 048 036 024)	HPXA19
56M85	TIMER-DEFROST(060 048 038 036 024)	HPXA19
63K86	CAPACITOR-FAN&RUN(024)	HPXA19
65C69	CONTACTOR-COMPR(036 024)	HPXA19
68J98	VALVE-SERVICE(048 038 036 024)	HPXA19
69M41	THERMOSTAT(024)	HPXA19
69M43	COMPRESSOR(024)	HPXA19
69M50	MOTOR-FAN(038)	HPXA19
72H36	MOTOR-FAN(060 048)	HPXA19
75M47	VALVE-REVERSING(036 024)	HPXA19
75M48	VALVE-REVERSING(060 048 038)	HPXA19
75M49	COIL-SOLENOID(060 048 038 036 024)	HPXA19
78M23	THERMOSTAT(060 048 038 036 024)	HPXA19
79M98	RELAY-POTENTIAL(024)	HPXA19
80K48	CAPACITOR(038 036)	HPXA19
92M47	COMPRESSOR(038 036)	HPXA19
95M02	CAPACITOR-FAN&RUN(060)	HPXA19
98M63	COMPRESSOR(036)	HPXA19
	HPXB15	

CAT#	DESCRIPTION	Unit
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	HPXB15
10M85	SWITCH-HI PRESS(060 048 042 036 030 024)	HPXB15
15M35	HARNESS-COMP(060 048 042 036 030 024)	HPXB15
15M95	COMPRESSOR(024)	HPXB15
15M96	COMPRESSOR(030)	HPXB15
15M97	COMPRESSOR(036)	HPXB15
15M98	COMPRESSOR(042)	HPXB15
15M99	COMPRESSOR(048)	HPXB15
16M00	COMPRESSOR(060)	HPXB15
18M97	VALVE-EXPANSION(024)	HPXB15
18M98	VALVE-EXPANSION(060 048 042 036 030)	HPXB15
21J29	CAPACITOR-START(060 048)	HPXB15
26H95	VALVE-REVERSING(036 030)	HPXB15
26H96	VALVE-REVERSING(060 048 042)	HPXB15
26H98	COIL-SOLENOID(060 048 042 036 030 024)	HPXB15
27H34	MOTOR-FAN(024)	HPXB15
39L20	VALVE-SERVICE(060)	HPXB15
47A60	CAPACITOR-START(042 036 030 024)	HPXB15
49K52	CAPACITOR-FAN&RUN(060)	HPXB15
51H69	VALVE-REVERSING(024)	HPXB15
56L61	THERMOSTAT(060 048 042 036 030 024)	HPXB15
56M37	TIMER-DEFROST(060 048 042 036 030 024)	HPXB15
63K46	THERMOSTAT(060 048 042 036 030 024)	HPXB15
65C69	CONTACTOR-COMPR(042 036 030 024)	HPXB15
65G60	MOTOR-FAN(042 036 030)	HPXB15
67K12	CAPACITOR-FAN&RUN(024)	HPXB15
67K70	CAPACITOR-FAN&RUN(048)	HPXB15
68J10	VALVE-SERVICE(060 048 042 036 030 024)	HPXB15
68J12	VALVE-SERVICE(036 030 024)	HPXB15
68J13	VALVE-SERVICE(042)	HPXB15
68J98	VALVE-SERVICE(048)	HPXB15
69M64	CAPACITOR-FAN&RUN(036 030)	HPXB15
69M66	CAPACITOR-FAN&RUN(042)	HPXB15
72H36	MOTOR-FAN(060 048)	HPXB15
75M47	VALVE-REVERSING(036 030)	HPXB15
75M48	VALVE-REVERSING(060 048 042)	HPXB15
75M49	COIL-SOLENOID(060 048 042 036 030 024)	HPXB15
75M50	VALVE-REVERSING(024)	HPXB15
	XP13	
58327	RELAY-POTENTIAL(060 048 042 037 036 030 024 018)	XP13
10W32	VALVE-SERVICE(060 048 042 037 036 030 024 018)	XP13
10W33	VALVE-SERVICE(036 030 024 018)	XP13
15M35	HARNESS-COMP(060 048 042 037 036 030 024 018)	XP13
21W81	CAPACITOR-FAN&RUN(060)	XP13

CAT#	DESCRIPTION	Unit
22W71	VALVE-SERVICE(048 042 037)	XP13
22W77	VALVE-EXPANSION(037)	XP13
23W14	VALVE-EXPANSION(024)	XP13
23W26	SWITCH-LO PRESS(060 048 042 036 030 024 018)	XP13
29W09	CAPACITOR-FAN&RUN(048)	XP13
30W87	CONTROL-DEFROST(060 048 042 036 030 024 018)	XP13
31W74	VALVE-SERVICE(060)	XP13
33W84	VALVE-EXPANSION(030 024 018)	XP13
33W85	VALVE-EXPANSION(048 042 036)	XP13
34W44	VALVE-REVERSING(030 024 018)	XP13
42W18	COIL-SOLENOID(060 048 042 036 030 024 018)	XP13
42W58	VALVE-REVERSING(036 018)	XP13
42W59	VALVE-REVERSING(060 048 042)	XP13
43W22	VALVE-EXPANSION(060)	XP13
43W49	MOTOR-FAN(024 018)	XP13
43W86	COMPRESSOR(036)	XP13
43W87	COMPRESSOR(060)	XP13
44W62	HARNESS-COMP(060 048 042 036 030 024 018)	XP13
47W86	MOTOR-FAN(036 030 024 018)	XP13
49W62	VALVE-REVERSING(060 048 042)	XP13
49W64	VALVE-REVERSING(036 030 024 018)	XP13
49W65	COIL-SOLENOID(060 048 042 036 030 024 018)	XP13
49W86	MOTOR-FAN(060 048 042)	XP13
52W10	COMPRESSOR(024)	XP13
52W11	COMPRESSOR(048)	XP13
52W33	COMPRESSOR(030)	XP13
52W44	COMPRESSOR(042)	XP13
53W14	COMPRESSOR(018)	XP13
63A06	CAPACITOR-START(060 048 042 037 036 030 024)	XP13
75M49	COIL-SOLENOID(060 048 042 037 036 030 024 018)	XP13
86M36	SWITCH-HI PRESS(060 048 042 037 036 030 024 018)	XP13
88M12	VALVE-SERVICE(060)	XP13
88M97	SWITCH-LO PRESS(060 048 042 037 036 030 024 018)	XP13
89M71	CAPACITOR-DUAL(018)	XP13
89M74	CAPACITOR-FAN&RUN(024 018)	XP13
89M80	CAPACITOR-FAN&RUN(042 037 036)	XP13
89M83	CAPACITOR-FAN&RUN(042)	XP13
89M87	CAPACITOR-FAN&RUN(048)	XP13
89M92	CAPACITOR-FAN&RUN(060)	XP13
95M54	THERMOSTAT(060 048 042 037)	XP13
95M55	CONTACTOR(042 037 036 030 024 018)	XP13
95M56	CONTACTOR(060 048)	XP13
97M49	MOTOR-FAN(036 030)	XP13
97M50	MOTOR-FAN(036 030 024 018)	XP13
97M51	MOTOR-FAN(060 048)	XP13
97M52	COMPRESSOR(018)	XP13
97M53	COMPRESSOR(024)	XP13

CAT#	DESCRIPTION	Unit
97M54	COMPRESSOR(030)	XP13
97M55	COMPRESSOR(037 036)	XP13
97M56	COMPRESSOR(042)	XP13
97M57	COMPRESSOR(048)	XP13
97M58	COMPRESSOR(060)	XP13
97M60	THERMOSTAT(060 048 042 037 036 030 024 018)	XP13
97M82	VALVE-REVERSING(036 030 024 018)	XP13
97M83	VALVE-REVERSING(060 048 042 037)	XP13
97M84	VALVE-EXPANSION(030 024 018)	XP13
97M85	VALVE-EXPANSION(060 048 042 036)	XP13
98M36	MOTOR-FAN(042 037)	XP13
	XP14	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	XP14
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	XP14
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	XP14
21J29	CAPACITOR-START(060)	XP14
22W77	VALVE-EXPANSION(036)	XP14
23W14	VALVE-EXPANSION(030 024 018)	XP14
23W26	SWITCH-LO PRESS(060 048 042 036 030 024 018)	XP14
27W16	COMPRESSOR(030)	XP14
29W09	CAPACITOR-FAN&RUN(060 048)	XP14
29W60	MOTOR-FAN(060 048 042 036)	XP14
31W72	VALVE-SERVICE(030 018)	XP14
33W84	VALVE-EXPANSION(030 024 018)	XP14
33W85	VALVE-EXPANSION(060 048 042 036)	XP14
40W00	CONTROL-DEFROST(060 048 042 036 030 024 018)	XP14
42W04	CONTROL-DEFROST(060 048 042 036 030 024 018)	XP14
42W18	COIL-SOLENOID(060 048 042 036 030 024 018)	XP14
42W58	VALVE-REVERSING(030 024 018)	XP14
42W59	VALVE-REVERSING(060 048 042 036)	XP14
44W62	HARNESS-COMP(030 024 018)	XP14
47A60	CAPACITOR-START(048 042 036 030 024 018)	XP14
47W86	MOTOR-FAN(030 024 018)	XP14
49W62	VALVE-REVERSING(060 048 042 036)	XP14
49W64	VALVE-REVERSING(030 024 018)	XP14
49W65	COIL-SOLENOID(060 048 042 036 030 024 018)	XP14
52W10	COMPRESSOR(024)	XP14
52W33	COMPRESSOR(030)	XP14
53W14	COMPRESSOR(018)	XP14
75M49	COIL-SOLENOID(060 048 042 036 030 024 018)	XP14
86M36	SWITCH-HI PRESS(060 048 042 036 030 024 018)	XP14
88M10	VALVE-SERVICE(030 024 018)	XP14
88M11	VALVE-SERVICE(048 042 036)	XP14
88M12	VALVE-SERVICE(060)	XP14
89M71	CAPACITOR-DUAL(018)	XP14

CAT#	DESCRIPTION	Unit
89M73	CAPACITOR-DUAL(030)	XP14
89M74	CAPACITOR-FAN&RUN(024 018)	XP14
89M83	CAPACITOR-FAN&RUN(042 036)	XP14
95M54	THERMOSTAT(060 048 042 036)	XP14
95M55	CONTACTOR(042 036 030 024 018)	XP14
95M56	CONTACTOR(060 048)	XP14
97M50	MOTOR-FAN(030 024 018)	XP14
97M52	COMPRESSOR(018)	XP14
97M53	COMPRESSOR(024)	XP14
97M56	COMPRESSOR(042)	XP14
97M57	COMPRESSOR(048)	XP14
97M82	VALVE-REVERSING(030 024 018)	XP14
97M83	VALVE-REVERSING(060 048 042 036)	XP14
97M85	VALVE-EXPANSION(060 048 042)	XP14
99M89	COMPRESSOR(036)	XP14
99M90	COMPRESSOR(060)	XP14
	XP15	
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	XP15
15M35	HARNESS-COMP(060 048 042 036 030 024)	XP15
18W10	MOTOR-FAN(030 024)	XP15
18W11	MOTOR-FAN(042 036)	XP15
21W12	MODULE(060 048 042 036 030 024)	XP15
21W71	VALVE-EXPANSION(042 036)	XP15
24W69	MOTOR-FAN(060 048)	XP15
31W72	VALVE-SERVICE(036 030 024)	XP15
31W73	VALVE-SERVICE(048 042)	XP15
31W74	VALVE-SERVICE(060)	XP15
33W84	VALVE-EXPANSION(030 024)	XP15
33W85	VALVE-EXPANSION(060 048 042 036)	XP15
38W83	MOTOR-FAN(030 024)	XP15
38W84	MOTOR-FAN(042 036)	XP15
40W00	CONTROL-DEFROST(060 048 042 036 030 024)	XP15
46W14	CAPACITOR-FAN&RUN(042 036)	XP15
49W62	VALVE-REVERSING(060 048 042)	XP15
49W64	VALVE-REVERSING(036 030 024)	XP15
49W65	COIL-SOLENOID(060 048 042 036 030 024)	XP15
56M62	THERMOSTAT(060 048)	XP15
63A06	CAPACITOR-START(060 048 042 036 030 024)	XP15
75M49	COIL-SOLENOID(060 048 042 036 030 024)	XP15
85M52	VALVE-SERVICE(060 048 042 036 030 024)	XP15
86M36	SWITCH-HI PRESS(060 048 042 036 030 024)	XP15
86M38	CONTROL-DEFROST(060 048 042 036 030 024)	XP15
88M10	VALVE-SERVICE(036 030 024)	XP15
88M11	VALVE-SERVICE(048 042)	XP15
88M12	VALVE-SERVICE(060)	XP15

CAT#	DESCRIPTION	Unit
88M97	SWITCH-LO PRESS(060 048 042 036 030 024)	XP15
89M72	CAPACITOR-FAN&RUN(024)	XP15
89M73	CAPACITOR-DUAL(024)	XP15
89M75	CAPACITOR-FAN&RUN(030)	XP15
89M76	CAPACITOR(030)	XP15
89M78	CAPACITOR-FAN&RUN(042 036)	XP15
89M90	CAPACITOR-DUAL(048)	XP15
93M61	VALVE-EXPANSION(060 048 030 024)	XP15
95M02	CAPACITOR-FAN&RUN(060)	XP15
95M54	THERMOSTAT(042 036 030 024)	XP15
95M55	CONTACTOR(042 036 030 024)	XP15
95M56	CONTACTOR(060 048)	XP15
97M53	COMPRESSOR(024)	XP15
97M54	COMPRESSOR(030)	XP15
97M55	COMPRESSOR(036)	XP15
97M56	COMPRESSOR(042)	XP15
97M57	COMPRESSOR(048)	XP15
97M82	VALVE-REVERSING(036 030 024)	XP15
97M83	VALVE-REVERSING(060 048 042)	XP15
99M90	COMPRESSOR(060)	XP15
	XP16	
58327	RELAY-POTENTIAL(060 048 036 024)	XP16
10W32	VALVE-SERVICE(060 048 036 024)	XP16
10W33	VALVE-SERVICE(024)	XP16
15M35	HARNESS-COMP(060 048 036 024)	XP16
21J29	CAPACITOR-START(060 048)	XP16
22W71	VALVE-SERVICE(036)	XP16
23W14	VALVE-EXPANSION(024)	XP16
23W26	SWITCH-LO PRESS(060 048 036 024)	XP16
29W60	MOTOR-FAN(060 048)	XP16
31W72	VALVE-SERVICE(024)	XP16
31W73	VALVE-SERVICE(048 036)	XP16
31W74	VALVE-SERVICE(060)	XP16
33W84	VALVE-EXPANSION(024)	XP16
33W85	VALVE-EXPANSION(048 036)	XP16
40W00	CONTROL-DEFROST(060 048 036 024)	XP16
42W04	CONTROL-DEFROST(060 048 036 024)	XP16
42W18	COIL-SOLENOID(060 048 036 024)	XP16
42W58	VALVE-REVERSING(024)	XP16
42W59	VALVE-REVERSING(060 048 036)	XP16
43W22	VALVE-EXPANSION(060)	XP16
47A60	CAPACITOR-START(048 024)	XP16
47W86	MOTOR-FAN(024)	XP16
49M73	HARNESS-COMP(060 048 036 024)	XP16
49W62	VALVE-REVERSING(060 048 036)	XP16

CAT#	DESCRIPTION	Unit
49W64	VALVE-REVERSING(024)	XP16
49W65	COIL-SOLENOID(060 048 036 024)	XP16
49W86	MOTOR-FAN(036)	XP16
74H01	RELAY-POTENTIAL(060 036 024)	XP16
75M49	COIL-SOLENOID(060 048 036 024)	XP16
79M98	RELAY-POTENTIAL(036)	XP16
86M36	SWITCH-HI PRESS(060 048 036 024)	XP16
86M38	CONTROL-DEFROST(060 048 036 024)	XP16
89M74	CAPACITOR-FAN&RUN(024)	XP16
89M83	CAPACITOR-FAN&RUN(048)	XP16
89M92	CAPACITOR-FAN&RUN(060)	XP16
92M46	COMPRESSOR(024)	XP16
92M47	COMPRESSOR(036)	XP16
92M48	COMPRESSOR(048)	XP16
92M49	COMPRESSOR(060)	XP16
95M54	THERMOSTAT(060 048 036 024)	XP16
95M55	CONTACTOR(036 024)	XP16
95M56	CONTACTOR(060 048)	XP16
97M50	MOTOR-FAN(024)	XP16
97M51	MOTOR-FAN(048)	XP16
97M82	VALVE-REVERSING(024)	XP16
97M83	VALVE-REVERSING(060 048 036)	XP16
97M85	VALVE-EXPANSION(060 048 036)	XP16
98M36	MOTOR-FAN(036)	XP16
98M71	MOTOR-FAN(060)	XP16
	XP17	
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	XP17
15M35	HARNESS-COMP(060 048 042 036 030 024)	XP17
15W10	COMPRESSOR(042)	XP17
23W26	SWITCH-LO PRESS(060 048 042 036 030 024)	XP17
29W09	CAPACITOR-FAN&RUN(060 048)	XP17
31W72	VALVE-SERVICE(036 030 024)	XP17
31W73	VALVE-SERVICE(048 042)	XP17
31W74	VALVE-SERVICE(060)	XP17
33W84	VALVE-EXPANSION(030 024)	XP17
33W85	VALVE-EXPANSION(060 048 042 036)	XP17
42W18	COIL-SOLENOID(060 048 042 036 030 024)	XP17
42W58	VALVE-REVERSING(036 030 024)	XP17
42W59	VALVE-REVERSING(060 048 042)	XP17
46W14	CAPACITOR-FAN&RUN(042 036)	XP17
56M62	THERMOSTAT(060 048)	XP17
63A06	CAPACITOR-START(060 048 042 036 030 024)	XP17
66W09	VALVE-SERVICE(048 036 030 024)	XP17
66W10	VALVE-SERVICE(060 042)	XP17
85M52	VALVE-SERVICE(060 048 042 036 030 024)	XP17

CAT#	DESCRIPTION	Unit
86M36	SWITCH-HI PRESS(060 048 042 036 030 024)	XP17
89M73	CAPACITOR-DUAL(024)	XP17
89M76	CAPACITOR(030)	XP17
89M80	CAPACITOR-FAN&RUN(042 036)	XP17
95M54	THERMOSTAT(042 036 030 024)	XP17
95M55	CONTACTOR(042 036 030 024)	XP17
95M56	CONTACTOR(060 048)	XP17
97M53	COMPRESSOR(024)	XP17
97M54	COMPRESSOR(030)	XP17
97M55	COMPRESSOR(036)	XP17
97M57	COMPRESSOR(048)	XP17
	XP19	
58327	RELAY-POTENTIAL(060 048 036 024)	XP19
15M35	HARNESS-COMP(060 048 036 024)	XP19
21J29	CAPACITOR-START(060 048)	XP19
21W71	VALVE-EXPANSION(036)	XP19
23W26	SWITCH-LO PRESS(060 048 036)	XP19
31W73	VALVE-SERVICE(048 036 024)	XP19
31W74	VALVE-SERVICE(060)	XP19
33W84	VALVE-EXPANSION(024)	XP19
33W85	VALVE-EXPANSION(060 048 036)	XP19
38M43	CAPACITOR-FAN&RUN(048)	XP19
40W00	CONTROL-DEFROST(060 048 036 024)	XP19
42W18	COIL-SOLENOID(060 048 036)	XP19
42W59	VALVE-REVERSING(060 048 036)	XP19
49M98	SWITCH-LO PRESS(060 048 036 024)	XP19
49W62	VALVE-REVERSING(060 048 036 024)	XP19
49W65	COIL-SOLENOID(060 048 036 024)	XP19
56L61	THERMOSTAT(036 024)	XP19
56M62	THERMOSTAT(060 048)	XP19
63K86	CAPACITOR-FAN&RUN(024)	XP19
65C69	CONTACTOR-COMPR(036 024)	XP19
69M70	CAPACITOR-FAN&RUN(060)	XP19
74H01	RELAY-POTENTIAL(060)	XP19
75M48	VALVE-REVERSING(060 048 036 024)	XP19
75M49	COIL-SOLENOID(060 048 036 024)	XP19
80K48	CAPACITOR(036)	XP19
85M48	MOTOR-FAN(060 048 036 024)	XP19
85M52	VALVE-SERVICE(060 048 036 024)	XP19
85M53	MODULE(060 048 036 024)	XP19
85M54	HARNESS-COMP(060 048 036 024)	XP19
86M36	SWITCH-HI PRESS(060 048 036 024)	XP19
86M38	CONTROL-DEFROST(060 048 036 024)	XP19
88M11	VALVE-SERVICE(048 036 024)	XP19
88M12	VALVE-SERVICE(060)	XP19

CAT#	DESCRIPTION	Unit
88M97	SWITCH-LO PRESS(060)	XP19
89M73	CAPACITOR-DUAL(036)	XP19
89M83	CAPACITOR-FAN&RUN(048)	XP19
92M46	COMPRESSOR(024)	XP19
92M47	COMPRESSOR(036)	XP19
92M48	COMPRESSOR(048)	XP19
92M49	COMPRESSOR(060)	XP19
93M61	VALVE-EXPANSION(060 048 024)	XP19
95M54	THERMOSTAT(036)	XP19
95M55	CONTACTOR(036)	XP19
95M56	CONTACTOR(060 048)	XP19
98M39	MOTOR-FAN(060 048 036 024)	XP19
	XPG15	
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	XPG15
15M35	HARNESS-COMP(060 048 042 036 030 024)	XPG15
15W10	COMPRESSOR(042)	XPG15
21W81	CAPACITOR-FAN&RUN(060)	XPG15
23W26	SWITCH-LO PRESS(060 048 042 036 030 024)	XPG15
24W69	MOTOR-FAN(048 042)	XPG15
31W72	VALVE-SERVICE(036 030 024)	XPG15
31W73	VALVE-SERVICE(048 042)	XPG15
31W74	VALVE-SERVICE(060)	XPG15
33W84	VALVE-EXPANSION(030 024)	XPG15
33W85	VALVE-EXPANSION(060 048 042 036)	XPG15
38W83	MOTOR-FAN(030 024)	XPG15
38W84	MOTOR-FAN(036)	XPG15
42W18	COIL-SOLENOID(030 024)	XPG15
46W14	CAPACITOR-FAN&RUN(036)	XPG15
47W47	CONTROL-DEFROST(060 048 042 036 030 024)	XPG15
49W62	VALVE-REVERSING(060 048 042)	XPG15
49W64	VALVE-REVERSING(036 030 024)	XPG15
49W65	COIL-SOLENOID(060 048 042 036 030 024)	XPG15
56M62	THERMOSTAT(060 048)	XPG15
63A06	CAPACITOR-START(060 048 042 036 030 024)	XPG15
85M52	VALVE-SERVICE(060 048 042 036 030 024)	XPG15
86M36	SWITCH-HI PRESS(060 048 042 036 030 024)	XPG15
89M73	CAPACITOR-DUAL(024)	XPG15
89M76	CAPACITOR(030)	XPG15
89M83	CAPACITOR-FAN&RUN(042)	XPG15
89M90	CAPACITOR-DUAL(048)	XPG15
95M54	THERMOSTAT(042 036 030 024)	XPG15
95M55	CONTACTOR(042 036 030 024)	XPG15
95M56	CONTACTOR(060 048)	XPG15
97M53	COMPRESSOR(024)	XPG15
97M54	COMPRESSOR(030)	XPG15
97M55	COMPRESSOR(036)	XPG15

CAT#	DESCRIPTION	Unit
97M57	COMPRESSOR(048)	XPG15
98M39	MOTOR-FAN(060)	XPG15
99M90	COMPRESSOR(060)	XPG15
	XPG20	
58327	RELAY-POTENTIAL(048 036)	XPG20
15M35	HARNESS-COMP(060 048 036)	XPG20
21J29	CAPACITOR-START(060)	XPG20
23W26	SWITCH-LO PRESS(060 048 036)	XPG20
31W73	VALVE-SERVICE(048 036)	XPG20
31W74	VALVE-SERVICE(060)	XPG20
33W85	VALVE-EXPANSION(060 048 036)	XPG20
42W04	CONTROL-DEFROST(060 048 036)	XPG20
42W18	COIL-SOLENOID(060 048)	XPG20
42W59	VALVE-REVERSING(060 048)	XPG20
47A60	CAPACITOR-START(048 036)	XPG20
49W62	VALVE-REVERSING(036)	XPG20
49W65	COIL-SOLENOID(036)	XPG20
50W32	MOTOR-FAN(060 048 036)	XPG20
56M62	THERMOSTAT(060 048)	XPG20
74H01	RELAY-POTENTIAL(060)	XPG20
85M52	VALVE-SERVICE(060 048 036)	XPG20
85M53	MODULE(060 048 036)	XPG20
85M54	HARNESS-COMP(060 048 036)	XPG20
86M36	SWITCH-HI PRESS(060 048 036)	XPG20
89M83	CAPACITOR-FAN&RUN(048)	XPG20
92M47	COMPRESSOR(036)	XPG20
92M48	COMPRESSOR(048)	XPG20
92M49	COMPRESSOR(060)	XPG20
95M54	THERMOSTAT(036)	XPG20
95M55	CONTACTOR(036)	XPG20
95M56	CONTACTOR(060 048)	XPG20
98M39	MOTOR-FAN(060 048 036)	XPG20