

LENNOX AIR CONDITIONERS

CAT#	DESCRIPTION	Unit
10AC12		
52J67	MOTOR-FAN(3P)	10AC12
53H22	CAPACITOR-FAN&RUN(3P 1P)	10AC12
65C69	CONTACTOR-COMPR(3P 1P)	10AC12
69H62	COMPRESSOR(3P 1P)	10AC12
69H63	VALVE-SERVICE(3P 1P)	10AC12
72H73	MOTOR-FAN(1P)	10AC12
72H89	VALVE-SERVICE(3P 1P)	10AC12
74H70	SWITCH-HI PRESS(3P 1P)	10AC12
10AC18		
52J67	MOTOR-FAN(3P)	10AC18
53H22	CAPACITOR-FAN&RUN(3P 1P)	10AC18
65C69	CONTACTOR-COMPR(3P 1P)	10AC18
69H63	VALVE-SERVICE(3P 1P)	10AC18
72H34	COMPRESSOR(3P 1P)	10AC18
72H73	MOTOR-FAN(1P)	10AC18
72H90	VALVE-SERVICE(3P 1P)	10AC18
74H70	SWITCH-HI PRESS(3P 1P)	10AC18
10AC24		
52J67	MOTOR-FAN(3P)	10AC24
53H23	CAPACITOR-RUN(3P 1P)	10AC24
65C69	CONTACTOR-COMPR(3P 1P)	10AC24
69H63	VALVE-SERVICE(3P 1P)	10AC24
72H33	COMPRESSOR(3P 1P)	10AC24
72H73	MOTOR-FAN(1P)	10AC24
72H90	VALVE-SERVICE(3P 1P)	10AC24
74H70	SWITCH-HI PRESS(3P 1P)	10AC24
10AC30		
18J70	COMPRESSOR(3P 2P)	10AC30
52J67	MOTOR-FAN(3P)	10AC30
53H27	CAPACITOR-RUN(3P 2P)	10AC30
53H29	CAPACITOR-FAN&RUN(1P)	10AC30
65C69	CONTACTOR-COMPR(3P 2P 1P)	10AC30
69H63	VALVE-SERVICE(3P 2P 1P)	10AC30
72H73	MOTOR-FAN(2P 1P)	10AC30
72H78	COMPRESSOR(1P)	10AC30
72H91	VALVE-SERVICE(3P 2P 1P)	10AC30
74H70	SWITCH-HI PRESS(3P 2P 1P)	10AC30

CAT#	DESCRIPTION	Unit
	10AC36	
52J67	MOTOR-FAN(4P 3P)	10AC36
53H25	CAPACITOR-FAN&RUN(4P)	10AC36
53H29	CAPACITOR-FAN&RUN(3P 1P)	10AC36
53J77	COMPRESSOR(4P)	10AC36
65C69	CONTACTOR-COMPR(4P 3P 1P)	10AC36
69H63	VALVE-SERVICE(4P 3P 1P)	10AC36
72H73	MOTOR-FAN(1P)	10AC36
72H75	COMPRESSOR(3P 1P)	10AC36
72H91	VALVE-SERVICE(4P 3P 1P)	10AC36
74H70	SWITCH-HI PRESS(4P 3P 1P)	10AC36
	10AC42	
66083	CAPACITOR-START(2P)	10AC42
66463	RELAY-POTENTIAL(3P 2P)	10AC42
25J63	COMPRESSOR(2P)	10AC42
65C69	CONTACTOR-COMPR(3P)	10AC42
65C70	CONTACTOR(2P 1P)	10AC42
69H63	VALVE-SERVICE(3P 2P 1P)	10AC42
72H36	MOTOR-FAN(3P 2P)	10AC42
72H72	CAPACITOR-START(3P 1P)	10AC42
72H73	MOTOR-FAN(1P)	10AC42
72H79	COMPRESSOR(1P)	10AC42
72H92	VALVE-SERVICE(3P 2P 1P)	10AC42
74H01	RELAY-POTENTIAL(1P)	10AC42
74H70	SWITCH-HI PRESS(3P 2P 1P)	10AC42
78H18	COMPRESSOR(3P)	10AC42
78H19	CAPACITOR-FAN&RUN(2P)	10AC42
78H20	CAPACITOR-RUN(3P)	10AC42
	10AC48	
66083	CAPACITOR-START(1P)	10AC48
66463	RELAY-POTENTIAL(1P)	10AC48
65C70	CONTACTOR(1P)	10AC48
69H63	VALVE-SERVICE(1P)	10AC48
72H36	MOTOR-FAN(1P)	10AC48
72H92	VALVE-SERVICE(1P)	10AC48
74H12	COMPRESSOR(1P)	10AC48
74H70	SWITCH-HI PRESS(1P)	10AC48
78H19	CAPACITOR-FAN&RUN(1P)	10AC48
	10AC60	
21J28	RELAY-POTENTIAL(1P)	10AC60
21J29	CAPACITOR-START(1P)	10AC60

CAT#	DESCRIPTION	Unit
25J57	COMPRESSOR(1P)	10AC60
32F21	CONTROL-TIMED OFF(1P)	10AC60
69H63	VALVE-SERVICE(1P)	10AC60
72H36	MOTOR-FAN(1P)	10AC60
74H10	CAPACITOR-RUN(1P)	10AC60
74H30	VALVE-SERVICE(1P)	10AC60
74H70	SWITCH-HI PRESS(1P)	10AC60
	10ACB12	
58326	CAPACITOR-START(9P 11P 10P)	10ACB12
87265	SWITCH-LO PRESS(9P 11P 10P)	10ACB12
31L19	MOTOR-FAN(9P 11P 10P)	10ACB12
53H22	CAPACITOR-FAN&RUN(9P 11P 10P)	10ACB12
58H66	RELAY-POTENTIAL(9P 11P 10P)	10ACB12
65C69	CONTACTOR-COMPR(11P 10P)	10ACB12
68J10	VALVE-SERVICE(9P 11P 10P)	10ACB12
68J11	VALVE-SERVICE(9P 11P 10P)	10ACB12
68J36	CONTACTOR-COMPR(9P)	10ACB12
69H62	COMPRESSOR(9P 11P 10P)	10ACB12
86H31	SWITCH-HI PRESS(9P 11P 10P)	10ACB12
	10ACB18	
58327	RELAY-POTENTIAL(9P 11P 10P)	10ACB18
87265	SWITCH-LO PRESS(9P 6P 5P 11P 10P)	10ACB18
14K89	COMPRESSOR(9P 6P 5P 11P 10P)	10ACB18
31L19	MOTOR-FAN(9P 11P 10P)	10ACB18
44A93	CAPACITOR-START(6P 5P)	10ACB18
47A60	CAPACITOR-START(9P 11P 10P)	10ACB18
63K86	CAPACITOR-FAN&RUN(9P 6P 5P 11P 10P)	10ACB18
65C69	CONTACTOR-COMPR(11P)	10ACB18
67K18	VALVE-SERVICE(9P 6P 5P 11P 10P)	10ACB18
68J10	VALVE-SERVICE(9P 6P 5P 11P 10P)	10ACB18
68J36	CONTACTOR-COMPR(9P 6P 5P 10P)	10ACB18
68J97	MOTOR-FAN(6P 5P)	10ACB18
86H31	SWITCH-HI PRESS(9P 6P 5P 11P 10P)	10ACB18
	10ACB24	
87265	SWITCH-LO PRESS(9P 8P 7P 11P 10P)	10ACB24
31L19	MOTOR-FAN(9P 8P 7P 11P 10P)	10ACB24
44A93	CAPACITOR-START(9P 8P 7P 11P 10P)	10ACB24
58H66	RELAY-POTENTIAL(9P 8P 7P 11P 10P)	10ACB24
63K68	COMPRESSOR(8P 7P)	10ACB24
63K70	COMPRESSOR(9P 11P 10P)	10ACB24
63K86	CAPACITOR-FAN&RUN(9P 8P 7P 11P 10P)	10ACB24
65C69	CONTACTOR-COMPR(11P)	10ACB24
67K18	VALVE-SERVICE(9P 8P 7P 11P 10P)	10ACB24

CAT#	DESCRIPTION	Unit
68J10	VALVE-SERVICE(9P 8P 7P 11P 10P)	10ACB24
68J36	CONTACTOR-COMPR(9P 8P 7P 10P)	10ACB24
86H31	SWITCH-HI PRESS(9P 8P 7P 11P 10P)	10ACB24
	10ACB30	
58327	RELAY-POTENTIAL(9P 8P 7P 12P 11P 10P)	10ACB30
87265	SWITCH-LO PRESS(9P 8P 7P 12P 11P 10P)	10ACB30
31L19	MOTOR-FAN(9P 8P 7P 12P 11P 10P)	10ACB30
44A93	CAPACITOR-START(9P 8P 7P 12P 11P 10P)	10ACB30
63K69	COMPRESSOR(9P 8P 7P 12P 11P 10P)	10ACB30
63K87	CAPACITOR-FAN&RUN(9P 8P 7P 12P 11P 10P)	10ACB30
65C69	CONTACTOR-COMPR(12P 11P)	10ACB30
68J10	VALVE-SERVICE(9P 8P 7P 12P 11P 10P)	10ACB30
68J12	VALVE-SERVICE(9P 8P 7P 12P 11P 10P)	10ACB30
68J36	CONTACTOR-COMPR(9P 8P 7P 10P)	10ACB30
86H31	SWITCH-HI PRESS(9P 8P 7P 12P 11P 10P)	10ACB30
	10ACB36	
87265	SWITCH-LO PRESS(9P 6P 5P 13P 12P 11P 10P)	10ACB36
31L19	MOTOR-FAN(9P 6P 5P 13P 12P 11P 10P)	10ACB36
41K43	COMPRESSOR(13P 12P 11P)	10ACB36
45A01	RELAY-POTENTIAL(13P 12P 11P)	10ACB36
63A06	CAPACITOR-START(13P 12P 11P)	10ACB36
63K87	CAPACITOR-FAN&RUN(13P 12P 11P)	10ACB36
65C69	CONTACTOR-COMPR(13P 12P)	10ACB36
68J10	VALVE-SERVICE(9P 6P 5P 13P 12P 11P 10P)	10ACB36
68J12	VALVE-SERVICE(9P 6P 5P 13P 12P 11P 10P)	10ACB36
68J36	CONTACTOR-COMPR(9P 6P 5P 11P 10P)	10ACB36
68J55	COMPRESSOR(6P 5P)	10ACB36
68J56	COMPRESSOR(9P 10P)	10ACB36
72H72	CAPACITOR-START(9P 6P 5P 10P)	10ACB36
86H31	SWITCH-HI PRESS(9P 6P 5P 13P 12P 11P 10P)	10ACB36
	10ACB42	
58327	RELAY-POTENTIAL(12P 11P)	10ACB42
87265	SWITCH-LO PRESS(9P 5P 12P 11P 10P)	10ACB42
15M35	HARNESS-COMP(12P)	10ACB42
15M75	COMPRESSOR(12P)	10ACB42
21L68	COMPRESSOR(12P 11P)	10ACB42
31L19	MOTOR-FAN(9P 5P 12P 11P 10P)	10ACB42
45A01	RELAY-POTENTIAL(9P 5P 10P)	10ACB42
47A60	CAPACITOR-START(12P 11P)	10ACB42
63A06	CAPACITOR-START(9P 5P 10P)	10ACB42
65C69	CONTACTOR-COMPR(12P)	10ACB42
68J10	VALVE-SERVICE(9P 5P 12P 11P 10P)	10ACB42
68J13	VALVE-SERVICE(9P 5P 12P 11P 10P)	10ACB42

CAT#	DESCRIPTION	Unit
68J36	CONTACTOR-COMPR(9P 5P 11P 10P)	10ACB42
68J61	COMPRESSOR(9P 5P 10P)	10ACB42
80K48	CAPACITOR(12P 11P)	10ACB42
86H31	SWITCH-HI PRESS(9P 5P 12P 11P 10P)	10ACB42
	10ACB48	
38644	RELAY-POTENTIAL(4P)	10ACB48
58327	RELAY-POTENTIAL(11P 10P)	10ACB48
87265	SWITCH-LO PRESS(9P 4P 11P 10P)	10ACB48
15M35	HARNESS-COMP(11P)	10ACB48
15M77	COMPRESSOR(11P)	10ACB48
21J29	CAPACITOR-START(11P 10P)	10ACB48
21L69	COMPRESSOR(11P 10P)	10ACB48
45A01	RELAY-POTENTIAL(9P)	10ACB48
49K49	CAPACITOR-FAN&RUN(9P 4P 11P 10P)	10ACB48
63A06	CAPACITOR-START(9P 4P)	10ACB48
68J10	VALVE-SERVICE(9P 4P 11P 10P)	10ACB48
68J13	VALVE-SERVICE(9P 4P 11P 10P)	10ACB48
68J24	MOTOR-FAN(9P 4P 11P 10P)	10ACB48
68J37	CONTACTOR(9P 4P 10P)	10ACB48
68J65	COMPRESSOR(9P 4P)	10ACB48
68J91	CAPACITOR-FAN&RUN(4P)	10ACB48
86H31	SWITCH-HI PRESS(9P 4P 11P 10P)	10ACB48
	10ACB60	
38644	RELAY-POTENTIAL(5P)	10ACB60
58327	RELAY-POTENTIAL(11P 10P)	10ACB60
87265	SWITCH-LO PRESS(9P 5P 11P 10P)	10ACB60
14K41	COMPRESSOR(11P 10P)	10ACB60
15M35	HARNESS-COMP(11P)	10ACB60
15M87	COMPRESSOR(11P)	10ACB60
21J29	CAPACITOR-START(11P 10P)	10ACB60
31J50	VALVE-SERVICE(9P 5P 11P 10P)	10ACB60
45A01	RELAY-POTENTIAL(9P)	10ACB60
63A06	CAPACITOR-START(9P 5P)	10ACB60
68J08	CAPACITOR-RUN(11P 10P)	10ACB60
68J10	VALVE-SERVICE(9P 5P 11P 10P)	10ACB60
68J24	MOTOR-FAN(9P 5P 11P 10P)	10ACB60
68J35	CAPACITOR-FAN&RUN(9P 5P)	10ACB60
68J37	CONTACTOR(9P 5P 10P)	10ACB60
68J69	COMPRESSOR(9P 5P)	10ACB60
86H31	SWITCH-HI PRESS(9P 5P 11P 10P)	10ACB60
	10ACC	
58327	RELAY-POTENTIAL(060 048 042 030 024)	10ACC
87265	SWITCH-LO PRESS(060 048 042 036 030 024 018)	10ACC

CAT#	DESCRIPTION	Unit
14K89	COMPRESSOR(018)	10ACC
15M35	HARNESS-COMP(060 048 042 036 024 018)	10ACC
15M48	COMPRESSOR(036)	10ACC
15M62	COMPRESSOR(024)	10ACC
15M75	COMPRESSOR(042)	10ACC
15M77	COMPRESSOR(048)	10ACC
15M87	COMPRESSOR(060)	10ACC
21J29	CAPACITOR-START(060 048)	10ACC
31L19	MOTOR-FAN(030)	10ACC
37L74	MOTOR-FAN(042 036)	10ACC
39L20	VALVE-SERVICE(060)	10ACC
44A93	CAPACITOR-START(030 018)	10ACC
47A60	CAPACITOR-START(042 030 024)	10ACC
49K49	CAPACITOR-FAN&RUN(048 036)	10ACC
49M68	CAPACITOR-FAN&RUN(030 024 018)	10ACC
56L33	MOTOR-FAN(030 024 018)	10ACC
56M35	COMPRESSOR(030)	10ACC
56M94	COMPRESSOR(018)	10ACC
63K68	COMPRESSOR(024)	10ACC
63K69	COMPRESSOR(030)	10ACC
63K87	CAPACITOR-FAN&RUN(030)	10ACC
65C69	CONTACTOR-COMPR(060 048 042 036 030 024 018)	10ACC
67K18	VALVE-SERVICE(024 018)	10ACC
68J10	VALVE-SERVICE(060 048 042 036 030 024 018)	10ACC
68J12	VALVE-SERVICE(036 030 024)	10ACC
68J13	VALVE-SERVICE(048 042)	10ACC
68J24	MOTOR-FAN(060 048 042)	10ACC
69M30	CAPACITOR-FAN&RUN(018)	10ACC
69M68	CAPACITOR-FAN&RUN(048 036)	10ACC
72H72	CAPACITOR-START(036 024 018)	10ACC
80K47	CAPACITOR(042)	10ACC
80K48	CAPACITOR(024)	10ACC
86H31	SWITCH-HI PRESS(060 048 042 036 030 024 018)	10ACC
97H16	CAPACITOR-RUN(060)	10ACC
	10ACE	
58327	RELAY-POTENTIAL(060 048 036 024)	10ACE
87265	SWITCH-LO PRESS(060 048 036 024)	10ACE
10W32	VALVE-SERVICE(060 048 036 024)	10ACE
10W33	VALVE-SERVICE(036 024)	10ACE
13W87	CAPACITOR(048)	10ACE
19W63	HARNESS-COMP(024)	10ACE
19W64	HARNESS-COMP(036)	10ACE
19W65	HARNESS-COMP(060 048)	10ACE
21J29	CAPACITOR-START(060)	10ACE
22W71	VALVE-SERVICE(048)	10ACE
45A01	RELAY-POTENTIAL(060 048)	10ACE
47A60	CAPACITOR-START(048 036 024)	10ACE

CAT#	DESCRIPTION	Unit
63A06	CAPACITOR-START(060 048)	10ACE
63K68	COMPRESSOR(024)	10ACE
68J65	COMPRESSOR(048)	10ACE
68J69	COMPRESSOR(060)	10ACE
72H75	COMPRESSOR(036)	10ACE
86H31	SWITCH-HI PRESS(060 048 036 024)	10ACE
88M12	VALVE-SERVICE(060)	10ACE
89M74	CAPACITOR-FAN&RUN(024)	10ACE
89M80	CAPACITOR-FAN&RUN(036)	10ACE
95M03	CAPACITOR-FAN&RUN(060)	10ACE
95M55	CONTACTOR(036 024)	10ACE
95M56	CONTACTOR(060 048)	10ACE
97M49	MOTOR-FAN(036 024)	10ACE
97M62	MOTOR-FAN(060 048)	10ACE
	12ACB24	
58327	RELAY-POTENTIAL(6P 4P 3P 2P 1P)	12ACB24
87265	SWITCH-LO PRESS(6P 4P 3P 2P 1P)	12ACB24
15M35	HARNESS-COMP(6P)	12ACB24
15M61	COMPRESSOR(6P)	12ACB24
31L19	MOTOR-FAN(6P 4P 3P 2P 1P)	12ACB24
47A60	CAPACITOR-START(6P 4P 3P 2P 1P)	12ACB24
47J35	CONTROL-TIMED OFF(3P 2P 1P)	12ACB24
53H25	CAPACITOR-FAN&RUN(6P 4P 3P 2P 1P)	12ACB24
65C69	CONTACTOR-COMPR(6P)	12ACB24
68J10	VALVE-SERVICE(6P 4P 3P 2P 1P)	12ACB24
68J36	CONTACTOR-COMPR(4P 3P 2P 1P)	12ACB24
68J72	COMPRESSOR(6P 4P 3P 2P 1P)	12ACB24
68J95	VALVE-SERVICE(6P 4P 3P 2P 1P)	12ACB24
86H31	SWITCH-HI PRESS(6P 4P 3P 2P 1P)	12ACB24
	12ACB30	
58327	RELAY-POTENTIAL(5P 4P 3P 2P 1P)	12ACB30
87265	SWITCH-LO PRESS(5P 4P 3P 2P 1P)	12ACB30
15M35	HARNESS-COMP(5P)	12ACB30
15M63	COMPRESSOR(5P)	12ACB30
47A60	CAPACITOR-START(5P 4P 3P 2P 1P)	12ACB30
47J35	CONTROL-TIMED OFF(3P 2P 1P)	12ACB30
53H29	CAPACITOR-FAN&RUN(5P 4P 3P 2P 1P)	12ACB30
63K87	CAPACITOR-FAN&RUN(5P)	12ACB30
65C69	CONTACTOR-COMPR(5P)	12ACB30
68J10	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB30
68J36	CONTACTOR-COMPR(4P 3P 2P 1P)	12ACB30
68J73	COMPRESSOR(5P 4P 3P 2P 1P)	12ACB30
68J95	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB30
68J97	MOTOR-FAN(5P 4P 3P 2P 1P)	12ACB30
86H31	SWITCH-HI PRESS(5P 4P 3P 2P 1P)	12ACB30

CAT#	DESCRIPTION	Unit
	12ACB36	
58327	RELAY-POTENTIAL(5P 4P 3P 2P 1P)	12ACB36
87265	SWITCH-LO PRESS(5P 4P 3P 2P 1P)	12ACB36
15M35	HARNESS-COMP(5P)	12ACB36
32M96	CAPACITOR-FAN&RUN(5P)	12ACB36
47A60	CAPACITOR-START(5P 4P 3P 2P 1P)	12ACB36
47J35	CONTROL-TIMED OFF(3P 2P 1P)	12ACB36
65C69	CONTACTOR-COMPR(5P)	12ACB36
68J10	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB36
68J36	CONTACTOR-COMPR(4P 3P 2P 1P)	12ACB36
68J97	MOTOR-FAN(5P 4P 3P 2P 1P)	12ACB36
68J98	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB36
86H31	SWITCH-HI PRESS(5P 4P 3P 2P 1P)	12ACB36
97M94	COMPRESSOR(5P 4P 3P 2P 1P)	12ACB36
	12ACB42	
58327	RELAY-POTENTIAL(5P 4P 3P 2P 1P)	12ACB42
87265	SWITCH-LO PRESS(5P 4P 3P 2P 1P)	12ACB42
15M35	HARNESS-COMP(5P)	12ACB42
15M72	COMPRESSOR(5P)	12ACB42
47A60	CAPACITOR-START(5P 4P 3P 2P 1P)	12ACB42
47J35	CONTROL-TIMED OFF(3P 2P 1P)	12ACB42
49K51	CAPACITOR-FAN&RUN(5P 4P 3P 2P)	12ACB42
65C69	CONTACTOR-COMPR(5P)	12ACB42
68J08	CAPACITOR-RUN(3P 2P 1P)	12ACB42
68J10	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB42
68J24	MOTOR-FAN(5P 4P 3P 2P 1P)	12ACB42
68J36	CONTACTOR-COMPR(4P 3P 2P 1P)	12ACB42
68J75	COMPRESSOR(5P 4P 3P 2P 1P)	12ACB42
68J98	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB42
86H31	SWITCH-HI PRESS(5P 4P 3P 2P 1P)	12ACB42
	12ACB48	
58327	RELAY-POTENTIAL(5P 4P 3P 2P 1P)	12ACB48
87265	SWITCH-LO PRESS(5P 4P 3P 2P 1P)	12ACB48
15M35	HARNESS-COMP(5P)	12ACB48
15M78	COMPRESSOR(5P)	12ACB48
21J29	CAPACITOR-START(5P 4P 3P 2P 1P)	12ACB48
47J35	CONTROL-TIMED OFF(2P 1P)	12ACB48
49K51	CAPACITOR-FAN&RUN(3P 2P 1P)	12ACB48
53J05	COMPRESSOR(3P 2P 1P)	12ACB48
68J08	CAPACITOR-RUN(2P 1P)	12ACB48
68J10	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB48
68J24	MOTOR-FAN(5P 4P 3P 2P 1P)	12ACB48
68J37	CONTACTOR(4P 3P 2P 1P)	12ACB48

CAT#	DESCRIPTION	Unit
68J98	VALVE-SERVICE(5P 4P 3P 2P 1P)	12ACB48
86H31	SWITCH-HI PRESS(5P 4P 3P 2P 1P)	12ACB48
88K20	COMPRESSOR(5P 4P)	12ACB48
97H16	CAPACITOR-RUN(5P 4P)	12ACB48
	12ACB60	
58327	RELAY-POTENTIAL(4P 3P 2P 1P)	12ACB60
87265	SWITCH-LO PRESS(4P 3P 2P 1P)	12ACB60
15M35	HARNESS-COMP(4P)	12ACB60
15M84	COMPRESSOR(4P)	12ACB60
21J29	CAPACITOR-START(4P 3P 2P 1P)	12ACB60
31J50	VALVE-SERVICE(4P 3P 2P 1P)	12ACB60
47J35	CONTROL-TIMED OFF(2P 1P)	12ACB60
49K50	CAPACITOR-FAN&RUN(4P 3P 2P 1P)	12ACB60
53J06	COMPRESSOR(4P 3P 2P 1P)	12ACB60
68J09	CAPACITOR-FAN&RUN(2P 1P)	12ACB60
68J10	VALVE-SERVICE(4P 3P 2P 1P)	12ACB60
68J24	MOTOR-FAN(4P 3P 2P 1P)	12ACB60
68J37	CONTACTOR(3P 2P 1P)	12ACB60
86H31	SWITCH-HI PRESS(4P 3P 2P 1P)	12ACB60
	13ACC	
58327	RELAY-POTENTIAL(060 048 047 042 037 036 030 024 018)	13ACC
87265	SWITCH-LO PRESS(060 048 047 042 037 036 030 024 018)	13ACC
15M35	HARNESS-COMP(060 048 047 042 037 036 030 024 018)	13ACC
15M60	COMPRESSOR(018)	13ACC
15M61	COMPRESSOR(024)	13ACC
15M63	COMPRESSOR(030)	13ACC
15M69	COMPRESSOR(042)	13ACC
15M78	COMPRESSOR(048)	13ACC
15M84	COMPRESSOR(060)	13ACC
21J29	CAPACITOR-START(060 048)	13ACC
31L19	MOTOR-FAN(037 036 030 024 018)	13ACC
32M93	COMPRESSOR(047)	13ACC
32M95	MOTOR-FAN(047)	13ACC
39L20	VALVE-SERVICE(060 047)	13ACC
47A60	CAPACITOR-START(047 042 037 036 030 024 018)	13ACC
49M69	CAPACITOR-FAN&RUN(018)	13ACC
60L87	COMPRESSOR(037)	13ACC
65C69	CONTACTOR-COMPR(042 037 036 030 024 018)	13ACC
67K18	VALVE-SERVICE(018)	13ACC
67K70	CAPACITOR-FAN&RUN(047)	13ACC
68J10	VALVE-SERVICE(060 048 047 042 037 036 030 024 018)	13ACC
68J24	MOTOR-FAN(060 048 042)	13ACC
68J95	VALVE-SERVICE(030 024)	13ACC
68J98	VALVE-SERVICE(048 042 037 036)	13ACC
69M64	CAPACITOR-FAN&RUN(037 030)	13ACC

CAT#	DESCRIPTION	Unit
69M65	CAPACITOR-FAN&RUN(036)	13ACC
69M68	CAPACITOR-FAN&RUN(042)	13ACC
69M70	CAPACITOR-FAN&RUN(060)	13ACC
80K48	CAPACITOR(024)	13ACC
86H31	SWITCH-HI PRESS(060 048 047 042 037 036 030 024 018)	13ACC
97H16	CAPACITOR-RUN(048)	13ACC
97M94	COMPRESSOR(036)	13ACC
	13ACD	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	13ACD
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	13ACD
10W33	VALVE-SERVICE(030 024 018)	13ACD
10W36	CAPACITOR-DUAL(042)	13ACD
15M35	HARNES-COMP(060 048 042 036 030 024 018)	13ACD
21J29	CAPACITOR-START(060)	13ACD
23W26	SWITCH-LO PRESS(042)	13ACD
23W38	COMPRESSOR(036)	13ACD
26W43	HARNES-COMP(048 042 036 030 024)	13ACD
29W09	CAPACITOR-FAN&RUN(060)	13ACD
31W73	VALVE-SERVICE(048 042 036)	13ACD
31W74	VALVE-SERVICE(060)	13ACD
32W18	COMPRESSOR(024)	13ACD
32W19	COMPRESSOR(030)	13ACD
32W39	COMPRESSOR(060)	13ACD
40W58	COMPRESSOR(042)	13ACD
40W59	COMPRESSOR(048)	13ACD
40W64	HARNES-COMP(060)	13ACD
43W49	MOTOR-FAN(036 030)	13ACD
47A60	CAPACITOR-START(048 042 036 030 024 018)	13ACD
47W86	MOTOR-FAN(024 018)	13ACD
49W86	MOTOR-FAN(060 048 042)	13ACD
56L45	SWITCH-LO PRESS(060 048 042 036 030 024 018)	13ACD
69H75	MOTOR-FAN(042)	13ACD
86H31	SWITCH-HI PRESS(060 048 042 036 030 024 018)	13ACD
88M11	VALVE-SERVICE(048 042)	13ACD
88M12	VALVE-SERVICE(060)	13ACD
88M97	SWITCH-LO PRESS(060 048 042 036 030 024 018)	13ACD
89M19	COMPRESSOR(018)	13ACD
89M20	COMPRESSOR(024)	13ACD
89M21	COMPRESSOR(030)	13ACD
89M22	COMPRESSOR(036)	13ACD
89M23	COMPRESSOR(042)	13ACD
89M24	COMPRESSOR(048)	13ACD
89M25	COMPRESSOR(060)	13ACD
89M71	CAPACITOR-DUAL(018)	13ACD
89M74	CAPACITOR-FAN&RUN(030 024)	13ACD
89M80	CAPACITOR-FAN&RUN(036 030)	13ACD
89M87	CAPACITOR-FAN&RUN(048)	13ACD

CAT#	DESCRIPTION	Unit
89M89	CAPACITOR-FAN&RUN(048 042)	13ACD
89M90	CAPACITOR-DUAL(042)	13ACD
89M92	CAPACITOR-FAN&RUN(060)	13ACD
89M97	CAPACITOR-FAN&RUN(042)	13ACD
95M54	THERMOSTAT(060)	13ACD
95M55	CONTACTOR(042 036 030 024 018)	13ACD
95M56	CONTACTOR(060 048 042)	13ACD
97M49	MOTOR-FAN(036 030 024 018)	13ACD
97M50	MOTOR-FAN(024 018)	13ACD
97M51	MOTOR-FAN(060 048 042)	13ACD
97M62	MOTOR-FAN(042)	13ACD
98M69	SWITCH-HI PRESS(042)	13ACD
	13ACX	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	13ACX
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	13ACX
10W33	VALVE-SERVICE(030 024 018)	13ACX
10W35	SWITCH-HI PRESS(036 024 018)	13ACX
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	13ACX
21W81	CAPACITOR-FAN&RUN(060)	13ACX
29W09	CAPACITOR-FAN&RUN(048)	13ACX
31W73	VALVE-SERVICE(048 042 036)	13ACX
31W74	VALVE-SERVICE(060)	13ACX
42W41	SWITCH-HI PRESS(060 048 042 036 030 024 018)	13ACX
43W49	MOTOR-FAN(036 030)	13ACX
43W86	COMPRESSOR(036)	13ACX
43W87	COMPRESSOR(060)	13ACX
44W62	HARNESS-COMP(060 048 042 036 030 024 018)	13ACX
44W71	MOTOR-FAN(024 018)	13ACX
47A60	CAPACITOR-START(018)	13ACX
47W86	MOTOR-FAN(024 018)	13ACX
49W86	MOTOR-FAN(060 048 042)	13ACX
52W10	COMPRESSOR(024)	13ACX
52W11	COMPRESSOR(048)	13ACX
52W33	COMPRESSOR(030)	13ACX
52W44	COMPRESSOR(042)	13ACX
53W14	COMPRESSOR(018)	13ACX
63A06	CAPACITOR-START(060 048 042 036 030 024)	13ACX
69H75	MOTOR-FAN(042)	13ACX
88M12	VALVE-SERVICE(060)	13ACX
89M71	CAPACITOR-DUAL(018)	13ACX
89M74	CAPACITOR-FAN&RUN(024 018)	13ACX
89M80	CAPACITOR-FAN&RUN(036)	13ACX
89M82	CAPACITOR-FAN&RUN(042)	13ACX
89M83	CAPACITOR-FAN&RUN(042)	13ACX
89M90	CAPACITOR-DUAL(048)	13ACX
89M92	CAPACITOR-FAN&RUN(060)	13ACX
95M55	CONTACTOR(042 036 030 024 018)	13ACX

CAT#	DESCRIPTION	Unit
95M56	CONTACTOR(060 048 042)	13ACX
97M49	MOTOR-FAN(036 030 024 018)	13ACX
97M50	MOTOR-FAN(024 018)	13ACX
97M51	MOTOR-FAN(060 048 042)	13ACX
97M52	COMPRESSOR(018)	13ACX
97M53	COMPRESSOR(024)	13ACX
97M54	COMPRESSOR(030)	13ACX
97M55	COMPRESSOR(036)	13ACX
97M56	COMPRESSOR(042)	13ACX
97M57	COMPRESSOR(048)	13ACX
97M58	COMPRESSOR(060)	13ACX
97M62	MOTOR-FAN(042)	13ACX
	14ACX	
58327	RELAY-POTENTIAL(060 059 048 047 042 041 036 030 024 018)	14ACX
10W32	VALVE-SERVICE(060 059 048 047 042 041 036 030 024 018)	14ACX
10W33	VALVE-SERVICE(030 024 018)	14ACX
10W35	SWITCH-HI PRESS(060 048 042)	14ACX
15M35	HARNESS-COMP(060 059 048 047 042 041 036 030 024 018)	14ACX
15W10	COMPRESSOR(042)	14ACX
21W83	CAPACITOR-FAN&RUN(060 059 048)	14ACX
22W71	VALVE-SERVICE(036)	14ACX
27W16	COMPRESSOR(030)	14ACX
29W60	MOTOR-FAN(060)	14ACX
31W73	VALVE-SERVICE(048 042)	14ACX
31W74	VALVE-SERVICE(060 059)	14ACX
42W41	SWITCH-HI PRESS(060 059 048 047 042 041 036 030 024 018)	14ACX
47A60	CAPACITOR-START(018)	14ACX
47W86	MOTOR-FAN(018)	14ACX
49W86	MOTOR-FAN(048 042 041)	14ACX
63A06	CAPACITOR-START(060 059 048 047 042 041 036 030 024)	14ACX
66W10	VALVE-SERVICE(047 041)	14ACX
68W60	COMPRESSOR(047)	14ACX
88M11	VALVE-SERVICE(048 042)	14ACX
88M12	VALVE-SERVICE(060)	14ACX
89M71	CAPACITOR-DUAL(018)	14ACX
89M74	CAPACITOR-FAN&RUN(024)	14ACX
89M80	CAPACITOR-FAN&RUN(036)	14ACX
89M83	CAPACITOR-FAN&RUN(047 042 041)	14ACX
95M54	THERMOSTAT(060 059 048 047 041)	14ACX
95M55	CONTACTOR(036 030 024 018)	14ACX
95M56	CONTACTOR(060 059 048 047 042 041)	14ACX
97M49	MOTOR-FAN(024 018)	14ACX
97M50	MOTOR-FAN(018)	14ACX
97M51	MOTOR-FAN(048 042)	14ACX
97M52	COMPRESSOR(018)	14ACX
97M53	COMPRESSOR(024)	14ACX
97M55	COMPRESSOR(041)	14ACX

CAT#	DESCRIPTION	Unit
97M57	COMPRESSOR(048)	14ACX
98M36	MOTOR-FAN(036 030 024)	14ACX
98M71	MOTOR-FAN(060)	14ACX
99M89	COMPRESSOR(036)	14ACX
99M90	COMPRESSOR(060)	14ACX
	2AC13B18P	
11W95	VALVE-SERVICE(2B 1A)	2AC13B18P
11W97	VALVE-SERVICE(2B 1A)	2AC13B18P
15M35	HARNESS-COMP(2B 1A)	2AC13B18P
27W86	COMPRESSOR(2B)	2AC13B18P
89M19	COMPRESSOR(1A)	2AC13B18P
89M70	CAPACITOR-DUAL(1A)	2AC13B18P
89M73	CAPACITOR-DUAL(2B)	2AC13B18P
95M55	CONTACTOR(2B 1A)	2AC13B18P
97M50	MOTOR-FAN(2B 1A)	2AC13B18P
	2AC13B24P	
11W95	VALVE-SERVICE(2B 1A)	2AC13B24P
11W97	VALVE-SERVICE(2B 1A)	2AC13B24P
15M35	HARNESS-COMP(2B 1A)	2AC13B24P
27W87	COMPRESSOR(2B)	2AC13B24P
89M20	COMPRESSOR(1A)	2AC13B24P
89M70	CAPACITOR-DUAL(2B)	2AC13B24P
89M73	CAPACITOR-DUAL(1A)	2AC13B24P
95M55	CONTACTOR(2B 1A)	2AC13B24P
97M50	MOTOR-FAN(2B 1A)	2AC13B24P
	2AC13B30P	
11W93	COMPRESSOR(2B 1A)	2AC13B30P
11W95	VALVE-SERVICE(2B 1A)	2AC13B30P
11W97	VALVE-SERVICE(2B 1A)	2AC13B30P
15M35	HARNESS-COMP(2B 1A)	2AC13B30P
89M76	CAPACITOR(2B 1A)	2AC13B30P
95M55	CONTACTOR(2B 1A)	2AC13B30P
97M50	MOTOR-FAN(2B 1A)	2AC13B30P
	2AC13B36P	
11W94	COMPRESSOR(2B 1A)	2AC13B36P
11W95	VALVE-SERVICE(2B 1A)	2AC13B36P
11W97	VALVE-SERVICE(2B 1A)	2AC13B36P
15M35	HARNESS-COMP(2B 1A)	2AC13B36P
89M74	CAPACITOR-FAN&RUN(2B 1A)	2AC13B36P
95M55	CONTACTOR(2B 1A)	2AC13B36P
97M50	MOTOR-FAN(2B 1A)	2AC13B36P

CAT#	DESCRIPTION	Unit
	2AC13B36T	
11W94	COMPRESSOR(2B 1A)	2AC13B36T
11W95	VALVE-SERVICE(2B 1A)	2AC13B36T
11W97	VALVE-SERVICE(2B 1A)	2AC13B36T
15M35	HARNESS-COMP(2B 1A)	2AC13B36T
89M74	CAPACITOR-FAN&RUN(2B 1A)	2AC13B36T
95M55	CONTACTOR(2B 1A)	2AC13B36T
97M50	MOTOR-FAN(2B 1A)	2AC13B36T
	2AC13B42P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13B42P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13B42P
15M35	HARNESS-COMP(1B 1A)	2AC13B42P
41W93	HARNESS-COMP(2A)	2AC13B42P
41W94	COMPRESSOR(2A)	2AC13B42P
89M23	COMPRESSOR(1B 1A)	2AC13B42P
89M79	CAPACITOR(2A)	2AC13B42P
95M55	CONTACTOR(2A)	2AC13B42P
95M56	CONTACTOR(1B 1A)	2AC13B42P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13B42P
98M69	SWITCH-HI PRESS(2A)	2AC13B42P
	2AC13B48P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13B48P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13B48P
15M35	HARNESS-COMP(1B 1A)	2AC13B48P
41W93	HARNESS-COMP(2A)	2AC13B48P
41W95	COMPRESSOR(2A)	2AC13B48P
89M24	COMPRESSOR(1B 1A)	2AC13B48P
89M79	CAPACITOR(2A)	2AC13B48P
95M55	CONTACTOR(2A)	2AC13B48P
95M56	CONTACTOR(1B 1A)	2AC13B48P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13B48P
98M69	SWITCH-HI PRESS(2A)	2AC13B48P
	2AC13B48T	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13B48T
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13B48T
15M35	HARNESS-COMP(1B 1A)	2AC13B48T
41W93	HARNESS-COMP(2A)	2AC13B48T
41W95	COMPRESSOR(2A)	2AC13B48T
89M24	COMPRESSOR(1B 1A)	2AC13B48T
89M79	CAPACITOR(2A)	2AC13B48T
95M55	CONTACTOR(2A)	2AC13B48T

CAT#	DESCRIPTION	Unit
95M56	CONTACTOR(1B 1A)	2AC13B48T
97M49	MOTOR-FAN(2A 1B 1A)	2AC13B48T
98M69	SWITCH-HI PRESS(2A)	2AC13B48T
	2AC13B60P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13B60P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13B60P
15M35	HARNESS-COMP(1B 1A)	2AC13B60P
41W17	CAPACITOR(2A)	2AC13B60P
41W93	HARNESS-COMP(2A)	2AC13B60P
41W96	COMPRESSOR(2A)	2AC13B60P
89M94	CAPACITOR(1B 1A)	2AC13B60P
95M55	CONTACTOR(2A)	2AC13B60P
95M56	CONTACTOR(1B 1A)	2AC13B60P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13B60P
97M93	COMPRESSOR(1B 1A)	2AC13B60P
98M69	SWITCH-HI PRESS(2A)	2AC13B60P
	2AC13B60T	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13B60T
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13B60T
15M35	HARNESS-COMP(1B 1A)	2AC13B60T
41W17	CAPACITOR(2A)	2AC13B60T
41W93	HARNESS-COMP(2A)	2AC13B60T
41W96	COMPRESSOR(2A)	2AC13B60T
89M94	CAPACITOR(1B 1A)	2AC13B60T
95M55	CONTACTOR(2A)	2AC13B60T
95M56	CONTACTOR(1B 1A)	2AC13B60T
97M49	MOTOR-FAN(2A 1B 1A)	2AC13B60T
97M93	COMPRESSOR(1B 1A)	2AC13B60T
98M69	SWITCH-HI PRESS(2A)	2AC13B60T
	2AC13L18P	
11W95	VALVE-SERVICE(2B 1A)	2AC13L18P
11W97	VALVE-SERVICE(2B 1A)	2AC13L18P
15M35	HARNESS-COMP(2B 1A)	2AC13L18P
27W86	COMPRESSOR(2B)	2AC13L18P
89M19	COMPRESSOR(1A)	2AC13L18P
89M70	CAPACITOR-DUAL(1A)	2AC13L18P
89M73	CAPACITOR-DUAL(2B)	2AC13L18P
95M55	CONTACTOR(2B 1A)	2AC13L18P
97M50	MOTOR-FAN(2B 1A)	2AC13L18P
	2AC13L24P	
11W95	VALVE-SERVICE(2B 1A)	2AC13L24P

CAT#	DESCRIPTION	Unit
11W97	VALVE-SERVICE(2B 1A)	2AC13L24P
15M35	HARNESS-COMP(2B 1A)	2AC13L24P
27W87	COMPRESSOR(2B)	2AC13L24P
89M20	COMPRESSOR(1A)	2AC13L24P
89M70	CAPACITOR-DUAL(2B)	2AC13L24P
89M73	CAPACITOR-DUAL(1A)	2AC13L24P
95M55	CONTACTOR(2B 1A)	2AC13L24P
97M50	MOTOR-FAN(2B 1A)	2AC13L24P
	2AC13L30P	
11W93	COMPRESSOR(2B 1A)	2AC13L30P
11W95	VALVE-SERVICE(2B 1A)	2AC13L30P
11W97	VALVE-SERVICE(2B 1A)	2AC13L30P
15M35	HARNESS-COMP(2B 1A)	2AC13L30P
89M76	CAPACITOR(2B 1A)	2AC13L30P
95M55	CONTACTOR(2B 1A)	2AC13L30P
97M50	MOTOR-FAN(2B 1A)	2AC13L30P
	2AC13L36P	
11W94	COMPRESSOR(2B 1A)	2AC13L36P
11W95	VALVE-SERVICE(2B 1A)	2AC13L36P
11W97	VALVE-SERVICE(2B 1A)	2AC13L36P
15M35	HARNESS-COMP(2B 1A)	2AC13L36P
89M74	CAPACITOR-FAN&RUN(2B 1A)	2AC13L36P
95M55	CONTACTOR(2B 1A)	2AC13L36P
97M50	MOTOR-FAN(2B 1A)	2AC13L36P
	2AC13L42P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13L42P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13L42P
15M35	HARNESS-COMP(1B 1A)	2AC13L42P
41W93	HARNESS-COMP(2A)	2AC13L42P
41W94	COMPRESSOR(2A)	2AC13L42P
89M23	COMPRESSOR(1B 1A)	2AC13L42P
89M79	CAPACITOR(2A)	2AC13L42P
95M55	CONTACTOR(2A)	2AC13L42P
95M56	CONTACTOR(1B 1A)	2AC13L42P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13L42P
98M69	SWITCH-HI PRESS(2A)	2AC13L42P
	2AC13L48P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13L48P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13L48P
15M35	HARNESS-COMP(1B 1A)	2AC13L48P
41W93	HARNESS-COMP(2A)	2AC13L48P

CAT#	DESCRIPTION	Unit
41W95	COMPRESSOR(2A)	2AC13L48P
89M24	COMPRESSOR(1B 1A)	2AC13L48P
89M79	CAPACITOR(2A)	2AC13L48P
95M55	CONTACTOR(2A)	2AC13L48P
95M56	CONTACTOR(1B 1A)	2AC13L48P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13L48P
98M69	SWITCH-HI PRESS(2A)	2AC13L48P
	2AC13L48T	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13L48T
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13L48T
15M35	HARNESS-COMP(1B 1A)	2AC13L48T
41W93	HARNESS-COMP(2A)	2AC13L48T
41W95	COMPRESSOR(2A)	2AC13L48T
89M24	COMPRESSOR(1B 1A)	2AC13L48T
89M79	CAPACITOR(2A)	2AC13L48T
95M55	CONTACTOR(2A)	2AC13L48T
95M56	CONTACTOR(1B 1A)	2AC13L48T
97M49	MOTOR-FAN(2A 1B 1A)	2AC13L48T
98M69	SWITCH-HI PRESS(2A)	2AC13L48T
	2AC13L60P	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13L60P
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13L60P
15M35	HARNESS-COMP(1B 1A)	2AC13L60P
41W17	CAPACITOR(2A)	2AC13L60P
41W93	HARNESS-COMP(2A)	2AC13L60P
41W96	COMPRESSOR(2A)	2AC13L60P
89M94	CAPACITOR(1B 1A)	2AC13L60P
95M55	CONTACTOR(2A)	2AC13L60P
95M56	CONTACTOR(1B 1A)	2AC13L60P
97M49	MOTOR-FAN(2A 1B 1A)	2AC13L60P
97M93	COMPRESSOR(1B 1A)	2AC13L60P
98M69	SWITCH-HI PRESS(2A)	2AC13L60P
	2AC13L60T	
11W96	VALVE-SERVICE(2A 1B 1A)	2AC13L60T
11W97	VALVE-SERVICE(2A 1B 1A)	2AC13L60T
15M35	HARNESS-COMP(1B 1A)	2AC13L60T
41W17	CAPACITOR(2A)	2AC13L60T
41W93	HARNESS-COMP(2A)	2AC13L60T
41W96	COMPRESSOR(2A)	2AC13L60T
89M94	CAPACITOR(1B 1A)	2AC13L60T
95M55	CONTACTOR(2A)	2AC13L60T
95M56	CONTACTOR(1B 1A)	2AC13L60T
97M49	MOTOR-FAN(2A 1B 1A)	2AC13L60T

HEATINGANDAIRPARTS.COM

CAT#	DESCRIPTION	Unit
97M93	COMPRESSOR(1B 1A)	2AC13L60T
98M69	SWITCH-HI PRESS(2A)	2AC13L60T
	2AC14B18P	
11W95	VALVE-SERVICE(1A)	2AC14B18P
11W97	VALVE-SERVICE(1A)	2AC14B18P
15M35	HARNESS-COMP(1A)	2AC14B18P
27W86	COMPRESSOR(1A)	2AC14B18P
28W50	RELAY-POTENTIAL(1A)	2AC14B18P
28W51	CAPACITOR-START(1A)	2AC14B18P
56J19	VALVE-EXPANSION(1A)	2AC14B18P
89M73	CAPACITOR-DUAL(1A)	2AC14B18P
95M55	CONTACTOR(1A)	2AC14B18P
97M50	MOTOR-FAN(1A)	2AC14B18P
	2AC14B24P	
11W95	VALVE-SERVICE(1A)	2AC14B24P
11W97	VALVE-SERVICE(1A)	2AC14B24P
15M35	HARNESS-COMP(1A)	2AC14B24P
28W32	COMPRESSOR(1A)	2AC14B24P
28W50	RELAY-POTENTIAL(1A)	2AC14B24P
28W51	CAPACITOR-START(1A)	2AC14B24P
56J19	VALVE-EXPANSION(1A)	2AC14B24P
89M73	CAPACITOR-DUAL(1A)	2AC14B24P
95M55	CONTACTOR(1A)	2AC14B24P
97M50	MOTOR-FAN(1A)	2AC14B24P
	2AC14B30P	
11W95	VALVE-SERVICE(1A)	2AC14B30P
11W97	VALVE-SERVICE(1A)	2AC14B30P
15M35	HARNESS-COMP(1A)	2AC14B30P
28W33	COMPRESSOR(1A)	2AC14B30P
28W50	RELAY-POTENTIAL(1A)	2AC14B30P
28W51	CAPACITOR-START(1A)	2AC14B30P
56J19	VALVE-EXPANSION(1A)	2AC14B30P
89M70	CAPACITOR-DUAL(1A)	2AC14B30P
95M55	CONTACTOR(1A)	2AC14B30P
97M49	MOTOR-FAN(1A)	2AC14B30P
	2AC14B36P	
58327	RELAY-POTENTIAL(1A)	2AC14B36P
11W95	VALVE-SERVICE(1A)	2AC14B36P
11W97	VALVE-SERVICE(1A)	2AC14B36P
15M35	HARNESS-COMP(1A)	2AC14B36P
56J19	VALVE-EXPANSION(1A)	2AC14B36P

CAT#	DESCRIPTION	Unit
63A06	CAPACITOR-START(1A)	2AC14B36P
89M79	CAPACITOR(1A)	2AC14B36P
95M55	CONTACTOR(1A)	2AC14B36P
97M49	MOTOR-FAN(1A)	2AC14B36P
98M64	COMPRESSOR(1A)	2AC14B36P
	2AC14B42P	
11W94	COMPRESSOR(1A)	2AC14B42P
11W96	VALVE-SERVICE(1A)	2AC14B42P
11W97	VALVE-SERVICE(1A)	2AC14B42P
15M35	HARNESS-COMP(1A)	2AC14B42P
17W10	MOTOR-FAN(1A)	2AC14B42P
28W50	RELAY-POTENTIAL(1A)	2AC14B42P
28W51	CAPACITOR-START(1A)	2AC14B42P
56J20	VALVE-EXPANSION(1A)	2AC14B42P
95M55	CONTACTOR(1A)	2AC14B42P
R2039	CAPACITOR-DUAL(1A)	2AC14B42P
	2AC14B48P	
58327	RELAY-POTENTIAL(1A)	2AC14B48P
10W36	CAPACITOR-DUAL(1A)	2AC14B48P
11W96	VALVE-SERVICE(1A)	2AC14B48P
11W97	VALVE-SERVICE(1A)	2AC14B48P
15M35	HARNESS-COMP(1A)	2AC14B48P
17W10	MOTOR-FAN(1A)	2AC14B48P
47A60	CAPACITOR-START(1A)	2AC14B48P
56J20	VALVE-EXPANSION(1A)	2AC14B48P
95M55	CONTACTOR(1A)	2AC14B48P
97M95	COMPRESSOR(1A)	2AC14B48P
	2AC14B60P	
58327	RELAY-POTENTIAL(1A)	2AC14B60P
11W96	VALVE-SERVICE(1A)	2AC14B60P
11W97	VALVE-SERVICE(1A)	2AC14B60P
15M35	HARNESS-COMP(1A)	2AC14B60P
56J20	VALVE-EXPANSION(1A)	2AC14B60P
63A06	CAPACITOR-START(1A)	2AC14B60P
89M85	CAPACITOR(1A)	2AC14B60P
95M55	CONTACTOR(1A)	2AC14B60P
97M62	MOTOR-FAN(1A)	2AC14B60P
97M93	COMPRESSOR(1A)	2AC14B60P
	2AC14L18	
11W95	VALVE-SERVICE(1)	2AC14L18
11W97	VALVE-SERVICE(1)	2AC14L18

CAT#	DESCRIPTION	Unit
15M35	HARNES-COMP(1)	2AC14L18
27W86	COMPRESSOR(1)	2AC14L18
28W50	RELAY-POTENTIAL(1)	2AC14L18
28W51	CAPACITOR-START(1)	2AC14L18
56J19	VALVE-EXPANSION(1)	2AC14L18
89M73	CAPACITOR-DUAL(1)	2AC14L18
95M55	CONTACTOR(1)	2AC14L18
97M50	MOTOR-FAN(1)	2AC14L18
	2AC14L24	
11W95	VALVE-SERVICE(1)	2AC14L24
11W97	VALVE-SERVICE(1)	2AC14L24
15M35	HARNES-COMP(1)	2AC14L24
28W32	COMPRESSOR(1)	2AC14L24
28W50	RELAY-POTENTIAL(1)	2AC14L24
28W51	CAPACITOR-START(1)	2AC14L24
56J19	VALVE-EXPANSION(1)	2AC14L24
89M73	CAPACITOR-DUAL(1)	2AC14L24
95M55	CONTACTOR(1)	2AC14L24
97M50	MOTOR-FAN(1)	2AC14L24
	2AC14L30	
11W95	VALVE-SERVICE(1)	2AC14L30
11W97	VALVE-SERVICE(1)	2AC14L30
15M35	HARNES-COMP(1)	2AC14L30
28W33	COMPRESSOR(1)	2AC14L30
28W50	RELAY-POTENTIAL(1)	2AC14L30
28W51	CAPACITOR-START(1)	2AC14L30
56J19	VALVE-EXPANSION(1)	2AC14L30
89M70	CAPACITOR-DUAL(1)	2AC14L30
95M55	CONTACTOR(1)	2AC14L30
97M49	MOTOR-FAN(1)	2AC14L30
	2AC14L36	
58327	RELAY-POTENTIAL(1)	2AC14L36
11W95	VALVE-SERVICE(1)	2AC14L36
11W97	VALVE-SERVICE(1)	2AC14L36
15M35	HARNES-COMP(1)	2AC14L36
56J19	VALVE-EXPANSION(1)	2AC14L36
63A06	CAPACITOR-START(1)	2AC14L36
89M79	CAPACITOR(1)	2AC14L36
95M55	CONTACTOR(1)	2AC14L36
97M49	MOTOR-FAN(1)	2AC14L36
98M64	COMPRESSOR(1)	2AC14L36
	2AC14L42	

CAT#	DESCRIPTION	Unit
11W94	COMPRESSOR(1)	2AC14L42
11W96	VALVE-SERVICE(1)	2AC14L42
11W97	VALVE-SERVICE(1)	2AC14L42
15M35	HARNESS-COMP(1)	2AC14L42
17W10	MOTOR-FAN(1)	2AC14L42
28W50	RELAY-POTENTIAL(1)	2AC14L42
28W51	CAPACITOR-START(1)	2AC14L42
56J20	VALVE-EXPANSION(1)	2AC14L42
95M55	CONTACTOR(1)	2AC14L42
R2039	CAPACITOR-DUAL(1)	2AC14L42
	2AC14L48	
58327	RELAY-POTENTIAL(1)	2AC14L48
10W36	CAPACITOR-DUAL(1)	2AC14L48
11W96	VALVE-SERVICE(1)	2AC14L48
11W97	VALVE-SERVICE(1)	2AC14L48
15M35	HARNESS-COMP(1)	2AC14L48
17W10	MOTOR-FAN(1)	2AC14L48
47A60	CAPACITOR-START(1)	2AC14L48
56J20	VALVE-EXPANSION(1)	2AC14L48
95M55	CONTACTOR(1)	2AC14L48
97M95	COMPRESSOR(1)	2AC14L48
	2AC14L60	
58327	RELAY-POTENTIAL(1)	2AC14L60
11W96	VALVE-SERVICE(1)	2AC14L60
11W97	VALVE-SERVICE(1)	2AC14L60
15M35	HARNESS-COMP(1)	2AC14L60
56J20	VALVE-EXPANSION(1)	2AC14L60
63A06	CAPACITOR-START(1)	2AC14L60
89M85	CAPACITOR(1)	2AC14L60
95M55	CONTACTOR(1)	2AC14L60
97M62	MOTOR-FAN(1)	2AC14L60
97M93	COMPRESSOR(1)	2AC14L60
	4AC13B18P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13B18P
10W33	VALVE-SERVICE(4A 3A)	4AC13B18P
11W95	VALVE-SERVICE(1A)	4AC13B18P
11W97	VALVE-SERVICE(1A)	4AC13B18P
15M35	HARNESS-COMP(2A 1A)	4AC13B18P
17W10	MOTOR-FAN(4A 3A)	4AC13B18P
31W73	VALVE-SERVICE(2A)	4AC13B18P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13B18P
44W62	HARNESS-COMP(4A 3A)	4AC13B18P

CAT#	DESCRIPTION	Unit
47W86	MOTOR-FAN(2A)	4AC13B18P
53W14	COMPRESSOR(4A 3A)	4AC13B18P
86M36	SWITCH-HI PRESS(1A)	4AC13B18P
89M70	CAPACITOR-DUAL(1A)	4AC13B18P
89M71	CAPACITOR-DUAL(2A)	4AC13B18P
89M74	CAPACITOR-FAN&RUN(4A 3A)	4AC13B18P
95M55	CONTACTOR(4A 3A 2A 1A)	4AC13B18P
97M50	MOTOR-FAN(1A)	4AC13B18P
97M52	COMPRESSOR(2A 1A)	4AC13B18P
	4AC13B24P	
10W32	VALVE-SERVICE(3A)	4AC13B24P
10W33	VALVE-SERVICE(3A)	4AC13B24P
11W95	VALVE-SERVICE(1A)	4AC13B24P
11W97	VALVE-SERVICE(1A)	4AC13B24P
15M35	HARNESS-COMP(1A)	4AC13B24P
42W41	SWITCH-HI PRESS(3A)	4AC13B24P
44W62	HARNESS-COMP(3A)	4AC13B24P
47W86	MOTOR-FAN(3A)	4AC13B24P
52W10	COMPRESSOR(3A)	4AC13B24P
86M36	SWITCH-HI PRESS(1A)	4AC13B24P
89M73	CAPACITOR-DUAL(1A)	4AC13B24P
89M74	CAPACITOR-FAN&RUN(3A)	4AC13B24P
95M55	CONTACTOR(3A 1A)	4AC13B24P
97M50	MOTOR-FAN(1A)	4AC13B24P
97M53	COMPRESSOR(1A)	4AC13B24P
	4AC13B30P	
10W32	VALVE-SERVICE(3A 2A)	4AC13B30P
11W95	VALVE-SERVICE(1A)	4AC13B30P
11W97	VALVE-SERVICE(1A)	4AC13B30P
15M35	HARNESS-COMP(2A 1A)	4AC13B30P
27W16	COMPRESSOR(1A)	4AC13B30P
31W72	VALVE-SERVICE(2A)	4AC13B30P
31W73	VALVE-SERVICE(3A)	4AC13B30P
42W41	SWITCH-HI PRESS(3A 2A)	4AC13B30P
43W49	MOTOR-FAN(3A 2A)	4AC13B30P
43W86	COMPRESSOR(3A)	4AC13B30P
44W62	HARNESS-COMP(3A)	4AC13B30P
86M36	SWITCH-HI PRESS(1A)	4AC13B30P
89M76	CAPACITOR(1A)	4AC13B30P
89M80	CAPACITOR-FAN&RUN(3A)	4AC13B30P
95M55	CONTACTOR(3A 2A 1A)	4AC13B30P
97M50	MOTOR-FAN(1A)	4AC13B30P
97M54	COMPRESSOR(2A)	4AC13B30P
	4AC13B36P	

CAT#	DESCRIPTION	Unit
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13B36P
10W33	VALVE-SERVICE(3A)	4AC13B36P
11W95	VALVE-SERVICE(1A)	4AC13B36P
11W97	VALVE-SERVICE(1A)	4AC13B36P
15M35	HARNESS-COMP(2A 1A)	4AC13B36P
31W72	VALVE-SERVICE(2A)	4AC13B36P
41W15	CAPACITOR(1A)	4AC13B36P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13B36P
43W49	MOTOR-FAN(4A 3A 2A)	4AC13B36P
43W86	COMPRESSOR(4A)	4AC13B36P
44W62	HARNESS-COMP(4A 3A)	4AC13B36P
52W33	COMPRESSOR(3A)	4AC13B36P
86M36	SWITCH-HI PRESS(1A)	4AC13B36P
89M80	CAPACITOR-FAN&RUN(4A)	4AC13B36P
95M55	CONTACTOR(4A 3A 2A 1A)	4AC13B36P
97M49	MOTOR-FAN(1A)	4AC13B36P
97M55	COMPRESSOR(2A)	4AC13B36P
99M89	COMPRESSOR(1A)	4AC13B36P
	4AC13B42P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13B42P
11W96	VALVE-SERVICE(1A)	4AC13B42P
11W97	VALVE-SERVICE(1A)	4AC13B42P
15M35	HARNESS-COMP(2A 1A)	4AC13B42P
15W10	COMPRESSOR(1A)	4AC13B42P
31W73	VALVE-SERVICE(3A 2A)	4AC13B42P
41W15	CAPACITOR(1A)	4AC13B42P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13B42P
43W49	MOTOR-FAN(3A)	4AC13B42P
44W62	HARNESS-COMP(4A 3A)	4AC13B42P
49W86	MOTOR-FAN(4A 2A)	4AC13B42P
52W44	COMPRESSOR(4A 3A)	4AC13B42P
86M36	SWITCH-HI PRESS(1A)	4AC13B42P
89M83	CAPACITOR-FAN&RUN(4A 3A 2A)	4AC13B42P
95M55	CONTACTOR(4A 3A 2A)	4AC13B42P
95M56	CONTACTOR(1A)	4AC13B42P
97M49	MOTOR-FAN(1A)	4AC13B42P
97M56	COMPRESSOR(2A)	4AC13B42P
	4AC13B48P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13B48P
11W96	VALVE-SERVICE(1A)	4AC13B48P
11W97	VALVE-SERVICE(1A)	4AC13B48P
15M35	HARNESS-COMP(2A 1A)	4AC13B48P
31W73	VALVE-SERVICE(3A 2A)	4AC13B48P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13B48P

CAT#	DESCRIPTION	Unit
44W62	HARNESS-COMP(4A 3A)	4AC13B48P
49W86	MOTOR-FAN(4A 3A 2A)	4AC13B48P
52W11	COMPRESSOR(4A 3A)	4AC13B48P
86M36	SWITCH-HI PRESS(1A)	4AC13B48P
89M90	CAPACITOR-DUAL(4A 3A 2A)	4AC13B48P
95M56	CONTACTOR(4A 3A 2A 1A)	4AC13B48P
97M49	MOTOR-FAN(1A)	4AC13B48P
97M57	COMPRESSOR(2A 1A)	4AC13B48P
99M81	CAPACITOR-FAN&RUN(1A)	4AC13B48P
	4AC13B60P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13B60P
11W96	VALVE-SERVICE(1A)	4AC13B60P
11W97	VALVE-SERVICE(1A)	4AC13B60P
15M35	HARNESS-COMP(2A 1A)	4AC13B60P
17W10	MOTOR-FAN(1A)	4AC13B60P
21W81	CAPACITOR-FAN&RUN(4A 3A 2A)	4AC13B60P
31W74	VALVE-SERVICE(3A 2A)	4AC13B60P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13B60P
43W87	COMPRESSOR(4A 3A)	4AC13B60P
44W62	HARNESS-COMP(4A 3A)	4AC13B60P
49W86	MOTOR-FAN(4A 3A 2A)	4AC13B60P
86M36	SWITCH-HI PRESS(1A)	4AC13B60P
89M88	CAPACITOR-FAN&RUN(1A)	4AC13B60P
95M56	CONTACTOR(4A 3A 2A 1A)	4AC13B60P
97M58	COMPRESSOR(2A)	4AC13B60P
99M90	COMPRESSOR(1A)	4AC13B60P
	4AC13L18P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13L18P
10W33	VALVE-SERVICE(4A 3A 2A)	4AC13L18P
11W95	VALVE-SERVICE(1A)	4AC13L18P
11W97	VALVE-SERVICE(1A)	4AC13L18P
15M35	HARNESS-COMP(2A 1A)	4AC13L18P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13L18P
44W62	HARNESS-COMP(4A 3A)	4AC13L18P
47W86	MOTOR-FAN(4A 3A 2A)	4AC13L18P
53W14	COMPRESSOR(4A 3A)	4AC13L18P
86M36	SWITCH-HI PRESS(1A)	4AC13L18P
89M70	CAPACITOR-DUAL(1A)	4AC13L18P
89M71	CAPACITOR-DUAL(2A)	4AC13L18P
89M74	CAPACITOR-FAN&RUN(4A 3A)	4AC13L18P
95M55	CONTACTOR(4A 3A 2A 1A)	4AC13L18P
97M50	MOTOR-FAN(1A)	4AC13L18P
97M52	COMPRESSOR(2A 1A)	4AC13L18P
	4AC13L24P	

CAT#	DESCRIPTION	Unit
10W32	VALVE-SERVICE(3A 2A)	4AC13L24P
10W33	VALVE-SERVICE(3A 2A)	4AC13L24P
11W95	VALVE-SERVICE(1A)	4AC13L24P
11W97	VALVE-SERVICE(1A)	4AC13L24P
15M35	HARNESS-COMP(2A 1A)	4AC13L24P
42W41	SWITCH-HI PRESS(3A 2A)	4AC13L24P
44W62	HARNESS-COMP(3A)	4AC13L24P
47W86	MOTOR-FAN(3A)	4AC13L24P
52W10	COMPRESSOR(3A)	4AC13L24P
86M36	SWITCH-HI PRESS(1A)	4AC13L24P
89M73	CAPACITOR-DUAL(1A)	4AC13L24P
89M74	CAPACITOR-FAN&RUN(3A 2A)	4AC13L24P
95M55	CONTACTOR(3A 2A 1A)	4AC13L24P
97M49	MOTOR-FAN(2A)	4AC13L24P
97M50	MOTOR-FAN(1A)	4AC13L24P
97M53	COMPRESSOR(2A 1A)	4AC13L24P
	4AC13L30P	
10W32	VALVE-SERVICE(3A 2A)	4AC13L30P
10W33	VALVE-SERVICE(3A 2A)	4AC13L30P
11W95	VALVE-SERVICE(1A)	4AC13L30P
11W97	VALVE-SERVICE(1A)	4AC13L30P
15M35	HARNESS-COMP(2A 1A)	4AC13L30P
27W16	COMPRESSOR(1A)	4AC13L30P
42W41	SWITCH-HI PRESS(3A 2A)	4AC13L30P
43W49	MOTOR-FAN(3A 2A)	4AC13L30P
44W62	HARNESS-COMP(3A)	4AC13L30P
52W33	COMPRESSOR(3A)	4AC13L30P
86M36	SWITCH-HI PRESS(1A)	4AC13L30P
89M76	CAPACITOR(1A)	4AC13L30P
95M55	CONTACTOR(3A 2A 1A)	4AC13L30P
97M50	MOTOR-FAN(1A)	4AC13L30P
97M54	COMPRESSOR(2A)	4AC13L30P
	4AC13L36P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13L36P
11W95	VALVE-SERVICE(1A)	4AC13L36P
11W97	VALVE-SERVICE(1A)	4AC13L36P
15M35	HARNESS-COMP(2A 1A)	4AC13L36P
31W73	VALVE-SERVICE(3A 2A)	4AC13L36P
41W15	CAPACITOR(1A)	4AC13L36P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13L36P
43W49	MOTOR-FAN(4A 3A 2A)	4AC13L36P
43W86	COMPRESSOR(4A 3A)	4AC13L36P
44W62	HARNESS-COMP(4A 3A)	4AC13L36P
86M36	SWITCH-HI PRESS(1A)	4AC13L36P

CAT#	DESCRIPTION	Unit
89M80	CAPACITOR-FAN&RUN(4A 3A 2A)	4AC13L36P
95M55	CONTACTOR(4A 3A 2A 1A)	4AC13L36P
97M49	MOTOR-FAN(1A)	4AC13L36P
97M55	COMPRESSOR(2A)	4AC13L36P
99M89	COMPRESSOR(1A)	4AC13L36P
	4AC13L42P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13L42P
11W96	VALVE-SERVICE(1A)	4AC13L42P
11W97	VALVE-SERVICE(1A)	4AC13L42P
15M35	HARNESS-COMP(2A 1A)	4AC13L42P
15W10	COMPRESSOR(1A)	4AC13L42P
31W73	VALVE-SERVICE(3A 2A)	4AC13L42P
41W15	CAPACITOR(1A)	4AC13L42P
42W41	SWITCH-HI PRESS(4A 3A)	4AC13L42P
44W62	HARNESS-COMP(4A 3A)	4AC13L42P
49W86	MOTOR-FAN(4A 2A)	4AC13L42P
52W44	COMPRESSOR(4A 3A)	4AC13L42P
85M57	SWITCH-HI PRESS(2A)	4AC13L42P
86M36	SWITCH-HI PRESS(1A)	4AC13L42P
89M83	CAPACITOR-FAN&RUN(4A 3A 2A)	4AC13L42P
95M55	CONTACTOR(4A 3A 2A)	4AC13L42P
95M56	CONTACTOR(1A)	4AC13L42P
97M49	MOTOR-FAN(3A 1A)	4AC13L42P
97M56	COMPRESSOR(2A)	4AC13L42P
	4AC13L48P	
10W32	VALVE-SERVICE(4A 3A 2A)	4AC13L48P
11W96	VALVE-SERVICE(1A)	4AC13L48P
11W97	VALVE-SERVICE(1A)	4AC13L48P
15M35	HARNESS-COMP(2A 1A)	4AC13L48P
31W73	VALVE-SERVICE(3A 2A)	4AC13L48P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13L48P
44W62	HARNESS-COMP(4A 3A)	4AC13L48P
49W86	MOTOR-FAN(4A 2A)	4AC13L48P
52W11	COMPRESSOR(4A 3A)	4AC13L48P
86M36	SWITCH-HI PRESS(1A)	4AC13L48P
89M90	CAPACITOR-DUAL(4A 3A 2A)	4AC13L48P
95M55	CONTACTOR(2A)	4AC13L48P
95M56	CONTACTOR(4A 3A 1A)	4AC13L48P
97M49	MOTOR-FAN(1A)	4AC13L48P
97M57	COMPRESSOR(2A 1A)	4AC13L48P
97M62	MOTOR-FAN(3A)	4AC13L48P
99M81	CAPACITOR-FAN&RUN(1A)	4AC13L48P
	4AC13L60P	

CAT#	DESCRIPTION	Unit
10W32	VALVE-SERVICE(4A 3A)	4AC13L60P
11W96	VALVE-SERVICE(1A)	4AC13L60P
11W97	VALVE-SERVICE(1A)	4AC13L60P
15M35	HARNESS-COMP(2A 1A)	4AC13L60P
17W10	MOTOR-FAN(1A)	4AC13L60P
31W73	VALVE-SERVICE(2A)	4AC13L60P
31W74	VALVE-SERVICE(3A)	4AC13L60P
42W41	SWITCH-HI PRESS(4A 3A 2A)	4AC13L60P
43W87	COMPRESSOR(4A 3A)	4AC13L60P
44W62	HARNESS-COMP(4A 3A)	4AC13L60P
49W86	MOTOR-FAN(4A 3A)	4AC13L60P
86M36	SWITCH-HI PRESS(1A)	4AC13L60P
89M88	CAPACITOR-FAN&RUN(1A)	4AC13L60P
89M92	CAPACITOR-FAN&RUN(4A 3A 2A)	4AC13L60P
95M56	CONTACTOR(4A 1A)	4AC13L60P
95M57	CONTACTOR(2A)	4AC13L60P
97M51	MOTOR-FAN(2A)	4AC13L60P
97M58	COMPRESSOR(2A)	4AC13L60P
99M90	COMPRESSOR(1A)	4AC13L60P
	AC13	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	AC13
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	AC13
10W33	VALVE-SERVICE(030 024 018)	AC13
10W36	CAPACITOR-DUAL(042)	AC13
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	AC13
21J29	CAPACITOR-START(060)	AC13
47A60	CAPACITOR-START(042 036 030 018)	AC13
56L45	SWITCH-LO PRESS(060 048 042 036 030 024 018)	AC13
63A06	CAPACITOR-START(048 024)	AC13
86H31	SWITCH-HI PRESS(060 048 042 036 030 024 018)	AC13
88M11	VALVE-SERVICE(048 042 036)	AC13
88M12	VALVE-SERVICE(060)	AC13
88M97	SWITCH-LO PRESS(060 048 042 036 030 024 018)	AC13
89M19	COMPRESSOR(018)	AC13
89M20	COMPRESSOR(024)	AC13
89M21	COMPRESSOR(030)	AC13
89M22	COMPRESSOR(036)	AC13
89M23	COMPRESSOR(042)	AC13
89M24	COMPRESSOR(048)	AC13
89M25	COMPRESSOR(060)	AC13
89M70	CAPACITOR-DUAL(018)	AC13
89M74	CAPACITOR-FAN&RUN(024)	AC13
89M80	CAPACITOR-FAN&RUN(030)	AC13
89M87	CAPACITOR-FAN&RUN(048)	AC13
89M92	CAPACITOR-FAN&RUN(060)	AC13
89M97	CAPACITOR-FAN&RUN(042)	AC13
95M55	CONTACTOR(036 030 024 018)	AC13

CAT#	DESCRIPTION	Unit
95M56	CONTACTOR(060 048 042)	AC13
97M49	MOTOR-FAN(036 030 024 018)	AC13
97M50	MOTOR-FAN(024 018)	AC13
97M51	MOTOR-FAN(060 048 042)	AC13
97M62	MOTOR-FAN(042)	AC13
	HS19	
38393	CONTACTOR(653 513 463 413)	HS19
38644	RELAY-POTENTIAL(463 461)	HS19
58326	CAPACITOR-START(311)	HS19
58327	RELAY-POTENTIAL(651 311)	HS19
66083	CAPACITOR-START(463 461)	HS19
66463	RELAY-POTENTIAL(653 651 513 511)	HS19
68493	SWITCH-LO PRESS(653 651 513 511 463 461 413 411 311 261)	HS19
87265	SWITCH-LO PRESS(653 651 513 511 463 461 413 411 311 261)	HS19
11G09	SWITCH-LO PRESS(653 651)	HS19
21J28	RELAY-POTENTIAL(651)	HS19
21J29	CAPACITOR-START(651)	HS19
21J61	COMPRESSOR(513)	HS19
21J62	COMPRESSOR(513)	HS19
24G17	COMPRESSOR(261)	HS19
24G19	COMPRESSOR(411)	HS19
24G20	COMPRESSOR(511)	HS19
25J95	COMPRESSOR(653)	HS19
25J96	COMPRESSOR(653)	HS19
25J97	COMPRESSOR(651)	HS19
26H08	COMPRESSOR(413)	HS19
26H09	COMPRESSOR(413 411)	HS19
26H10	COMPRESSOR(463)	HS19
27G40	COMPRESSOR(651)	HS19
28G39	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261)	HS19
28G41	VALVE-SERVICE(413 311 261)	HS19
28G42	VALVE-SERVICE(511 461)	HS19
28G43	VALVE-SERVICE(651)	HS19
36G59	COMPRESSOR(461)	HS19
39H61	CAPACITOR(653 513)	HS19
39H89	CAPACITOR(653 513 463 413)	HS19
41F59	COMPRESSOR(463)	HS19
42C70	COMPRESSOR(513)	HS19
44A93	CAPACITOR-START(651 311 261)	HS19
44A97	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261)	HS19
45A00	RELAY-POTENTIAL(511)	HS19
46F76	VALVE-SERVICE(513 511 463 461)	HS19
46F77	VALVE-SERVICE(653 651)	HS19
47A60	CAPACITOR-START(413 411)	HS19
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261)	HS19
48F03	COMPRESSOR(311)	HS19
53H08	CAPACITOR-RUN(651 261)	HS19

CAT#	DESCRIPTION	Unit
53H16	CAPACITOR-RUN(311)	HS19
53H18	CAPACITOR-RUN(653 651 463 461 413 411)	HS19
53H22	CAPACITOR-FAN&RUN(261)	HS19
53H29	CAPACITOR-FAN&RUN(463 461 413 411)	HS19
54G70	COMPRESSOR(651)	HS19
63A06	CAPACITOR-START(653 651 513 511)	HS19
63K71	COMPRESSOR(311)	HS19
64C67	VALVE-SERVICE(511 413 311 261)	HS19
64C68	VALVE-SERVICE(511)	HS19
65C69	CONTACTOR-COMPR(463 461 411 311 261)	HS19
65C70	CONTACTOR(511)	HS19
65C81	MOTOR-FAN(653 651 513 511)	HS19
65C82	MOTOR-FAN(463 461 413 411 311 261)	HS19
65G01	VALVE-SERVICE(653 651 513 511)	HS19
65G56	VALVE-SERVICE(653 651 513 511)	HS19
65G60	MOTOR-FAN(463 461 261)	HS19
67C02	MOTOR-FAN(653 513 463 461 413 411)	HS19
68A42	VALVE-SERVICE(413 311 261)	HS19
68J65	COMPRESSOR(511)	HS19
72F03	COMPRESSOR(463)	HS19
72H36	MOTOR-FAN(653 651 513 511)	HS19
72H91	VALVE-SERVICE(413 411 311 261)	HS19
72H92	VALVE-SERVICE(653 513 511 463 461)	HS19
74H01	RELAY-POTENTIAL(653 651 513 511)	HS19
74H10	CAPACITOR-RUN(653 651)	HS19
74H30	VALVE-SERVICE(653 651)	HS19
78G20	COMPRESSOR(653)	HS19
78G21	COMPRESSOR(653)	HS19
78H16	COMPRESSOR(513)	HS19
78H37	COMPRESSOR(513)	HS19
78H38	COMPRESSOR(513)	HS19
81A39	CAPACITOR(513 511)	HS19
86H31	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261)	HS19
86H67	COMPRESSOR(511)	HS19
86H78	COMPRESSOR(651)	HS19
86H79	COMPRESSOR(653)	HS19
86H80	COMPRESSOR(653)	HS19
86H81	CAPACITOR-START(653 651 511)	HS19
96C56	CAPACITOR-RUN(513 511)	HS19
96C65	VALVE-SERVICE(413 411 311 261)	HS19
	HS21	
68493	SWITCH-LO PRESS(653 651 513 511 413 411 060 048 036)	HS21
13H28	TRANSFORMER(653 651 513 511 413 411 060 048 036)	HS21
24L06	VALVE-SERVICE(653 651)	HS21
27H32	MOTOR-FAN(653 651 060)	HS21
27H33	MOTOR-FAN(513 511 413 411 048 036)	HS21
27H41	COMPRESSOR(653 060)	HS21

CAT#	DESCRIPTION	Unit
37J05	SWITCH-LO PRESS(653 651 513 511 413 411 060 048 036)	HS21
39H61	CAPACITOR(653 060)	HS21
39L20	VALVE-SERVICE(060)	HS21
44A93	CAPACITOR-START(651 511 411 060 048 036)	HS21
45A01	RELAY-POTENTIAL(411 036)	HS21
48G55	CONTACTOR(651 511 411 060 048 036)	HS21
48G56	CONTACTOR-COMPR(653 513 413 060 048 036)	HS21
48G57	CONTACTOR(511 411 048 036)	HS21
48G58	CONTACTOR(653 513 413 060 048 036)	HS21
48G59	CONTACTOR-COMPR(651 060)	HS21
53H27	CAPACITOR-FAN&RUN(411 036)	HS21
53H29	CAPACITOR-FAN&RUN(511 048)	HS21
54J51	MODULE(653 651 513 511 413 411 060 048 036)	HS21
68J10	VALVE-SERVICE(653 651 513 511 413 411 060 048 036)	HS21
68J13	VALVE-SERVICE(513 511 413 411)	HS21
68J98	VALVE-SERVICE(048 036)	HS21
72H92	VALVE-SERVICE(513 511 413 411)	HS21
74H30	VALVE-SERVICE(653 651)	HS21
76C35	RELAY-POTENTIAL(651 060)	HS21
77G92	COMPRESSOR(411 036)	HS21
77G93	COMPRESSOR(413 036)	HS21
77G95	COMPRESSOR(511 048)	HS21
77G96	COMPRESSOR(513 048)	HS21
78H19	CAPACITOR-FAN&RUN(651 060)	HS21
82A35	RELAY-POTENTIAL(511 048)	HS21
86H31	SWITCH-HI PRESS(653 651 513 511 413 411 060 048 036)	HS21
93G63	COMPRESSOR(651 060)	HS21
	HS22	
68493	SWITCH-LO PRESS(651 511 461 411 311 261 211)	HS22
68652	CONTACTOR(651)	HS22
18H73	COMPRESSOR(211)	HS22
27H32	MOTOR-FAN(651)	HS22
46F44	CAPACITOR-RUN(311)	HS22
46F76	VALVE-SERVICE(461)	HS22
53H27	CAPACITOR-RUN(311)	HS22
65C69	CONTACTOR-COMPR(411 311 261 211)	HS22
65C70	CONTACTOR(511 461)	HS22
65G01	VALVE-SERVICE(651 511 461 411 311 261 211)	HS22
65G56	VALVE-SERVICE(461 411 311 261 211)	HS22
65G60	MOTOR-FAN(461 411 311 261 211)	HS22
68F71	CAPACITOR-FAN&RUN(461 411)	HS22
72H36	MOTOR-FAN(511)	HS22
72H90	VALVE-SERVICE(211)	HS22
72H91	VALVE-SERVICE(411 311 261)	HS22
72H92	VALVE-SERVICE(511 461)	HS22
74H30	VALVE-SERVICE(651)	HS22
78G19	CAPACITOR-FAN&RUN(261 211)	HS22

CAT#	DESCRIPTION	Unit
78H20	CAPACITOR-RUN(511)	HS22
81G66	COMPRESSOR(311)	HS22
81G67	COMPRESSOR(411)	HS22
81G68	COMPRESSOR(461)	HS22
86H31	SWITCH-HI PRESS(651 511)	HS22
96C64	VALVE-SERVICE(211)	HS22
96C65	VALVE-SERVICE(411 311 261)	HS22
97H50	COMPRESSOR(511)	HS22
97H51	COMPRESSOR(651)	HS22
98G20	COMPRESSOR(261)	HS22
	HS23	
38393	CONTACTOR(653 513 463 413 411)	HS23
66083	CAPACITOR-START(511 463 461)	HS23
66441	CONTACTOR(411 311 261 211 141)	HS23
66463	RELAY-POTENTIAL(511 461)	HS23
87265	SWITCH-LO PRESS(653 651 463 461 413 411 311 261 211 141)	HS23
13H79	TRANSFORMER(653 651 513 511)	HS23
18J70	COMPRESSOR(311)	HS23
21J28	RELAY-POTENTIAL(651)	HS23
21J29	CAPACITOR-START(651)	HS23
21J64	COMPRESSOR(653)	HS23
21J65	COMPRESSOR(653)	HS23
25J57	COMPRESSOR(651)	HS23
25J63	COMPRESSOR(461)	HS23
25J64	COMPRESSOR(463)	HS23
25J65	COMPRESSOR(463)	HS23
27J24	COMPRESSOR(411)	HS23
31J37	SWITCH-HI PRESS(653 651 463 461 413 411 311 261 211 141)	HS23
32F21	CONTROL-TIMED OFF(653 651 463 461 413 411 311 261 211 141)	HS23
37J05	SWITCH-LO PRESS(653 463 461 413 411 311 261 211 141)	HS23
39H61	CAPACITOR(653 513 463)	HS23
39H89	CAPACITOR(653 513 463)	HS23
53H22	CAPACITOR-FAN&RUN(211 141)	HS23
53H23	CAPACITOR-RUN(261)	HS23
53H25	CAPACITOR-FAN&RUN(413 411 311)	HS23
53H27	CAPACITOR-RUN(311)	HS23
53H29	CAPACITOR-FAN&RUN(413 411 311)	HS23
53J77	COMPRESSOR(411)	HS23
53J78	COMPRESSOR(411)	HS23
65C69	CONTACTOR-COMPR(461 411 311 261 211 141)	HS23
65C70	CONTACTOR(511 461)	HS23
65G80	COMPRESSOR(653)	HS23
67C02	MOTOR-FAN(651 511 461)	HS23
69H62	COMPRESSOR(141)	HS23
69H63	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211 141)	HS23
72H33	COMPRESSOR(261)	HS23
72H34	COMPRESSOR(211)	HS23

CAT#	DESCRIPTION	Unit
72H36	MOTOR-FAN(651 511 461)	HS23
72H72	CAPACITOR-START(461)	HS23
72H73	MOTOR-FAN(461 411 311 261 211 141)	HS23
72H75	COMPRESSOR(411)	HS23
72H78	COMPRESSOR(311)	HS23
72H79	COMPRESSOR(461)	HS23
72H88	MOTOR-FAN(461 411)	HS23
72H89	VALVE-SERVICE(141)	HS23
72H90	VALVE-SERVICE(261 211)	HS23
72H91	VALVE-SERVICE(413 411 311)	HS23
72H92	VALVE-SERVICE(513 511 463 461)	HS23
74H01	RELAY-POTENTIAL(461)	HS23
74H10	CAPACITOR-RUN(653 651)	HS23
74H12	COMPRESSOR(511)	HS23
74H15	COMPRESSOR(141)	HS23
74H30	VALVE-SERVICE(653 651)	HS23
74H39	VALVE-SERVICE(653 651 463 461 413 411 311 261 211 141)	HS23
74H40	VALVE-SERVICE(141)	HS23
74H41	VALVE-SERVICE(261 211)	HS23
74H42	VALVE-SERVICE(413 411 311)	HS23
74H45	COMPRESSOR(211)	HS23
74H46	COMPRESSOR(261)	HS23
74H47	COMPRESSOR(311)	HS23
74H48	COMPRESSOR(413 411)	HS23
74H51	COMPRESSOR(413 411)	HS23
74H52	COMPRESSOR(463)	HS23
74H53	COMPRESSOR(463)	HS23
74H54	COMPRESSOR(513)	HS23
74H55	COMPRESSOR(513)	HS23
74H56	COMPRESSOR(513)	HS23
74H70	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211 141)	HS23
78H10	MOTOR-FAN(411 311 261 211 141)	HS23
78H18	COMPRESSOR(461)	HS23
78H19	CAPACITOR-FAN&RUN(513 511 463 461)	HS23
78H20	CAPACITOR-RUN(463 461)	HS23
78H26	COMPRESSOR(311)	HS23
78H28	COMPRESSOR(411)	HS23
78H29	COMPRESSOR(413 411)	HS23
78H30	COMPRESSOR(413 411)	HS23
	HS24	
38393	CONTACTOR(653 513 463 413)	HS24
66083	CAPACITOR-START(511)	HS24
66441	CONTACTOR(411 311 261 211 141)	HS24
66463	RELAY-POTENTIAL(511)	HS24
87265	SWITCH-LO PRESS(651 513 511 463 461 413 411 311 261 211 141)	HS24
13H79	TRANSFORMER(653 651 513 511)	HS24
21J28	RELAY-POTENTIAL(651)	HS24

CAT#	DESCRIPTION	Unit
21J29	CAPACITOR-START(651)	HS24
29M24	COMPRESSOR(653)	HS24
39H61	CAPACITOR(651 513)	HS24
39H89	CAPACITOR(653)	HS24
47J27	CONTROL-TIMED OFF(651 513 511 463 461 413 411 311 261 211 141)	HS24
53H22	CAPACITOR-FAN&RUN(211 141)	HS24
53H23	CAPACITOR-RUN(261)	HS24
53H29	CAPACITOR-FAN&RUN(413 411 311)	HS24
65C69	CONTACTOR-COMPR(411 311 261 211 141)	HS24
65C70	CONTACTOR(511 461)	HS24
67C02	MOTOR-FAN(651 511)	HS24
69H62	COMPRESSOR(141)	HS24
69H63	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211 141)	HS24
72H33	COMPRESSOR(261)	HS24
72H34	COMPRESSOR(211)	HS24
72H36	MOTOR-FAN(651 511)	HS24
72H72	CAPACITOR-START(651 461)	HS24
72H73	MOTOR-FAN(461 411 311 261 211 141)	HS24
72H75	COMPRESSOR(411)	HS24
72H78	COMPRESSOR(311)	HS24
72H79	COMPRESSOR(461)	HS24
72H88	MOTOR-FAN(461 411)	HS24
72H89	VALVE-SERVICE(141)	HS24
72H90	VALVE-SERVICE(261 211)	HS24
72H91	VALVE-SERVICE(413 411 311)	HS24
72H92	VALVE-SERVICE(513 511 463 461)	HS24
74H01	RELAY-POTENTIAL(651 461)	HS24
74H10	CAPACITOR-RUN(653 651)	HS24
74H12	COMPRESSOR(511)	HS24
74H15	COMPRESSOR(141)	HS24
74H30	VALVE-SERVICE(653 651)	HS24
74H39	VALVE-SERVICE(653 651 513 511 463 461 413 411 311 261 211 141)	HS24
74H40	VALVE-SERVICE(141)	HS24
74H41	VALVE-SERVICE(261 211)	HS24
74H42	VALVE-SERVICE(413 411 311)	HS24
74H45	COMPRESSOR(211)	HS24
74H46	COMPRESSOR(261)	HS24
74H47	COMPRESSOR(311)	HS24
74H48	COMPRESSOR(413 411)	HS24
74H50	COMPRESSOR(411)	HS24
74H51	COMPRESSOR(413)	HS24
74H52	COMPRESSOR(463)	HS24
74H53	COMPRESSOR(463)	HS24
74H54	COMPRESSOR(513)	HS24
74H55	COMPRESSOR(513)	HS24
74H56	COMPRESSOR(513)	HS24
74H58	COMPRESSOR(651)	HS24
74H59	COMPRESSOR(653)	HS24
74H61	COMPRESSOR(653)	HS24

CAT#	DESCRIPTION	Unit
74H70	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211 141)	HS24
78H10	MOTOR-FAN(411 311 261 211 141)	HS24
78H19	CAPACITOR-FAN&RUN(513 511)	HS24
78H26	COMPRESSOR(311)	HS24
78H28	COMPRESSOR(411)	HS24
78H29	COMPRESSOR(413)	HS24
78H30	COMPRESSOR(413)	HS24
LB-7888	0A SWITCH-HI PRESS(651 513 511 463 461 413 411 311 261 211 141)	HS24
	HS25	
38393	CONTACTOR(653 651 513 511 463 461 413 411)	HS25
68493	SWITCH-LO PRESS(653 651 513 511 463 461 413 411 311 261 211)	HS25
87265	SWITCH-LO PRESS(653 651 513 511 463 461 413 411 311 261 211)	HS25
18H73	COMPRESSOR(211)	HS25
27H32	MOTOR-FAN(653 651)	HS25
27H34	MOTOR-FAN(211)	HS25
37J27	COMPRESSOR(513 511)	HS25
37J28	COMPRESSOR(513 511)	HS25
37J30	COMPRESSOR(653 651)	HS25
37J31	COMPRESSOR(653 651)	HS25
39H61	CAPACITOR(653 651 513 511)	HS25
39H89	CAPACITOR(653 651 513 511)	HS25
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211)	HS25
49K52	CAPACITOR-FAN&RUN(651)	HS25
53H22	CAPACITOR-FAN&RUN(211)	HS25
53H23	CAPACITOR-RUN(261)	HS25
53H27	CAPACITOR-FAN&RUN(463 461 413 411 311)	HS25
53J05	COMPRESSOR(511)	HS25
53J06	COMPRESSOR(651)	HS25
65C69	CONTACTOR-COMPR(413 411 311 261 211)	HS25
65C70	CONTACTOR(513 511 463 461)	HS25
65G60	MOTOR-FAN(463 461 413 411 311 261)	HS25
66J45	COMPRESSOR(413 411)	HS25
67C02	MOTOR-FAN(653 651 513 511)	HS25
68J37	CONTACTOR(653 651)	HS25
72H36	MOTOR-FAN(513 511)	HS25
72H90	VALVE-SERVICE(211)	HS25
72H91	VALVE-SERVICE(413 411 311 261)	HS25
72H92	VALVE-SERVICE(513 511 463 461)	HS25
74H10	CAPACITOR-RUN(511)	HS25
74H30	VALVE-SERVICE(653 651)	HS25
78H20	CAPACITOR-RUN(513 511)	HS25
79J91	COMPRESSOR(463 461)	HS25
81G66	COMPRESSOR(311)	HS25
81G67	COMPRESSOR(413 411)	HS25
81G68	COMPRESSOR(463 461)	HS25
86H31	SWITCH-HI PRESS(653 651 513 511 463 461 413 411 311 261 211)	HS25
97H50	COMPRESSOR(511)	HS25

CAT#	DESCRIPTION	Unit
97H51	COMPRESSOR(653 651)	HS25
98G20	COMPRESSOR(261)	HS25
	HS26	
38393	CONTACTOR(653 513 060 048 042 036)	HS26
58327	RELAY-POTENTIAL(653 651 513 511 461 411 311 261 060 048 042 036 030 024 018)	HS26
66463	RELAY-POTENTIAL(211)	HS26
68493	SWITCH-LO PRESS(653 651 513 511 461 411 311 261 211 060 048 042 036 030 024 018)	HS26
87265	SWITCH-LO PRESS(653 651 513 511 461 411 311 261 211 060 048 030 024 018)	HS26
14K29	COMPRESSOR(042)	HS26
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HS26
15M36	HARNESS-COMP(060 048 042 036)	HS26
15M60	COMPRESSOR(018)	HS26
15M61	COMPRESSOR(024)	HS26
15M63	COMPRESSOR(030)	HS26
15M67	COMPRESSOR(036)	HS26
15M68	COMPRESSOR(036)	HS26
15M72	COMPRESSOR(042)	HS26
15M73	COMPRESSOR(042)	HS26
15M74	COMPRESSOR(042)	HS26
15M78	COMPRESSOR(048)	HS26
15M79	COMPRESSOR(048)	HS26
15M80	COMPRESSOR(048)	HS26
15M84	COMPRESSOR(060)	HS26
15M85	COMPRESSOR(060)	HS26
15M86	COMPRESSOR(060)	HS26
21J29	CAPACITOR-START(653 651 513 511 060 048)	HS26
24L87	CAPACITOR-FAN&RUN(048)	HS26
27H32	MOTOR-FAN(653 651 060)	HS26
27H34	MOTOR-FAN(211 018)	HS26
31J50	VALVE-SERVICE(461 060)	HS26
31J94	CAPACITOR-FAN&RUN(018)	HS26
32M96	CAPACITOR-FAN&RUN(036)	HS26
37J27	COMPRESSOR(513 048)	HS26
37J28	COMPRESSOR(513 048)	HS26
37J30	COMPRESSOR(653 060)	HS26
37J31	COMPRESSOR(653 060)	HS26
39H61	CAPACITOR(653 513 060 048)	HS26
39H89	CAPACITOR(653 513 060 048 042 036)	HS26
39L20	VALVE-SERVICE(060)	HS26
42J29	COMPRESSOR(211)	HS26
47A60	CAPACITOR-START(461 411 311 261 211 042 036 030 024 018)	HS26
47J27	CONTROL-TIMED OFF(653 651 513 511 048)	HS26
47J35	CONTROL-TIMED OFF(060 048 042 036 030 024 018)	HS26
49K34	COMPRESSOR(018)	HS26
49K52	CAPACITOR-FAN&RUN(653 651 060)	HS26
51H75	MOTOR-FAN(048)	HS26
53H22	CAPACITOR-FAN&RUN(211)	HS26

CAT#	DESCRIPTION	Unit
53H23	CAPACITOR-RUN(261)	HS26
53H25	CAPACITOR-FAN&RUN(024)	HS26
53H27	CAPACITOR-FAN&RUN(461 411 311)	HS26
53J05	COMPRESSOR(511 048)	HS26
53J06	COMPRESSOR(651 060)	HS26
56L45	SWITCH-LO PRESS(060 048 042 036 030 024 018)	HS26
59M99	MOTOR-FAN(060 048 042 036)	HS26
63K87	CAPACITOR-FAN&RUN(030)	HS26
65C69	CONTACTOR-COMPR(411 311 261 211 042 036 030 024 018)	HS26
65C70	CONTACTOR(461)	HS26
65G60	MOTOR-FAN(461 411 311 261 042 036 030 024)	HS26
66J45	COMPRESSOR(036)	HS26
66J46	COMPRESSOR(036)	HS26
67C02	MOTOR-FAN(653 651 513 511 060 042 036)	HS26
67K18	VALVE-SERVICE(018)	HS26
67K69	CAPACITOR-FAN&RUN(042)	HS26
67K70	CAPACITOR-FAN&RUN(513 511 048)	HS26
68J10	VALVE-SERVICE(060 048 042 036 030 024 018)	HS26
68J12	VALVE-SERVICE(036 030 024)	HS26
68J13	VALVE-SERVICE(048 042)	HS26
68J36	CONTACTOR-COMPR(042 036 030 024 018)	HS26
68J37	CONTACTOR(651 511 060 048)	HS26
68J72	COMPRESSOR(024)	HS26
68J73	COMPRESSOR(030)	HS26
68J75	COMPRESSOR(042)	HS26
69M64	CAPACITOR-FAN&RUN(030)	HS26
69M65	CAPACITOR-FAN&RUN(036)	HS26
69M66	CAPACITOR-FAN&RUN(042)	HS26
72H36	MOTOR-FAN(513 511 060 048)	HS26
72H90	VALVE-SERVICE(211)	HS26
72H91	VALVE-SERVICE(411 311 261)	HS26
72H92	VALVE-SERVICE(513 511)	HS26
74H30	VALVE-SERVICE(653 651)	HS26
79J91	COMPRESSOR(042)	HS26
81G66	COMPRESSOR(311)	HS26
81G67	COMPRESSOR(411)	HS26
81G68	COMPRESSOR(461)	HS26
86H31	SWITCH-HI PRESS(653 651 513 511 461 411 311 261 211 060 048 042 036 030 024 018)	HS26
88K20	COMPRESSOR(048)	HS26
88K21	COMPRESSOR(048)	HS26
88K22	COMPRESSOR(048)	HS26
97M94	COMPRESSOR(036)	HS26
98G20	COMPRESSOR(261)	HS26
	HS27	
58327	RELAY-POTENTIAL(042 036 030 024)	HS27
68493	SWITCH-LO PRESS(042 036 030 024)	HS27
87265	SWITCH-LO PRESS(042 036 030 024)	HS27

CAT#	DESCRIPTION	Unit
15M35	HARNES-COMP(042 036 030 024)	HS27
15M61	COMPRESSOR(024)	HS27
15M62	COMPRESSOR(030)	HS27
15M64	COMPRESSOR(036)	HS27
15M69	COMPRESSOR(042)	HS27
27H33	MOTOR-FAN(042 036)	HS27
27H34	MOTOR-FAN(030 024)	HS27
32M96	CAPACITOR-FAN&RUN(042)	HS27
47A60	CAPACITOR-START(042 036 030 024)	HS27
47J35	CONTROL-TIMED OFF(042 036 030 024)	HS27
53H29	CAPACITOR-FAN&RUN(036)	HS27
56L45	SWITCH-LO PRESS(042 036 030 024)	HS27
63K87	CAPACITOR-FAN&RUN(036)	HS27
65C69	CONTACTOR-COMPR(042 036 030 024)	HS27
67K12	CAPACITOR-FAN&RUN(030 024)	HS27
67K40	COMPRESSOR(030)	HS27
67K41	COMPRESSOR(036)	HS27
67K42	COMPRESSOR(042)	HS27
68J10	VALVE-SERVICE(042 036 030 024)	HS27
68J36	CONTACTOR-COMPR(042 036 030 024)	HS27
68J72	COMPRESSOR(024)	HS27
68J95	VALVE-SERVICE(030 024)	HS27
68J98	VALVE-SERVICE(042 036)	HS27
69M64	CAPACITOR-FAN&RUN(036)	HS27
69M65	CAPACITOR-FAN&RUN(042)	HS27
86H31	SWITCH-HI PRESS(042 036 030 024)	HS27
95M55	CONTACTOR(042 036 030 024)	HS27
	HS29	
4336	SWITCH-HI PRESS(120 090 072)	HS29
38113	CONTACTOR(240 180 120 090 072)	HS29
38393	CONTACTOR(683 653 513 463 413 240 180 120 090 072 065S 062S 062 060 048S 048 042)	HS29
38644	RELAY-POTENTIAL(651 511 461)	HS29
58326	CAPACITOR-START(141 012)	HS29
58327	RELAY-POTENTIAL(411 311 060 048S 048 042 036 030 024)	HS29
66083	CAPACITOR-START(411 036)	HS29
87265	SWITCH-LO PRESS(683 681 653 651 513 511 463 461 413 411 311 261 211 141 065S 062)	HS29
10W32	VALVE-SERVICE(018)	HS29
12L31	COMPRESSOR(180 090)	HS29
12L32	COMPRESSOR(180 090)	HS29
13H28	TRANSFORMER(240 180)	HS29
13H79	TRANSFORMER(653 513 060 048S 048)	HS29
13W86	CAPACITOR-FAN&RUN(018)	HS29
14K36	COMPRESSOR(065S)	HS29
14K38	COMPRESSOR(072)	HS29
14K39	COMPRESSOR(072)	HS29
14K40	COMPRESSOR(072)	HS29
14K88	COMPRESSOR(211 018)	HS29

CAT#	DESCRIPTION	Unit
14K89	COMPRESSOR(211 018)	HS29
14K90	COMPRESSOR(211 018)	HS29
15M35	HARNESS-COMP(065S 060 048S 048 042 036S 036 030S 030 024 018)	HS29
15M36	HARNESS-COMP(062S 062 060 048S 048 042 036S 036)	HS29
15M52	COMPRESSOR(030S 030)	HS29
15M53	COMPRESSOR(036S 036)	HS29
15M62	COMPRESSOR(024)	HS29
15M65	COMPRESSOR(030S 030)	HS29
15M70	COMPRESSOR(036S 036)	HS29
15M71	COMPRESSOR(036S 036)	HS29
15M73	COMPRESSOR(042)	HS29
15M74	COMPRESSOR(042)	HS29
15M75	COMPRESSOR(042)	HS29
15M76	COMPRESSOR(042)	HS29
15M78	COMPRESSOR(048S 048)	HS29
15M83	COMPRESSOR(048S 048)	HS29
15M84	COMPRESSOR(060)	HS29
15M88	COMPRESSOR(060)	HS29
15M92	COMPRESSOR(062S 062)	HS29
15M93	COMPRESSOR(062S 062)	HS29
15M94	COMPRESSOR(065S)	HS29
21J29	CAPACITOR-START(060 048S 048)	HS29
25M75	COMPRESSOR(042)	HS29
25M76	COMPRESSOR(042)	HS29
25M84	COMPRESSOR(060)	HS29
25M85	COMPRESSOR(060)	HS29
25M86	COMPRESSOR(060)	HS29
25M87	COMPRESSOR(072)	HS29
25M88	COMPRESSOR(072)	HS29
25M89	COMPRESSOR(072)	HS29
27J07	MOTOR-FAN(120 090 072)	HS29
27J10	COMPRESSOR(060)	HS29
27J24	COMPRESSOR(411)	HS29
27J30	MOTOR-FAN(120 090 072)	HS29
27J31	MOTOR-FAN(120 090 072)	HS29
29M29	COMPRESSOR(048)	HS29
29M30	COMPRESSOR(048)	HS29
29M31	COMPRESSOR(048)	HS29
31J50	VALVE-SERVICE(683 681 653 651 062S 062 060)	HS29
31J63	THERMOSTAT(240 180)	HS29
31K47	COMPRESSOR(683 062)	HS29
31K48	COMPRESSOR(683 062S 062)	HS29
31L19	MOTOR-FAN(012)	HS29
32M96	CAPACITOR-FAN&RUN(036S 036)	HS29
39H61	CAPACITOR(240 180 120 090 072)	HS29
39H89	CAPACITOR(683 653 513 065S 062S 062 060 048S 048)	HS29
39L20	VALVE-SERVICE(065S 062S 062 060)	HS29
41K43	COMPRESSOR(411)	HS29
44A93	CAPACITOR-START(311 261 211 030S 030 024 018)	HS29

CAT#	DESCRIPTION	Unit
45A01	RELAY-POTENTIAL(411)	HS29
47A60	CAPACITOR-START(411 048S 048 042 036 030 024 018)	HS29
47J27	CONTROL-TIMED OFF(653 651 513 511 463 461 413 411 311 261 211 065S 062S 062 060)	HS29
47J35	CONTROL-TIMED OFF(683 681)	HS29
48J21	COMPRESSOR(060)	HS29
49K02	CONTROL-TIMED OFF(240 180 120 090 072)	HS29
49K50	CAPACITOR-FAN&RUN(060)	HS29
49L65	MOTOR-FAN(090)	HS29
49L66	MOTOR-FAN(090)	HS29
49L67	MOTOR-FAN(090)	HS29
49M42	COMPRESSOR(048S 048)	HS29
49M68	CAPACITOR-FAN&RUN(030S 030)	HS29
51H79	TRANSFORMER(240 180)	HS29
51M04	RELAY-POTENTIAL(048S 048)	HS29
53H05	CAPACITOR(120 090 072)	HS29
53H06	CAPACITOR(240 180 120 090 072)	HS29
53H22	CAPACITOR-FAN&RUN(141 018 012)	HS29
53H25	CAPACITOR-FAN&RUN(411 036)	HS29
53H29	CAPACITOR-FAN&RUN(030S 030)	HS29
56L45	SWITCH-LO PRESS(062S 060 048S 048 042 036S 036 030S 030 024 018)	HS29
56M94	COMPRESSOR(018)	HS29
58H66	RELAY-POTENTIAL(261 211 141 024 018 012)	HS29
60L05	COMPRESSOR(240 120)	HS29
60L06	COMPRESSOR(240 120)	HS29
60L07	COMPRESSOR(240 120)	HS29
60L52	VALVE-SERVICE(240 180 120 090)	HS29
60M51	COMPRESSOR(018)	HS29
60M64	COMPRESSOR(024)	HS29
63A06	CAPACITOR-START(651 511 461 411)	HS29
63K68	COMPRESSOR(261 024)	HS29
63K69	COMPRESSOR(311)	HS29
63K70	COMPRESSOR(261 024)	HS29
63K71	COMPRESSOR(311)	HS29
63K76	COMPRESSOR(411)	HS29
63K83	COMPRESSOR(311 030)	HS29
63K86	CAPACITOR-FAN&RUN(261 211 030S 030 024 018)	HS29
63K87	CAPACITOR-FAN&RUN(411 311 030)	HS29
65C69	CONTACTOR-COMPR(036S 036 030S 030 024 018 012)	HS29
65G03	VALVE-SERVICE(072)	HS29
65M65	CAPACITOR-FAN&RUN(036S 036)	HS29
66J54	TRANSFORMER(240 180)	HS29
67K18	VALVE-SERVICE(261 211 024 018)	HS29
68J07	COMPRESSOR(681)	HS29
68J08	CAPACITOR-RUN(681)	HS29
68J10	VALVE-SERVICE(683 681 653 651 513 511 463 461 413 411 311 261 211 141 065S 062S)	HS29
68J11	VALVE-SERVICE(240 180 141 120 090 072 012)	HS29
68J12	VALVE-SERVICE(413 411 311 036S 036 030S 030 024)	HS29
68J13	VALVE-SERVICE(513 511 463 461 048S 048 042)	HS29
68J23	MOTOR-FAN(463 413 042 036S 036)	HS29

CAT#	DESCRIPTION	Unit
68J24	MOTOR-FAN(683 681 653 651 513 511 062 060 048S 048)	HS29
68J25	MOTOR-FAN(683 653 513 065S 062S 062 060 048S 048)	HS29
68J35	CAPACITOR-FAN&RUN(651)	HS29
68J36	CONTACTOR-COMPR(461 411 311 261 211 141 042 036S 036 030S 030 024 018 012)	HS29
68J37	CONTACTOR(681 651 511 060 048S 048)	HS29
68J51	COMPRESSOR(018)	HS29
68J55	COMPRESSOR(411)	HS29
68J56	COMPRESSOR(411)	HS29
68J57	COMPRESSOR(411 036)	HS29
68J58	COMPRESSOR(413 036)	HS29
68J59	COMPRESSOR(413 036)	HS29
68J61	COMPRESSOR(461)	HS29
68J62	COMPRESSOR(463 042)	HS29
68J63	COMPRESSOR(463 042)	HS29
68J64	COMPRESSOR(513 048)	HS29
68J65	COMPRESSOR(511)	HS29
68J66	COMPRESSOR(513 048S 048)	HS29
68J67	COMPRESSOR(513 048)	HS29
68J68	COMPRESSOR(653 060)	HS29
68J69	COMPRESSOR(651)	HS29
68J70	COMPRESSOR(653 060)	HS29
68J71	COMPRESSOR(653 060)	HS29
68J91	CAPACITOR-FAN&RUN(511)	HS29
68J97	MOTOR-FAN(463 461 413 411 311 261 211 141 042 036S 036 030S 030 024 018)	HS29
69H62	COMPRESSOR(141 012)	HS29
69J91	THERMOSTAT(120)	HS29
69M30	CAPACITOR-FAN&RUN(018)	HS29
69M64	CAPACITOR-FAN&RUN(030)	HS29
69M70	CAPACITOR-FAN&RUN(060 036S 036)	HS29
78H27	COMPRESSOR(261 024)	HS29
79J81	MOTOR-FAN(240 180 120)	HS29
79J82	MOTOR-FAN(240 180 120)	HS29
79J83	MOTOR-FAN(240 180 120)	HS29
80K19	COMPRESSOR(030S 030)	HS29
80K20	COMPRESSOR(036S 036)	HS29
80K21	COMPRESSOR(042)	HS29
80K32	COMPRESSOR(048S 048)	HS29
80K48	CAPACITOR(042 036S 036 024)	HS29
85C23	SWITCH-LO PRESS(240 180 120 090 072)	HS29
85C87	SWITCH-HI PRESS(240 180 120 090 072)	HS29
86H31	SWITCH-HI PRESS(683 681 653 651 513 511 463 461 413 411 311 261 211 141 065S 062)	HS29
88K20	COMPRESSOR(048S 048)	HS29
88K23	COMPRESSOR(048S 048)	HS29
97H16	CAPACITOR-RUN(048S 048)	HS29
99K08	COMPRESSOR(036S 036)	HS29
99K10	COMPRESSOR(036S 036)	HS29
99K11	COMPRESSOR(030S 030)	HS29
	HS29A	

CAT#	DESCRIPTION	Unit
38393	CONTACTOR(060 048 036)	HS29A
87265	SWITCH-LO PRESS(060 048 036)	HS29A
13H79	TRANSFORMER(060 048)	HS29A
15M36	HARNESS-COMP(060 048 036)	HS29A
25M84	COMPRESSOR(060)	HS29A
25M85	COMPRESSOR(060)	HS29A
25M86	COMPRESSOR(060)	HS29A
29M29	COMPRESSOR(048)	HS29A
29M30	COMPRESSOR(048)	HS29A
29M31	COMPRESSOR(048)	HS29A
39H89	CAPACITOR(060 048)	HS29A
39L20	VALVE-SERVICE(060)	HS29A
56L45	SWITCH-LO PRESS(060 048 036)	HS29A
68J10	VALVE-SERVICE(060 048 036)	HS29A
68J12	VALVE-SERVICE(036)	HS29A
68J13	VALVE-SERVICE(048)	HS29A
68J23	MOTOR-FAN(036)	HS29A
68J24	MOTOR-FAN(060 048)	HS29A
68J25	MOTOR-FAN(060 048)	HS29A
68J58	COMPRESSOR(036)	HS29A
68J59	COMPRESSOR(036)	HS29A
68J97	MOTOR-FAN(036)	HS29A
86H31	SWITCH-HI PRESS(060 048 036)	HS29A
HS30		
58327	RELAY-POTENTIAL(651 511 461 411 311 261)	HS30
87265	SWITCH-LO PRESS(651 511 461 411 311 261)	HS30
31J50	VALVE-SERVICE(651)	HS30
44A93	CAPACITOR-START(311)	HS30
47A60	CAPACITOR-START(651 511 461 411 311 261)	HS30
47J35	CONTROL-TIMED OFF(651 511 461 411 311 261)	HS30
53H25	CAPACITOR-FAN&RUN(261)	HS30
53H29	CAPACITOR-FAN&RUN(311)	HS30
53J05	COMPRESSOR(511)	HS30
53J06	COMPRESSOR(651)	HS30
53J07	CAPACITOR-RUN(511 461)	HS30
53J08	CAPACITOR-RUN(651)	HS30
68J10	VALVE-SERVICE(651 511 461 411 311 261)	HS30
68J24	MOTOR-FAN(651 511 461)	HS30
68J36	CONTACTOR-COMPR(461 411 311 261)	HS30
68J37	CONTACTOR(651 511)	HS30
68J72	COMPRESSOR(261)	HS30
68J73	COMPRESSOR(311)	HS30
68J75	COMPRESSOR(461)	HS30
68J95	VALVE-SERVICE(311 261)	HS30
68J97	MOTOR-FAN(411 311 261)	HS30
68J98	VALVE-SERVICE(511 461 411)	HS30

CAT#	DESCRIPTION	Unit
86H31	SWITCH-HI PRESS(651 511 461 411 311 261)	HS30
97M94	COMPRESSOR(411)	HS30
	HS32	
58327	RELAY-POTENTIAL(048 042 036 030 024)	HS32
66463	RELAY-POTENTIAL(060)	HS32
15M35	HARNESS-COMP(060 048 042 036 030 024)	HS32
15M95	COMPRESSOR(024)	HS32
15M96	COMPRESSOR(030)	HS32
15M97	COMPRESSOR(036)	HS32
15M98	COMPRESSOR(042)	HS32
15M99	COMPRESSOR(048)	HS32
16M00	COMPRESSOR(060)	HS32
27H32	MOTOR-FAN(060)	HS32
31L94	SWITCH-HI PRESS(060 048 042 036 030 024)	HS32
37L51	VALVE-EXPANSION(036 030 024)	HS32
39L20	VALVE-SERVICE(060)	HS32
39L72	VALVE-EXPANSION(060 048 042)	HS32
39L95	COMPRESSOR(024)	HS32
39L96	COMPRESSOR(030)	HS32
39L97	COMPRESSOR(036)	HS32
39L98	COMPRESSOR(042)	HS32
39L99	COMPRESSOR(048)	HS32
40L00	COMPRESSOR(060)	HS32
47A60	CAPACITOR-START(060 048 042 036 030 024)	HS32
47J35	CONTROL-TIMED OFF(060 048 042 036 030 024)	HS32
49K52	CAPACITOR-FAN&RUN(060)	HS32
53H25	CAPACITOR-FAN&RUN(024)	HS32
53H29	CAPACITOR-FAN&RUN(036 030)	HS32
60L57	SWITCH-LO PRESS(060 048 042 036 030 024)	HS32
63K87	CAPACITOR-FAN&RUN(036 030)	HS32
65C69	CONTACTOR-COMPR(042 036 030 024)	HS32
65G60	MOTOR-FAN(042 036 030 024)	HS32
67K69	CAPACITOR-FAN&RUN(042)	HS32
67K70	CAPACITOR-FAN&RUN(048)	HS32
68J10	VALVE-SERVICE(060 048 042 036 030 024)	HS32
68J12	VALVE-SERVICE(036 030 024)	HS32
68J13	VALVE-SERVICE(048 042)	HS32
68J36	CONTACTOR-COMPR(042 036 030 024)	HS32
68J37	CONTACTOR(060 048)	HS32
72H36	MOTOR-FAN(048)	HS32
	HS40	
38393	CONTACTOR(065 048 036)	HS40
58327	RELAY-POTENTIAL(036 024 018)	HS40
87265	SWITCH-LO PRESS(065 048 036 024 018)	HS40
10W32	VALVE-SERVICE(065 048 036 024 018)	HS40

CAT#	DESCRIPTION	Unit
10W33	VALVE-SERVICE(036)	HS40
15M35	HARNESS-COMP(036 024 018)	HS40
15M36	HARNESS-COMP(065 048 036)	HS40
15M54	COMPRESSOR(018)	HS40
15M55	COMPRESSOR(024)	HS40
15M56	COMPRESSOR(036)	HS40
15M57	COMPRESSOR(036)	HS40
15M58	COMPRESSOR(048)	HS40
15M59	COMPRESSOR(065)	HS40
22W71	VALVE-SERVICE(048)	HS40
39H89	CAPACITOR(065 048)	HS40
39L20	VALVE-SERVICE(065)	HS40
47A60	CAPACITOR-START(036 024 018)	HS40
47J27	CONTROL-TIMED OFF(065 048 036 024 018)	HS40
49K92	CAPACITOR-FAN&RUN(036)	HS40
49L26	COMPRESSOR(018)	HS40
49L27	COMPRESSOR(024)	HS40
49L28	COMPRESSOR(036)	HS40
49L29	COMPRESSOR(036)	HS40
49L30	COMPRESSOR(048)	HS40
49L31	COMPRESSOR(065)	HS40
49L33	VALVE-EXPANSION(036 024 018)	HS40
49L34	VALVE-EXPANSION(065 048)	HS40
53H25	CAPACITOR-FAN&RUN(024 018)	HS40
56J20	VALVE-EXPANSION(065 048)	HS40
56L45	SWITCH-LO PRESS(065 048 036 024 018)	HS40
65C69	CONTACTOR-COMPR(036 024 018)	HS40
67K18	VALVE-SERVICE(024 018)	HS40
68J10	VALVE-SERVICE(065 048 036 024 018)	HS40
68J12	VALVE-SERVICE(036)	HS40
68J13	VALVE-SERVICE(048)	HS40
68J23	MOTOR-FAN(036)	HS40
68J25	MOTOR-FAN(065 048)	HS40
68J36	CONTACTOR-COMPR(036 024 018)	HS40
68J97	MOTOR-FAN(036 024 018)	HS40
80K48	CAPACITOR(024 018)	HS40
86H31	SWITCH-HI PRESS(065 048 036 024 018)	HS40
88M12	VALVE-SERVICE(065)	HS40
89M94	CAPACITOR(036)	HS40
95M55	CONTACTOR(036 024 018)	HS40
95M57	CONTACTOR(065 048 036)	HS40
	HSXA12	
38393	CONTACTOR(060 048 036)	HSXA12
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	HSXA12
15M06	COMPRESSOR(018)	HSXA12
15M10	COMPRESSOR(048)	HSXA12
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	HSXA12

CAT#	DESCRIPTION	Unit
15M36	HARNES-COMP(060 048 036)	HSXA12
15M95	COMPRESSOR(024)	HSXA12
15M96	COMPRESSOR(030)	HSXA12
15M97	COMPRESSOR(036)	HSXA12
15M98	COMPRESSOR(042)	HSXA12
16M00	COMPRESSOR(060)	HSXA12
21J29	CAPACITOR-START(060)	HSXA12
31L19	MOTOR-FAN(036 030 024 018)	HSXA12
37L74	MOTOR-FAN(048)	HSXA12
38M34	COMPRESSOR(060)	HSXA12
39H89	CAPACITOR(060 048)	HSXA12
39L20	VALVE-SERVICE(060)	HSXA12
44A93	CAPACITOR-START(018)	HSXA12
47A60	CAPACITOR-START(048 042 036 030 024)	HSXA12
47J35	CONTROL-TIMED OFF(060 048 042 036 030 024 018)	HSXA12
60L57	SWITCH-LO PRESS(060 048 042 036 030 024 018)	HSXA12
65C69	CONTACTOR-COMPR(042 036 030 024 018)	HSXA12
67K18	VALVE-SERVICE(018)	HSXA12
68J10	VALVE-SERVICE(060 048 042 036 030 024 018)	HSXA12
68J12	VALVE-SERVICE(036 030 024)	HSXA12
68J13	VALVE-SERVICE(048 042)	HSXA12
68J23	MOTOR-FAN(036)	HSXA12
68J24	MOTOR-FAN(060 042)	HSXA12
68J25	MOTOR-FAN(060 048)	HSXA12
69M03	COMPRESSOR(036)	HSXA12
69M04	COMPRESSOR(036)	HSXA12
69M05	COMPRESSOR(036)	HSXA12
69M06	COMPRESSOR(060)	HSXA12
69M07	COMPRESSOR(060)	HSXA12
69M35	COMPRESSOR(048)	HSXA12
69M36	COMPRESSOR(048)	HSXA12
69M37	COMPRESSOR(048)	HSXA12
69M64	CAPACITOR-FAN&RUN(036 030)	HSXA12
69M69	CAPACITOR-FAN&RUN(042)	HSXA12
69M70	CAPACITOR-FAN&RUN(060)	HSXA12
80K48	CAPACITOR(024 018)	HSXA12
97H16	CAPACITOR-RUN(048)	HSXA12
	HSXA15	
58327	RELAY-POTENTIAL(048 042 036 030 024)	HSXA15
66463	RELAY-POTENTIAL(060)	HSXA15
15M35	HARNES-COMP(060 048 042 036 030 024)	HSXA15
15M95	COMPRESSOR(024)	HSXA15
15M96	COMPRESSOR(030)	HSXA15
15M97	COMPRESSOR(036)	HSXA15
15M98	COMPRESSOR(042)	HSXA15
15M99	COMPRESSOR(048)	HSXA15
16M00	COMPRESSOR(060)	HSXA15

CAT#	DESCRIPTION	Unit
27H32	MOTOR-FAN(060)	HSXA15
31L94	SWITCH-HI PRESS(060 048 042 036 030 024)	HSXA15
37L51	VALVE-EXPANSION(036 030 024)	HSXA15
39L20	VALVE-SERVICE(060)	HSXA15
39L72	VALVE-EXPANSION(060 048 042)	HSXA15
47A60	CAPACITOR-START(060 048 042 036 030 024)	HSXA15
47J27	CONTROL-TIMED OFF(060 048 042 036 030 024)	HSXA15
49K52	CAPACITOR-FAN&RUN(060)	HSXA15
53H25	CAPACITOR-FAN&RUN(024)	HSXA15
60L57	SWITCH-LO PRESS(060 048 042 036 030 024)	HSXA15
63K87	CAPACITOR-FAN&RUN(036 030)	HSXA15
65C69	CONTACTOR-COMPR(042 036 030 024)	HSXA15
65G60	MOTOR-FAN(042 036 030 024)	HSXA15
67K69	CAPACITOR-FAN&RUN(042)	HSXA15
67K70	CAPACITOR-FAN&RUN(048)	HSXA15
68J10	VALVE-SERVICE(060 048 042 036 030 024)	HSXA15
68J12	VALVE-SERVICE(036 030 024)	HSXA15
68J13	VALVE-SERVICE(048 042)	HSXA15
72H36	MOTOR-FAN(048)	HSXA15
	HSXA16	
58327	RELAY-POTENTIAL(060 048 036)	HSXA16
15M35	HARNES-COMP(060 048 036 024)	HSXA16
21J29	CAPACITOR-START(060 048)	HSXA16
38M40	COMPRESSOR(048)	HSXA16
38M41	COMPRESSOR(060)	HSXA16
38M43	CAPACITOR-FAN&RUN(048)	HSXA16
38M48	HARNES-COMP(060 048 036 024)	HSXA16
47A60	CAPACITOR-START(036 024)	HSXA16
49M43	VALVE-SERVICE(060 048 036 024)	HSXA16
49M49	SWITCH-LO PRESS(060 048 036 024)	HSXA16
49M50	SWITCH-HI PRESS(060 048 036 024)	HSXA16
63K86	CAPACITOR-FAN&RUN(024)	HSXA16
65C69	CONTACTOR-COMPR(036 024)	HSXA16
65G60	MOTOR-FAN(036 024)	HSXA16
69M43	COMPRESSOR(024)	HSXA16
72H36	MOTOR-FAN(060 048)	HSXA16
79M98	RELAY-POTENTIAL(024)	HSXA16
80K48	CAPACITOR(036)	HSXA16
88M11	VALVE-SERVICE(048 036 024)	HSXA16
88M12	VALVE-SERVICE(060)	HSXA16
92M47	COMPRESSOR(036)	HSXA16
95M02	CAPACITOR-FAN&RUN(060)	HSXA16
	HSXA19	
58327	RELAY-POTENTIAL(048 038 036 024)	HSXA19
15M35	HARNES-COMP(060 048 038 036 024)	HSXA19

CAT#	DESCRIPTION	Unit
21J29	CAPACITOR-START(060 048)	HSXA19
38M40	COMPRESSOR(048)	HSXA19
38M41	COMPRESSOR(060)	HSXA19
38M42	CAPACITOR-FAN&RUN(060)	HSXA19
38M43	CAPACITOR-FAN&RUN(048)	HSXA19
38M48	HARNESS-COMP(060 048 038 036 024)	HSXA19
39L20	VALVE-SERVICE(060)	HSXA19
47A60	CAPACITOR-START(038 036 024)	HSXA19
49M43	VALVE-SERVICE(060 048 038 036 024)	HSXA19
49M49	SWITCH-LO PRESS(060 048 038 036 024)	HSXA19
49M50	SWITCH-HI PRESS(060 048 038 036 024)	HSXA19
51M01	MOTOR-FAN(038)	HSXA19
56L61	THERMOSTAT(038)	HSXA19
63K86	CAPACITOR-FAN&RUN(024)	HSXA19
65C69	CONTACTOR-COMPR(038 036 024)	HSXA19
65G60	MOTOR-FAN(036 024)	HSXA19
68J98	VALVE-SERVICE(048 038 036 024)	HSXA19
69M43	COMPRESSOR(024)	HSXA19
69M50	MOTOR-FAN(038)	HSXA19
72H36	MOTOR-FAN(060 048)	HSXA19
74H01	RELAY-POTENTIAL(060)	HSXA19
79M98	RELAY-POTENTIAL(024)	HSXA19
80K48	CAPACITOR(038 036)	HSXA19
92M47	COMPRESSOR(036)	HSXA19
95M02	CAPACITOR-FAN&RUN(060)	HSXA19
98M63	COMPRESSOR(038 036)	HSXA19
	HSXB15	
58327	RELAY-POTENTIAL(048 042 036 030 024)	HSXB15
66463	RELAY-POTENTIAL(060)	HSXB15
15M35	HARNESS-COMP(060 048 042 036 030 024)	HSXB15
15M96	COMPRESSOR(030)	HSXB15
15M97	COMPRESSOR(036)	HSXB15
15M98	COMPRESSOR(042)	HSXB15
15M99	COMPRESSOR(048)	HSXB15
16M00	COMPRESSOR(060)	HSXB15
27H34	MOTOR-FAN(024)	HSXB15
39L20	VALVE-SERVICE(060)	HSXB15
47A60	CAPACITOR-START(060 048 042 036 030 024)	HSXB15
49K52	CAPACITOR-FAN&RUN(060)	HSXB15
49M43	VALVE-SERVICE(060 048 042 036 030 024)	HSXB15
49M49	SWITCH-LO PRESS(060 048 042 036 030 024)	HSXB15
49M50	SWITCH-HI PRESS(060 048 042 036 030 024)	HSXB15
49M83	CAPACITOR-FAN&RUN(024)	HSXB15
49M86	COMPRESSOR(024)	HSXB15
65C69	CONTACTOR-COMPR(042 036 030 024)	HSXB15
65G60	MOTOR-FAN(042 036 030)	HSXB15
67K70	CAPACITOR-FAN&RUN(048)	HSXB15

CAT#	DESCRIPTION	Unit
68J10	VALVE-SERVICE(060 048 042 036 030 024)	HSXB15
68J12	VALVE-SERVICE(036 030 024)	HSXB15
68J13	VALVE-SERVICE(048 042)	HSXB15
69M64	CAPACITOR-FAN&RUN(036 030)	HSXB15
69M66	CAPACITOR-FAN&RUN(042)	HSXB15
72H36	MOTOR-FAN(060 048)	HSXB15
	XC13	
58327	RELAY-POTENTIAL(060 048 042 036 030 024 018)	XC13
10W32	VALVE-SERVICE(060 048 042 036 030 024 018)	XC13
10W33	VALVE-SERVICE(030 024 018)	XC13
10W35	SWITCH-HI PRESS(030)	XC13
15M35	HARNESS-COMP(060 048 042 036 030 024 018)	XC13
21W81	CAPACITOR-FAN&RUN(060)	XC13
22W71	VALVE-SERVICE(048 042 036)	XC13
31W73	VALVE-SERVICE(036)	XC13
31W74	VALVE-SERVICE(060)	XC13
42W41	SWITCH-HI PRESS(060 048 042 036 024 018)	XC13
43W49	MOTOR-FAN(036 030)	XC13
43W86	COMPRESSOR(036)	XC13
43W87	COMPRESSOR(060)	XC13
44W62	HARNESS-COMP(060 048 042 036 030 024 018)	XC13
47A60	CAPACITOR-START(018)	XC13
47W86	MOTOR-FAN(024 018)	XC13
49W86	MOTOR-FAN(060 042)	XC13
52W10	COMPRESSOR(024)	XC13
52W11	COMPRESSOR(048)	XC13
52W33	COMPRESSOR(030)	XC13
52W44	COMPRESSOR(042)	XC13
53W14	COMPRESSOR(018)	XC13
63A06	CAPACITOR-START(060 048 042 036 030 024)	XC13
85M57	SWITCH-HI PRESS(036)	XC13
88M12	VALVE-SERVICE(060)	XC13
89M71	CAPACITOR-DUAL(018)	XC13
89M74	CAPACITOR-FAN&RUN(024 018)	XC13
89M80	CAPACITOR-FAN&RUN(042 036)	XC13
89M83	CAPACITOR-FAN&RUN(042)	XC13
89M90	CAPACITOR-DUAL(048)	XC13
89M92	CAPACITOR-FAN&RUN(060)	XC13
95M54	THERMOSTAT(060)	XC13
95M55	CONTACTOR(042 036 030 024 018)	XC13
95M56	CONTACTOR(060 048)	XC13
97M49	MOTOR-FAN(036 030)	XC13
97M50	MOTOR-FAN(030 024 018)	XC13
97M51	MOTOR-FAN(060 048 042)	XC13
97M52	COMPRESSOR(018)	XC13
97M53	COMPRESSOR(024)	XC13
97M54	COMPRESSOR(030)	XC13

CAT#	DESCRIPTION	Unit
97M55	COMPRESSOR(036)	XC13
97M56	COMPRESSOR(042)	XC13
97M57	COMPRESSOR(048)	XC13
97M58	COMPRESSOR(060)	XC13
98M36	MOTOR-FAN(048 042)	XC13
99M81	CAPACITOR-FAN&RUN(048)	XC13
9M59	THERMOSTAT(060 048 042 036 030 024 018)	XC13
	XC14	
58327	RELAY-POTENTIAL(060 048 047 042 041 036 030 024 018)	XC14
10W32	VALVE-SERVICE(060 048 047 042 041 036 030 024 018)	XC14
10W33	VALVE-SERVICE(030 024 018)	XC14
10W35	SWITCH-HI PRESS(060 048 042 041 018)	XC14
15M35	HARNESS-COMP(060 048 047 042 041 036 030 024 018)	XC14
15W10	COMPRESSOR(042)	XC14
22W71	VALVE-SERVICE(048 036)	XC14
27W16	COMPRESSOR(030)	XC14
29W60	MOTOR-FAN(047)	XC14
31W73	VALVE-SERVICE(047 041)	XC14
42W41	SWITCH-HI PRESS(060 048 047 042 041 036 030 024)	XC14
47A60	CAPACITOR-START(018)	XC14
47W86	MOTOR-FAN(018)	XC14
49W86	MOTOR-FAN(048 042 041)	XC14
63A06	CAPACITOR-START(060 048 047 042 041 036 030 024)	XC14
68W60	COMPRESSOR(047)	XC14
88M11	VALVE-SERVICE(042)	XC14
88M12	VALVE-SERVICE(060)	XC14
89M71	CAPACITOR-DUAL(018)	XC14
89M74	CAPACITOR-FAN&RUN(024)	XC14
89M80	CAPACITOR-FAN&RUN(036)	XC14
89M83	CAPACITOR-FAN&RUN(047 042 041)	XC14
89M90	CAPACITOR-DUAL(060 048)	XC14
95M54	THERMOSTAT(060 048 047 041)	XC14
95M55	CONTACTOR(036 030 024 018)	XC14
95M56	CONTACTOR(060 048 047 042 041)	XC14
97M50	MOTOR-FAN(024 018)	XC14
97M51	MOTOR-FAN(048 042)	XC14
97M52	COMPRESSOR(018)	XC14
97M53	COMPRESSOR(024)	XC14
97M55	COMPRESSOR(041)	XC14
97M57	COMPRESSOR(048)	XC14
98M36	MOTOR-FAN(036 030 024)	XC14
98M71	MOTOR-FAN(060)	XC14
99M89	COMPRESSOR(036)	XC14
99M90	COMPRESSOR(060)	XC14
9M59	THERMOSTAT(060 048 047 042 041 036 030 024 018)	XC14
	XC15	

CAT#	DESCRIPTION	Unit
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	XC15
15M35	HARNESS-COMP(060 048 042 036 030 024)	XC15
15W10	COMPRESSOR(042)	XC15
18W10	MOTOR-FAN(030 024)	XC15
18W11	MOTOR-FAN(042 036)	XC15
21W12	MODULE(060 048 042 036 030 024)	XC15
24W69	MOTOR-FAN(060 048)	XC15
27W16	COMPRESSOR(030)	XC15
30W18	SWITCH-HI PRESS(042 036 030 024)	XC15
31W72	VALVE-SERVICE(036 030 024)	XC15
31W73	VALVE-SERVICE(048 042)	XC15
31W74	VALVE-SERVICE(060)	XC15
38W83	MOTOR-FAN(030 024)	XC15
38W84	MOTOR-FAN(042 036)	XC15
46W14	CAPACITOR-FAN&RUN(042 036)	XC15
56M62	THERMOSTAT(060 048 042 036 030 024)	XC15
63A06	CAPACITOR-START(060 048 042 036 030 024)	XC15
85M52	VALVE-SERVICE(060 048 042 036 030 024)	XC15
85M57	SWITCH-HI PRESS(060 048 042 036 030 024)	XC15
88M10	VALVE-SERVICE(036 030 024)	XC15
88M11	VALVE-SERVICE(048 042)	XC15
88M12	VALVE-SERVICE(060)	XC15
88M98	SWITCH-LO PRESS(060 048 042 036 030 024)	XC15
89M72	CAPACITOR-FAN&RUN(024)	XC15
89M73	CAPACITOR-DUAL(024)	XC15
89M75	CAPACITOR-FAN&RUN(030)	XC15
89M76	CAPACITOR(030)	XC15
89M78	CAPACITOR-FAN&RUN(042 036)	XC15
89M90	CAPACITOR-DUAL(048)	XC15
95M02	CAPACITOR-FAN&RUN(060)	XC15
95M54	THERMOSTAT(042 036 030 024)	XC15
95M55	CONTACTOR(042 036 030 024)	XC15
95M56	CONTACTOR(060 048)	XC15
97M53	COMPRESSOR(024)	XC15
97M54	COMPRESSOR(030)	XC15
97M55	COMPRESSOR(036)	XC15
97M56	COMPRESSOR(042)	XC15
97M57	COMPRESSOR(048)	XC15
99M90	COMPRESSOR(060)	XC15
	XC16	
58327	RELAY-POTENTIAL(048 036 024)	XC16
10W32	VALVE-SERVICE(060 048 036 024)	XC16
10W33	VALVE-SERVICE(024)	XC16
10W35	SWITCH-HI PRESS(036)	XC16
15M35	HARNESS-COMP(060 048 036 024)	XC16
21J29	CAPACITOR-START(060 048)	XC16

CAT#	DESCRIPTION	Unit
22W71	VALVE-SERVICE(048 036)	XC16
38M48	HARNESS-COMP(060 048 036 024)	XC16
42W41	SWITCH-HI PRESS(024)	XC16
47A60	CAPACITOR-START(036 024)	XC16
74H01	RELAY-POTENTIAL(060)	XC16
85M57	SWITCH-HI PRESS(060 048)	XC16
88M12	VALVE-SERVICE(060)	XC16
88M98	SWITCH-LO PRESS(060 048 036 024)	XC16
89M74	CAPACITOR-FAN&RUN(024)	XC16
89M83	CAPACITOR-FAN&RUN(048)	XC16
89M92	CAPACITOR-FAN&RUN(060)	XC16
92M46	COMPRESSOR(024)	XC16
92M47	COMPRESSOR(036)	XC16
92M48	COMPRESSOR(048)	XC16
92M49	COMPRESSOR(060)	XC16
95M54	THERMOSTAT(060 048)	XC16
95M55	CONTACTOR(036 024)	XC16
95M56	CONTACTOR(060 048)	XC16
97M50	MOTOR-FAN(024)	XC16
97M51	MOTOR-FAN(048)	XC16
98M36	MOTOR-FAN(036 024)	XC16
98M71	MOTOR-FAN(060)	XC16
	XC17	
	HEATINGANDAIRPARTS.COM	
58327	RELAY-POTENTIAL(060 048 042 036 030 024)	XC17
15M35	HARNESS-COMP(060 048 042 036 030 024)	XC17
15W10	COMPRESSOR(042)	XC17
21W81	CAPACITOR-FAN&RUN(060)	XC17
27W16	COMPRESSOR(030)	XC17
29W09	CAPACITOR-FAN&RUN(060)	XC17
31W72	VALVE-SERVICE(036 030 024)	XC17
31W73	VALVE-SERVICE(048 042)	XC17
31W74	VALVE-SERVICE(060)	XC17
46W14	CAPACITOR-FAN&RUN(042 036)	XC17
56M62	THERMOSTAT(060 048 042 036 030 024)	XC17
63A06	CAPACITOR-START(060 048 042 036 030 024)	XC17
63W59	SENSOR HARNESS(060 048 042 036 030 024)	XC17
65W71	KIT I-COMFORT CONTROL(060 048 042 036 030 024)	XC17
66W09	VALVE-SERVICE(030 024)	XC17
66W10	VALVE-SERVICE(048 042 036)	XC17
85M52	VALVE-SERVICE(060 048 042 036 030 024)	XC17
86M36	SWITCH-HI PRESS(060 048 042 036 030 024)	XC17
88M98	SWITCH-LO PRESS(060 048 042 036 030 024)	XC17
89M73	CAPACITOR-DUAL(024)	XC17
89M76	CAPACITOR(030)	XC17
89M80	CAPACITOR-FAN&RUN(042 036)	XC17
89M90	CAPACITOR-DUAL(048)	XC17
95M55	CONTACTOR(042 036 030 024)	XC17

CAT#	DESCRIPTION	Unit
95M56	CONTACTOR(060 048)	XC17
97M53	COMPRESSOR(024)	XC17
97M57	COMPRESSOR(048)	XC17
99M89	COMPRESSOR(036)	XC17
99M90	COMPRESSOR(060)	XC17
	XC21	
58327	RELAY-POTENTIAL(060 048 036 024)	XC21
15M35	HARNESS-COMP(060 048 036 024)	XC21
21J29	CAPACITOR-START(060 048)	XC21
31W73	VALVE-SERVICE(048 036 024)	XC21
31W74	VALVE-SERVICE(060)	XC21
38M43	CAPACITOR-FAN&RUN(048)	XC21
49M49	SWITCH-LO PRESS(060 048 036 024)	XC21
56M62	THERMOSTAT(060 048 036 024)	XC21
63K86	CAPACITOR-FAN&RUN(024)	XC21
63W59	SENSOR HARNESS(060 048 036 024)	XC21
65C69	CONTACTOR-COMPR(036 024)	XC21
66W10	VALVE-SERVICE(048 036 024)	XC21
69M70	CAPACITOR-FAN&RUN(060)	XC21
74H01	RELAY-POTENTIAL(060 024)	XC21
79M98	RELAY-POTENTIAL(036)	XC21
80K48	CAPACITOR(036)	XC21
85M48	MOTOR-FAN(060 048 036 024)	XC21
85M52	VALVE-SERVICE(060 048 036 024)	XC21
85M53	MODULE(060 048 036 024)	XC21
85M54	HARNESS-COMP(060 048 036 024)	XC21
85M57	SWITCH-HI PRESS(060 048 036 024)	XC21
86M36	SWITCH-HI PRESS(060 048 036 024)	XC21
88M11	VALVE-SERVICE(048 036 024)	XC21
88M12	VALVE-SERVICE(060)	XC21
88M98	SWITCH-LO PRESS(060 048 036 024)	XC21
89M73	CAPACITOR-DUAL(024)	XC21
89M83	CAPACITOR-FAN&RUN(048)	XC21
92M46	COMPRESSOR(024)	XC21
92M47	COMPRESSOR(036)	XC21
92M48	COMPRESSOR(048)	XC21
92M49	COMPRESSOR(060)	XC21
95M55	CONTACTOR(036 024)	XC21
95M56	CONTACTOR(060 048)	XC21
98M39	MOTOR-FAN(060 048 036 024)	XC21